

APPENDIX A
ALPHABETICAL INDEX

<i>Figure</i>	<i>Title</i>	<i>Page</i>
—	Alphabetical Index	A3

<i>Alphabetical Index</i>	<i>Page</i>
2000-Hour Maintenance and Inspection Kit	99.1
Accessory Bars Installation	96.27
Accessory Mount	96.27
Actuator Assembly	76.7
ADF Antenna	97.65
ADF Indicator	97.65
Air Conditioning System	21.3
Air Data Computer	97.5
Air Filter Assembly	71.9
Airspeed Indicator	95.1
Airspeed Indicator	95.27
Airspeed Indicator	95.35
Air Temperature Gage	95.2
Altimeter	95.1
Altimeter	95.27
Altimeter (feet/Millibar)	95.35
Altimeter (in.-Hg)	95.35
Altitude and Heading Reference System (AHRS)	97.9
Ammeter	95.2
Ammeter	95.31
Ammeter	95.40
Amplifier	90.31
Amplifier	92.58
Anchor – Five-point Harness)	25.9
Annunciator Panel – Warning Lights	95.27
Annunciator Panel – Warning Lights	95.35
Antenna – AM / FM	6.23
Antenna – COM	6.23
Antenna – COM	6.31
Antenna – COM/GPS	6.31
Antenna – COM/GPS	6.33
Antenna – DME	6.17
Antenna – FM	6.21
Antenna – FM	6.23
Antenna – FM	6.31
Antenna – FM	6.33
Antenna – FM	6.35
Antenna – FM	92.43
Antenna – Glideslope	6.43
Antenna – GPS	6.27
Antenna – GPS	90.73
Antenna – Marker Beacon	6.15
Antenna – NAV	6.37
Antenna – Transponder	6.19
Antenna – Transponder	92.41
Antenna – UHF	6.17
Antenna – UHF	92.43
Antenna – VHF	6.31
Antenna – VHF	6.33
Antenna – VHF	6.35
Arm – Heater Control Valve	21.35
Arm – Damper Bearing	65.7
Arm – Door Vent	52.8
Arm Assembly – Door Vent	52.2
Arm Assembly – Aft Monitors, ENG	92.21

<i>Alphabetical Index</i>	<i>Page</i>
Attitude Indicator	95.36
Audio Control	90.25
Audio Control	97.25
Audio Control	97.31
Audio Control	97.49
Audio Control Panel	90.9
Audio Panel	92.61
Audio Panel	92.65
Auxiliary Box Assembly	92.33
Back Rest Assembly	25.1
Balance Strip	62.1
Ball – Fuel Bladder Vent	28.1
Ball – Fuel Bladder Vent	28.1
Ball – Ground Handling	9.9
Ball Assembly – Swashplate	62.9
Ballast – HID Landing Lights	33.7
Ballast Plates	8.1
Battery – 9-volt, Alkaline	96.11
Battery – Lithium-Ion	96.9
Battery – RG24-20	96.1
Battery – RG-325	96.3
Battery Tray	96.1
Battery Tray	96.3
Bearing – Coning	62.3
Bearing – Teeter	62.3
Bearing Block Set	67.29
Bellcrank	67.33
Bellcrank	67.5
Bellcrank Assembly	65.9
Bellcrank Assembly	67.35
Bellcrank Assembly	67.37
Bellcrank Assembly	67.39
Bellcrank Assembly	76.7
Belleville Washer	67.22
Belleville Washer	92.53
Bellmouth	71.17
Bezel	33.7
Bladder	28.5
Bladder	28.15
Bladder Assembly	28.1
Blade Assembly	62.1
Blade Assembly	64.1
Blind Encoder	97.31
Blind Encoder	97.63
Block – Hardpoint	10.5
Blower – Radio Rack	90.15
Blower Assembly – Air Conditioning	21.11
Bolt – Main Rotor Hub	62.3
Boot – Cyclic	67.1
Boot – MR Spindle, Gray	62.1
Boot – MR Spindle, Black	62.1
Boot Assembly – Collective	6.1
Bow Assembly – Windscreen	52.18
Bowl Assembly – MRGB Oil Filter	63.13
Brace – Heated Pitot	95.51
Brace – Autopilot	22.1
Brace – Autopilot	22.5

<i>Alphabetical Index</i>	<i>Page</i>
Bracket – ELT	25.23
Bracket – Aspen PFD	95.17
Bracket – Aspen PFD & MFD	95.21
Bracket – Droop Stops	62.3
Bracket – Fire Extinguisher	25.21
Bracket – Hall Effect Sender	29.1
Bracket – Map Light/ Spot Light	33.9
Bracket – Rotor Brake	21.25
Bracket – Spidertracks	97.69
Bracket Assembly – IBF Gage	71.12
Bracket Assembly – Magnetometer	97.13
Bracket Assembly – Rotor Brake	63.9
Bubble Cover	10.3
Buckle Assembly	25.3
Buckle Assembly	25.5
Bus Bar	96.21
Cabin Heat System	21.31
Cable – ELT Antenna	25.23
Cable Assembly – Battery	96.1
Cable Assembly – Battery	96.3
Cable Assembly – Battery	96.9
Cage Assembly – Air Filter	71.9
Cage Assembly – IBF	71.11
Cage Assembly – IBF	71.15
Call Letters Plate	95.27
Call Letters Plate	95.36
Camera – ENG	92.5
Camera – ENG	92.7
Camera – ENG	92.9
Camera – ENG	92.27
Cap – Aux Fuel Cell	28.16
Cap – Fuel Cell	28.1
Cap – Landing Gear	32.1
Cargo Hook	25.27
Carpet Assembly	25.15
Cartridge – Main Rotor Gearbox	63.5
Case Assembly – Battery	96.11
Charger – NiMH Battery (110V)	18.1
Check Valve	79.9
Chin	52.18
Chip Detector	63.4
Chip Detector	65.9
Chronometer Assembly	95.40
Circuit Breaker Panel – ENG	92.17
Circuit Breaker Panel – Police	90.55
Circuit Breaker Panel – Standard	96.21
Clear Coat – Touch Up Paint	12.4
Clevis – Aft Servo	29.11
Clevis – Forward Servo	29.7
Clock Assembly – Analog	95.2
Clock Assembly – Analog	95.27
Clock Assembly – Digital	95.40
Clutch Assembly	63.1
Combiner	6.39
Compass Assembly – Vertical Card	95.45
Compass Assembly	95.45
Compressor Assembly	21.3

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Computer	90.69	Cyclic Stick Assembly	22.1	Fan	90.51
Computer	90.70	Cylinder Assembly	32.7	Fan	97.41
Computer	90.75	Dam – Static Port	95.52	Fan	97.45
Condenser	21.7	Damper Assembly	65.7	Fan Assembly	21.7
Configuration Module	95.21	Deflector	53.31	Fan Assembly	25.31
Connecting Rod	67.21	Desiccant Bag	21.8	Fan Assembly	92.45
Console Assembly	90.79	Deviation Placard – Vertical Card		Fanwheel Assembly	65.1
Console Assembly	95.43	Compass	95.45	Filler-Vent Plug	65.9
Console Assembly	97.1	Diplexer	6.39	Filter – Radio	6.29
Control – Fuel Cutoff	76.1	Diplexer	6.43	Filter – Radio	6.31
Control – Fuel Valve	28.9	Diplexer	97.1	Filter – Inducer Bleed System	75.1
Control – Heater	21.31	Dipstick	79.5	Filter – AC	21.8
Control – Throttle	76.1	Directional Gyro	95.36	Filter – Hydraulic Reservoir	29.3
Control – Cargo Hook	25.40	Display – PFD & MFD	95.5	Filter Assembly – Inlet Barrier Filter	71.11
Control – Cargo Hook	25.35	Display – PFD & MFD	95.7	Filter Assembly – Inlet Barrier Filter	71.15
Control – Power Turbine Governor	76.5	Display – PFD & MFD	95.9	Filter Element – MRGB Oil System . .	63.13
Control Assembly – Cabin Air	21.1	Distribution Amp	95.57	Fire Extinguisher	25.21
Control Assembly – Searchlight	90.39	Door – Engine Cowling	53.1	Flight Control Computer	22.7
Control Panel	22.1	Door – Aft Fuselage	6.5	Flir Electronics Control Unit	90.23
Converter – Power	28.28	Door – Vent	52.2	Float Tube Assembly – Six Chamber	32.17
Converter – Power	90.55	Door – Vent	52.7	FM Transceiver	92.49
Converter	90.41	Door Assembly – Baggage	52.13	Foam Tape	6.13
Converter	92.75	Door Assembly – Cabin	52.7	Frame Weldment	53.7
Cord	32.11	Door Assembly – Cabin	52.1	Frame Weldment	53.11
Cotter Pin – Cargo Hook	25.27	Drain – AC Evaporator	21.13	Frame Weldment	53.13
Cotter Pin – Ground Handling Wheel	9.2	Drain Assembly – Fuel Tank	28.7	Fuel Quantity Gage	95.39
Cotter Pin – Ground Handling Wheel	9.6	Drain Plug Assembly – Float		Fuel Quantity Sender	28.1
Cotter Pin – Main Rotor Hub	62.3	Landing Gear	32.11	Fuel Sample Tube Installation Kit . . .	6.5
Counter Weight – Swashplate	62.5	Droop Stop	62.3	Fuel Sender	28.16
Counter Weight – Swashplate	62.6	Dual Audio Control	90.13	Fuse Holder	25.32
Cover – Antenna Pad	53.17	Dual Audio Control	97.51	Fuse Holder	96.9
Cover – Antenna Pad	53.21	Dual Tachometer	95.1	Fuseblock – EMU	96.21
Cover – Battery Compartment	71.23	Dual Tachometer	95.27	Fuseblock – Hourmeters	96.21
Cover – Bose Headset Jacks	97.59	Duct Assembly – AC	21.21	Gage – Outside Air Temperature . . .	95.2
Cover – Bose Headset Jacks	97.61	Duct Assembly – AC	21.25	Gage – Outside Air Temperature . . .	95.31
Cover – Camera Mount	90.17	DVR	90.41	Gage – Outside Air Temperature . . .	96.23
Cover – Chin	6.9	DVR/Monitor	92.73	Gage – Inlet Barrier Filter	71.12
Cover – Five-point Harness	25.11	Elastic Cord Assembly	67.35	Gas Spring	52.5
Cover – Pedals	67.31	ELT Transmitter	25.23	Gas Spring	52.11
Cover – Pop-out Float	32.11	EMI Filter Assembly	21.8	Gas Spring	90.43
Cover – Seat Belt	25.5	Empennage Assembly	53.25	Gasket – Aux Fuel Quantity Sender	28.16
Cover – TRGB Flex Plate	53.17	Empennage Ballast Installation Kit . .	8.1	Gasket – Aux Strobe	90.77
Cover – TRGB Flex Plate	53.21	Enclosure Assy. – Radar Altimeter . .	97.15	Gasket – Avionics Panel Switches . .	97.25
Cover – Optional Instrument	95.36	Enclosure Assy. – Radar Altimeter . .	97.17	Gasket – Fuel Quantity Sender	28.1
Cover Assembly – Cyclic	67.1	Enclosure Assembly – Aux Tank	28.15	Gasket – Navigation Lights	33.3
Cover Assembly – Spotlight	33.13	Engine	71.1	Gasket – Navigation Lights	33.4
Cowling	6.5	Engine Cowling Assembly	53.1	Gasket – Strobe	33.1
Cowling	53.5	Engine Monitoring Unit	71.25	Gasket – TRGB Chip Detector	65.10
Cradle – Thermal Expansion Valve . .	21.11	Engine Oil	12.1	Gasket – TRGB Filler/Vent Plug	65.10
Cradle Assembly – Blade Support . . .	10.7	Engine Torque Meter	95.1	Gasket – TRGB Sight Gage	65.10
Cradle Assembly – Helium Cylinder	32.7	Engine Torque Meter	95.27	Gearmotor – Search Light	90.33
Cradle Assembly – Helium Cylinder	32.15	Engine/Rotor Tachometer	95.35	Generator Control Unit	71.23
Cross Tube (aft)	32.1	Evaporator Assembly	21.11	Gimbal – FLIR Camera	90.19
Cross Tube (forward)	32.1	Exhaust Weldment	71.19	Gimbal Assembly – Search Light . . .	90.33
Cyclic Box Assembly	67.1	Fairing	90.17	GPS Antenna	92.39
Cyclic Control Assembly	67.1	Fairing	92.29	GPS Transceiver	97.39
Cyclic Friction Assembly	67.19	Fairing Assembly – Aft	32.5	GPS Transceiver	97.39

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
GPS Transceiver	97.39	Hourmeter – Collective Activated . .	96.23	Lubricant	63.1
Grip – Collective	25.44	Hourmeter – Engine	96.23	Lubricant	79.7
Grip – Collective	67.21	Hub	64.1	Lug	71.1
Grip – Cyclic	25.43	Hub Assembly	62.3	Magnet	63.4
Grip – Cyclic	67.11	Hub Assembly	64.1	Magnetometer	97.13
Grip – Cyclic	67.12	Hydraulic System Reservoir Assy . .	29.3	Main Rotor Blade and Spindle Assembly – Extended Tab	62.1
Grip – Cyclic	67.15	Ignition Exciter Box	71.5	Main Rotor Blade Tie-Down	10.1
Grip – Cyclic	67.16	Inertial Monitoring Unit Sensor	90.73	Main Rotor Blade Tie-Down	10.1
Grip – Ground Handling Wheel	9.1	Indicator – Rotor Brake	95.28	Main Rotor Blade Tie-Down Installation Tool	10.1
Grip – Ground Handling Wheel	9.5	Indicator – Rotor Brake	95.39	Main Rotor Gearbox Assembly	63.3
Grip Assembly – Co-Pilot	67.16	Indicator	95.2	Main Rotor Gearbox Sub-Assembly	63.7
Grip Assembly – Co-Pilot	67.12	Indicator Assembly	97.15	Maintenance Record – Binder	99.3
Grip Assembly – Cyclic	22.2	Indicator Assembly	97.17	Maintenance Record – Component Cards	99.3
Grip Assembly – Cyclic	25.39	Inner Wire – Fuel Cutoff	76.2	Maintenance Record – Insert	99.3
Grip Assembly – Cyclic	25.43	Instrument Cluster	95.1	Maintenance Record – Tabs	99.3
Grip Assembly – Cyclic	67.1	Instrument Cluster	95.31	Mast Assembly	63.7
Grip Assembly – Cyclic	67.11	Instrument Cluster	95.39	Mast Fairing Assembly	53.3
Grip Assembly – Cyclic	67.12	Interrupter	62.6	MGT Meter	25.35
Grip Weldment	67.11	Interrupter	18.3	Mirror	25.31
Ground Handling Wheel Assembly	9.1	Jackshaft Weldment Assembly	67.25	MT106-2 Fuel Dipstick and Holder Installation Kit	6.5
Ground Handling Wheel Assembly	9.5	Jar Assembly	28.19	Muffler Assembly	21.35
Guard – Aux Fuel Tank	28.16	Journal-Bearing	62.3	N1 Meter	95.39
Guard – Battery Cover	96.1	Journal-Bearing	62.3	Name Plate	95.51
Guard – Battery Cover	96.3	Key – Blank	52.1	NAV Antenna	6.39
Guard – Battery Minder	96.32	Key – Duplicate	52.1	Oil – PAG	12.1
Guard – Fuel Tank	28.2	Key – Duplicate	52.13	Oil – PAG	21.11
Guard – Hydraulic Switch	22.2	Key – Duplicate	95.3	Oil – Type “A” ATF	12.1
Guard – Hydraulic Switch	67.11	Key – Duplicate	95.28	Oil	62.1
Guard – Rotor Brake	63.9	Key – Duplicate	95.39	Oil	79.5
Hall Effect Sensor	63.3	Keyboard Assembly	90.69	Oil Cooler	63.15
Hanger	65.3	Keyboard Assembly	90.75	Oil Cooler Assembly	79.7
Hanger	65.5	Landing Gear Assembly – Extended Gear	32.1	Oil Filter	63.13
Hardpoint Hinge Assembly	10.5	Landing Gear Assembly – Pop-Out Floats	32.11	Oil Plug/Chip Detector	71.5
Harness Assembly – Air Filter Switch	71.9	Landing Gear Assembly	32.1	Oil Pressure Gage	95.39
Harness Assembly – Air Filter Switch	71.11	Laptop Assembly	92.31	Oil Pressure Switch	63.3
Harness Assembly – COM switch	97.54	LED	21.21	Oil Pressure Switch	71.5
Harness Assembly – Console	95.27	LED	25.23	Oil Tank Assembly	79.5
Harness Assembly – E.N.G.	92.79	LED	33.13	Oil Temp Sender	79.5
Harness Assembly – Engine	71.3	LED Assembly	33.9	Oil Temperature Gage	95.39
Harness Assembly – External Load	25.27	LED Strip	25.35	PA/Siren Control	90.31
Harness Assembly – Fuel Sender	28.1	License Holder	25.19	Panel – Annunciator	95.1
Harness Assembly – Fuel Sender/ Fuel Pump	28.16	Load Meter	25.35	Pedal – Pilot Side	67.29
Harness Assembly – TRGB Chip Detector	65.9	Lock Set	52.1	Pedal Assembly – Co-Pilot	67.29
Oil Filter Head Assembly	63.13	Lock Set	52.13	Pedal Assembly	67.29
Holder	29.3	Louver and Bezel Assembly	21.21	Pedal Assembly	67.29
Holder	33.15	Low Fuel Light	96.39	Pin – Locking	67.29
Holder	63.4	Low Fuel Switch Assembly	96.39	Pin – Locking	67.29
Holder	92.53	Low Fuel Time Delay Assembly	96.39	Pinion Gear	63.5
Horizontal Stabilizer	53.25	Low RPM Light	96.39	Pitch Control Assembly	65.9
Horn	95.40	Low RPM Warning Unit	95.33	Pitch Link Assembly	62.6
Horn Assembly	95.13	Low RPM Warning Unit	95.40	Pitot Tube	95.47
Horn Assembly	95.28	Low RPM Warning Unit	95.14	Plug Assembly – External Power	96.14
Hose Assembly – Pump Line	28.21	Low Voltage Sensor Module	96.39	Plunger	92.21
Hose Assembly – Vent/Return	28.21	Lube – O-ring	8.1	Pocket	25.19
		Lube – Petrolatum	12.1		

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Pocket	25.19	Relay – Latch	96.43	Shell Assembly – Pilot’s Side Console	97.41
Pocket Assembly	96.28	Relay – Starter/Generator	96.18	Shell Assembly – Pilot’s Side Console	97.45
Pod Antenna	92.39	Relay – Starter/Generator	96.31	Shrink Boot	71.3
Position Lights	33.4	Relay – Tachometer	96.43	Shunt	96.17
Post Assembly – Battery Minder	96.32	Relay – Landing Light	96.43	Sight Gage – Engine Oil Tank	79.5
Post Light	95.35	Relay – Tachometer Backup	96.43	Sight Gage – Hydraulic Reservoir	29.3
Potentiometer	95.31	Relay Assembly – AC	21.27	Sight Gage – MRGB	63.4
Power Cord – HID Lights	33.7	Relay Assembly – Aux Fuel	28.27	Sight Gage – TRGB	65.9
Primary Ring – Cargo Hook	25.27	Relay Assembly – External Power	96.13	Skid Extension	32.2
Probe Assembly – OAT	95.2	Relay Assembly – Warning Lights	96.35	Skid Extension	32.11
Probe Assembly – OAT	96.23	Reservoir Assembly	29.3	Skid Mirror Installation	25.31
Pulley – AC Compressor	21.4	Restraint	52.17	Skid Shoe	32.2
Pulley – Rotor Brake	63.9	Restraint	67.35	Skid Shoe	32.11
Pulley – Rotor Brake	63.10	Rotor Brake Assembly	63.3	Skid Shoe	32.11
Pulley – Rotor Brake w/AC	21.25	Router	92.67	Skid Shoe	32.12
Pump Assembly – Hydraulic	63.3	Scale	18.3	Skid Tube	32.11
Pump Assembly – Hydraulic	29.1	Scanner	92.51	Skid Tube Assembly	32.2
Pump Assembly – Aux Fuel Tank	28.15	Scissor	29.7	Slass ECU	90.37
Pump Assembly – Oil	63.4	Scissor	29.9	Snubber Assembly	21.3
Push-Pull Tube Assembly	67.5	Scoop	6.7	Solenoid Assembly	29.3
Push-Pull Tube Assembly	67.9	Scoop Assembly	6.7	Solid State Drive	92.73
Push-Pull Tube Assembly	67.27	Scroll Assembly	79.1	Speaker	90.29
Push-Pull Tube Assembly	67.33	Scuff Plate Assembly	25.15	Spidertracks Reciever	97.69
Push-Pull Tube Assembly	67.35	Scupper	28.16	Spindle Assembly	62.1
Push-Pull Tube Assembly	67.37	Searchlight Control	90.44	Splitter Assembly	92.58
Push-Pull Tube Assembly	67.39	Seat Assembly	25.1	Spotlight	21.22
Putty	71.19	Seat Back Assembly	25.1	Spotlight	33.13
R66 Baggage Door Seals Kit	52.14	Sender	63.3	Spring – Aft Access Panel	6.7
R66 Cargo Hook Installation	25.25	Sensor – Magnetic pickup	18.1	Spring – Baggage Door	52.14
R66 IPC – Binder	99.3	Sensor – Vibration Transducer	18.1	Spring – Cyclic	67.1
R66 IPC – Insert	99.3	Sensor Assembly	28.21	Spring – Cyclic	67.11
R66 IPC – Tabs	99.3	Servo Assembly	22.1	Spring – Cyclic	67.15
R66 Interior Furnishings Field Kit	99.1	Servo Assembly	22.5	Spring – Collective	67.23
R66 Maintenance Manual – Binder	99.3	Servo Assembly	29.7	Spring – Engine Air Induction	71.9
R66 Maintenance Manual – Insert	99.3	Servo Assembly	29.11	Spring – Fuel Control Unit	76.2
R66 Maintenance Manual – Tabs	99.3	Set Screw	92.21	Spring – Inlet Barrier Filter	71.12
R66 Minimum Spare Parts Kit	99.1	Shackle Assembly	32.1	Spring – Monitor	90.47
R66 POH – Binder	99.3	Shaft – Main Rotor Drive	63.3	Spring – Rotor Brake	63.9
R66 POH – Insert	99.3	Shaft Assembly – Ground Handling Wheel	9.1	Spring – Rotor Brake	63.10
R66 POH – Tabs	99.3	Shaft Assembly – Input Shaft	63.1	Spring Assembly – Baggage Door	52.13
Radar Altimeter	97.19	Shaft Assembly – Tail Rotor	65.3	Spring Pin – Bellcrank Assembly	67.37
Rain Cap	32.2	Shell Assembly – Console	95.13	Spring Pin – Cabin Heat Valve	21.35
Rain Cap	32.11	Shell Assembly – Console	95.14	Spring Pin – Collective	67.21
Rain Gutter	52.17	Shell Assembly – Console	95.27	Spring Pin – Collective Friction Knob	67.1
Rate-of-Climb Indicator	95.27	Shell Assembly – Console	95.35	Spring Pin – Door Bumper	52.5
Rate-of-Climb Indicator	95.35	Shell Assembly – Console	95.35	Spring Pin – Governor Control	76.5
Receiver – ADS-B	97.29	Shell Assembly – Pilot’s Side Console	90.51	Spring Pin – Ground Handling Wheel	9.5
Rectifier	96.5	Shell Assembly – Pilot’s Side Console	90.52	Stabilizer – Horizontal	53.25
Reflective Tape	18.3	Shell Assembly – Pilot’s Side Console	97.33	Stabilizer – Lower Vertical	53.26
Regulator – Voltage	95.14	Shell Assembly – Pilot’s Side Console	97.37	Stabilizer – Upper Vertical	53.25
Regulator – Voltage	95.40	Shell Assembly – Pilot’s Side Console	97.37	Stabilizer Assembly – Pop-out Floats	53.29
Relay – AC	21.27	Shell Assembly – Pilot’s Side Console	97.39	Stick Assembly – Collective	25.44
Relay – Aux Electrical System	90.59			Stick Assembly – Collective	67.21
Relay – Aux Electrical System	92.75			Stick Assembly – Collective	67.22
Relay – Avionics Master	96.43				
Relay – Battery	96.5				
Relay – External Power	96.18				

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Stop – Collective	67.22	Switch Assembly – Differential Pressure	71.5	Transceiver (GPS/COM/NAV)	97.37
Stop – Door Vent	52.2	Switch Assembly – Forward Talent Light	92.54	Transceiver (GPS/NAV/COM)	90.51
Stop – Main Rotor	62.3	Switch Assembly – Freeze	21.15	Transceiver (GPS/NAV/COM)	97.33
Strain Relief	95.36	Switch Assembly – High-pressure Cutout	21.3	Transceiver	90.52
Strainer – Aux Fuel	28.15	Switch Assembly – HYD OFF	22.2	Transceiver	97.1
Strainer – Fuel	28.5	Switch Assembly – HYD OFF	67.11	Transceiver (UHF)	92.1
Strainer – MRGB Oil	63.4	Switch Assembly – Landing Light	67.1	Transceiver (VHF COM)	97.25
Strip – Safety Walk	32.2	Switch Assembly – Load Cell Meter	25.36	Transceiver Assembly (VHF)	92.1
Strobe Light – Blue LED	33.1	Switch Assembly – Low Fuel	28.7	Transmit Switch Assembly	92.13
Strobe Light – Red LED	33.1	Switch Assembly – Low-pressure Cutout	21.3	Transmitter	92.37
Strobe Light – White LED	33.1	Switch Assembly – News Equipment Master	92.17	Transponder	97.21
Strobe Light Assembly – Blue LED	90.77	Switch Assembly – Oil Pressure	71.5	Transponder (Mode C)	97.25
Strobe Light Assembly – Red LED	90.77	Switch Assembly – TV Tuner Audio	92.58	Transponder (Mode C)	97.31
Strobe Light Assembly – White LED	90.77	Tachometer – Optical Photocell	18.1	Transponder (Mode C)	97.63
Strut	53.13	Tail Light Assembly – LED	33.3	Transponder (Mode S)	97.25
Strut	71.19	Tail Rotor Assembly	64.1	Transponder (Mode S)	97.31
Strut Assembly – Aft	10.7	Tail Rotor Drive Shaft Weldment – Fan	65.1	Transponder (Mode S)	97.63
Strut Assembly – Aft	32.1	Tail Rotor Gearbox Assembly	65.9	Tray – 9-volt Battery	96.11
Strut Assembly – Aft	32.11	Tail Rotor Guard	53.26	Trigger Switch	67.11
Strut Assembly – Extended Gear	32.2	Tail Skid	53.26	Trigger Switch	67.15
Strut Assembly – Forward	10.7	Tailcone Assembly	53.21	Trim String	52.18
Strut Assembly – Forward	32.1	Tailcone Assembly – E.N.G	53.17	Tube – Inner	9.1
Strut Assembly – Forward	32.11	Tailcone Assembly – Five Antenna	53.17	Tube – Inner	9.6
Strut Assembly	53.13	Tailcone Assembly – Three Antenna	53.17	Tube – Tail Rotor Guard Mount	53.25
Sun Shield – Tachometer	18.3	Tailcone Assembly – Three Antenna and Nav Antenna	53.17	Turbine Oil – HTS	12.1
Suppression Diode Assembly	96.5	Tank Assembly	28.15	Turn Coordinator	95.36
Suppression Diode Assembly	96.13	Tec Aces Analyzer and Turbo Probalancing System	18.1	TV Receiver	92.59
Suppression Diode Assembly	96.19	Telatemp – Hydraulic Pump	29.1	Upper Console Assembly	97.69
Suppression Diode Assembly	96.31	Telatemp – Hydraulic Pump	63.3	USB Port	92.45
S-VIDEO Cable	90.43	Teletemp – TRGB	65.10	USB Port	96.27
Swashplate Assembly	62.6	Temperature Probe	97.9	USB Port	96.28
Switch – Battery	97.25	Tester Assembly – Warning Lights	97.63	Valve – Cabin Heat	21.36
Switch – Calibrate	90.39	Thermal Expansion Valve (TXV)	21.11	Valve – Drain	28.5
Switch – Engine Compartment Fire	96.41	Thermostat	79.7	Valve – Fuel Shutoff	28.10
Switch – Focus	90.39	Thermostat Assembly	63.13	Valve – Pressure Topping and Relief	32.17
Switch – Foot	90.27	Thrust Washer	62.3	Valve Assembly – Cabin Heat	21.36
Switch – FREQ and CH SEL	67.15	Time Delay – Fuel Filter	95.3	V-Belt	21.4
Switch – Hourmeter	96.23	Time Delay – Low Fuel	95.3	Vent Assembly	29.3
Switch – HYD OFF	67.15	Tip Cover	62.1	Vent Weldment	28.1
Switch – Ignition	95.28	Tire	9.1	Video Router	92.69
Switch – Joystick	90.39	Tire	9.6	Voltage Regulator	95.33
Switch – Low RPM Warning	96.23	Tone Generator (ATG-410)	97.19	VOR Indicator	97.67
Switch – Light	90.1	Torque Meter	25.35	Warning Light Test Board	97.63
Switch – MRGB Oil Pressure	63.5	Torque Meter	95.35	Weight – Ballast	8.1
Switch – MRGB Temperature	63.5	Torx Bit	28.19	Window	33.9
Switch – On-Off / Start	90.39	Transceiver – Technisonic	90.7	Window	33.10
Switch – Remote Control	25.23	Transceiver (FM)	90.3	Window	52.17
Switch – Rotor Brake Light	63.3	Transceiver (GPS)	97.33	Window	52.17
Switch – Slave	90.39	Transceiver (GPS)	97.37	Windshield	52.17
Switch – Test	95.35	Transceiver (GPS/COM)	97.37	Wingbolt Assembly	90.34
Switch – Trim	22.2			Wire Harness Assembly – Engine	71.5
Switch – Video	92.69			Wire Harness Assembly – Tail Light	53.25
Switch Assembly – Anti-ice	96.37			XM Radio Receiver	97.23
Switch Assembly – Audio Panel				Yaw String	52.18
Transmit Key	67.12			Yoke – Engine Shaft	63.1
Switch Assembly – Auto Pilot Off	22.2			Yoke – Main Rotor Gear Box	63.5
				Yoke – Tail Rotor Gear Box	65.13
				Yoke – Tail Rotor Drive Shaft	65.3

<u>Alphabetical Index</u>	<u>Page</u>	<u>Alphabetical Index</u>	<u>Page</u>	<u>Alphabetical Index</u>	<u>Page</u>
Yoke Assembly – Swashplate	62.5				
Yoke Assembly – MRGB Output . . .	63.4				
Yoke Assembly – Cyclic Torque Tube	67.5				