


ROBINSON HELICOPTER COMPANY

R66 MAINTENANCE MANUAL

AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS

RTR 660 VOLUME I

Type Certificate Number R00015LA

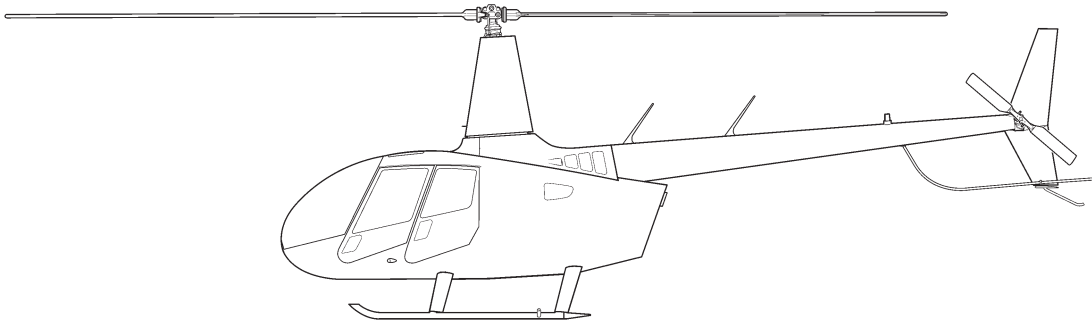

Robinson Helicopter Company
2901 Airport Drive
Torrance, California 90505-6115
UNITED STATES

Phone: (310) 539-0508
Fax: (310) 539-5198
Web: www.robinsonheli.com

OFFICE HOURS

Monday through Friday, 7:30 a.m. to 4:30 p.m., Pacific Time.
Lunch hour is 11:30 a.m. to 12:30 p.m.

HOLIDAYS

Please visit www.robinsonheli.com for a complete list of holidays and company shutdowns.

CUSTOMER SUPPORT AND ORDERS

Please visit www.robinsonheli.com for a complete service directory.

Procure parts from any R66 Dealer or Service Center,
or order directly from [RHC Customer Service](#) via email, fax, or phone.

PUBLICATIONS

Please visit www.robinsonheli.com to view our publications electronically.

SUBSCRIPTION ORDER AND RENEWAL FORM

Name: _____ Phone: _____
 Address: _____ Fax: _____
 _____ Email: _____

I Own R22 Serial Number(s): _____
 I Own R44/R44 II Serial Number(s): _____
 I Own R66 Serial Number(s): _____

Covers updates during the subscription period only. Requests for revisions produced before the subscription period are subject to an additional charge at the full subscription rate for each past year requested.

MODEL/CLASS	DESCRIPTION	PRICE/YR.	QTY.	TOTAL
R22				
A	Future updates to R22 Pilot's Operating Handbook & Safety Notices	\$15.00	_____	_____
B	Future updates to R22 Pilot's Operating Handbook & Safety Notices, R22 Service Bulletins & Service Letters	\$25.00	_____	_____
C	Future updates to R22 Pilot's Operating Handbook & Safety Notices, R22 Service Bulletins, Service Letters, & R22 Maintenance Manual/Illustrated Parts Catalog revisions	\$45.00	_____	_____
R44				
Q	Future updates to R44 Pilot's Operating Handbook & Safety Notices	\$15.00	_____	_____
R	Future updates to R44 Pilot's Operating Handbook & Safety Notices, R44 Service Bulletins & Service Letters	\$25.00	_____	_____
S	Future updates to R44 Pilot's Operating Handbook & Safety Notices, R44 Service Bulletins, Service Letters, & R44 Maintenance Manual/Illustrated Parts Catalog revisions	\$45.00	_____	_____
R44 II				
V	Future updates to R44 II Pilot's Operating Handbook & Safety Notices	\$15.00	_____	_____
W	Future updates to R44 II Pilot's Operating Handbook & Safety Notices, R44 Service Bulletins & Service Letters	\$25.00	_____	_____
X	Future updates to R44 II Pilot's Operating Handbook & Safety Notices, R44 Service Bulletins, Service Letters, & R44 Maintenance Manual/Illustrated Parts Catalog revisions	\$45.00	_____	_____
R66				
J	Future updates to R66 Pilot's Operating Handbook & Safety Notices	\$15.00	_____	_____
K	Future updates to R66 Pilot's Operating Handbook & Safety Notices, R66 Service Bulletins & Service Letters	\$25.00	_____	_____
L	Future updates to R66 Pilot's Operating Handbook & Safety Notices, R66 Service Bulletins, Service Letters, & R66 Maintenance Manual/Illustrated Parts Catalog revisions	\$45.00	_____	_____

Method of Payment: No cash or CODs. We cannot be responsible for cash sent by mail. For faster processing, order online.

- U.S. Check, Money Order, payable to Robinson Helicopter Company
- Wire Transfer (subscription will not take effect until wire transfer has been received)
- VISA, MasterCard or American Express

Credit Card Number: _____ Month / Year: _____
 Cardholder Signature: _____ Verification Code: _____
 Billing Zip: _____

CHAPTER LIST

	Introduction
Chapter 1	General
Chapter 4	Airworthiness Limitations
Chapter 5	Inspections
Chapter 6	Dimensions and Descriptions
Chapter 7	Jacking and Hoisting
Chapter 8	Weight and Balance
Chapter 9	Ground Handling
Chapter 10	Parking and Storage
Chapter 11	Placards and Markings
Chapter 12	Servicing
Chapter 18	Track and Balance
Chapter 20	Standard Practices
Chapter 21	Environment Control
Chapter 22	Autopilot
Chapter 25	Furnishings
Chapter 28	Fuel System
Chapter 29	Hydraulics
Chapter 32	Landing Gear
Chapter 33	Lights
Chapter 52	Doors and Windows
Chapter 53	Fuselage
Chapter 62	Main Rotor
Chapter 63	Main Rotor Drive System
Chapter 64	Tail Rotor
Chapter 65	Tail Rotor Drive System
Chapter 67	Flight Controls
Chapter 71	Powerplant
Chapter 75	Engine Air Systems
Chapter 76	Engine Controls
Chapter 79	Engine Oil System
Chapter 95	Instrument System
Chapter 96	Electrical System
Chapter 97	Avionics
Chapter 98	Wiring Diagrams
Chapter 99	Special Tools
Chapter 100	Revision Log

LIMITED AIRCRAFT WARRANTY

Effective R66 Serial Number 0003 & on

Robinson Helicopter Company, Inc. (hereafter referred to as RHC) warrants each new helicopter to be free from defects in material and workmanship appearing within two years from the date of delivery from the RHC factory or during the first one thousand (1000) hours of operation, whichever event occurs first; provided, the aircraft has been subjected to normal use and service. This Warranty is limited to repair or replacement on an exchange basis, as selected by RHC, of any part, which upon examination by RHC is deemed to have been defective when the aircraft left the factory. A new warranty period is not established for parts replaced under the terms of this Warranty. Such replacement parts are warranted only for the remainder of the original warranty period. This Warranty shall not apply to any helicopter or part which has been repaired or altered outside the factory, and which, in RHC's judgment, has affected the performance or reliability of the helicopter or part. This Warranty shall not apply to any helicopter or part which has been subject to corrosion, misuse, negligence or accident, nor to any parts normally replaced during routine maintenance, such as, air cleaners, skid shoes, rod end or spherical bearings, light bulbs, etc. This Warranty shall not apply to any helicopter, which has been crated for shipping unless such crating is performed by RHC. RHC is not responsible for the cost of shipping parts under the terms of this Warranty. However, RHC will credit the RHC Dealership, which sold and delivered the new helicopter to its original owner, with an allowance for labor performed by that Dealership for removing and re-installing the defective part. No credit will be issued for trouble-shooting.

RHC makes no Warranty with respect to batteries, instruments, avionics or other trade accessories since they are usually warranted separately by their respective manufacturers. New aircraft are equipped with new engines which have a separate Rolls Royce limited warranty.

ADDITIONAL WARRANTY FOR MAIN & TAIL GEARBOXES

In addition to the warranty specified above, an extended pro-rated warranty shall apply to the main and tail gearboxes for the first 2000 hours of service or three years from the date of manufacture, whichever event occurs first. During this period, if a gearbox must be overhauled due to failure of a part which was defective when it left the factory, RHC will pro-rate the cost of the overhaul by dividing the hours in service by 2000 or the months in service by thirty-six (36), whichever fraction is greater.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESS, IMPLIED, OR STATUTORY, WHETHER WRITTEN OR ORAL, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR TRADE USAGE, THE REMEDIES OF THE BUYER SHALL BE LIMITED TO THOSE PROVIDED HEREIN. IN NO EVENT WILL THE MANUFACTURER BE LIABLE FOR LOSSES RESULTING FROM LOSS OF USE OF THE HELICOPTER, COLLATERAL, CONSEQUENTIAL OR SPECIAL DAMAGES, OR ANY OTHER COSTS.

Warranty adjustments with respect to any helicopter or parts manufactured by RHC will be made only upon compliance with the following procedure:

- (1) The defective part or assembly, together with a written Warranty Claim, must be returned to RHC not later than thirty (30) days after discovery of the defect nor more than thirty (30) days after expiration of the Warranty period.*
- (2) RHC will, after inspection, determine whether the material or part was defective when it left the factory and will respond accordingly. Final determination of a Warranty adjustment rests with RHC.*

**ROBINSON HELICOPTER COMPANY, INC.
2901 Airport Drive
Torrance, California 90505 U.S.A.**

Effective 1 June 2010

Intentionally Blank

CONTENTS

INTRODUCTION

<u>Section</u>	<u>Title</u>	<u>Page</u>
—	Cover Page	i
—	Subscription Order and Renewal Form	ii
—	Chapter List	iii
—	Recommended Change Report	iv
—	Limited Aircraft Warranty	v
—	Contents	vii

CHAPTER 1 — GENERAL

<u>Section</u>	<u>Title</u>	<u>Page</u>
1-00	Introduction	1.1
1-10	R66 Maintenance Manual Revisions	1.1
1-20	R66 Maintenance Authorization	1.1
1-30	Component Overhaul Authorization	1.1
1-40	Maintenance Record	1.2
1-50	Notations	1.2
1-60	Definitions and Abbreviations	1.3
1-70	Service Directory	1.4
1-80	Assembly Instructions for R66 Helicopter Crated for Export	1.5

CHAPTER 4 — AIRWORTHINESS LIMITATIONS

<u>Section</u>	<u>Title</u>	<u>Page</u>
4-10	Airworthiness Limitations	4.1
4-20	Additional Limitations	4.3
4-21	Parts with a Recommended Time Between Overhauls (TBO)	4.3
4-22	Parts with a Recommended Replacement Time	4.3
4-23	Airframe and Engine Accessory Limits	4.4
4-24	Engine Limits	4.4
4-30	Type Certificate Data Sheet (TCDS)	4.4

CHAPTER 5 — INSPECTIONS

<u>Section</u>	<u>Title</u>	<u>Page</u>
5-10	Life-Limited Components	5.1
5-11	Time In Service Records	5.1
5-12	Retirement Procedure	5.1
5-20	Scheduled Maintenance and Inspections	5.3
5-30	Standard Inspection Criteria	5.5
5-31	Ball and Roller Bearings	5.5
5-32	Push-Pull Tubes	5.5
5-33	Rod Ends and Spherical Bearings	5.5

CONTENTS

CHAPTER 5 — INSPECTIONS (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
5-34	Elastomeric Bearings	5.7
5-35	Telatemp Indicators	5.7
5-40	Operation Checks for 100-Hour / Annual Maintenance and Inspection	5.8
5-41	Ground Check	5.8
5-42	Run-Up	5.10
5-43	Flight Check	5.11
5-45	100-Hour / Annual Maintenance and Inspection	5.13
5-50	2000-Hour Maintenance and Inspection	5.39
5-55	12-Year Maintenance and Inspection	5.39
5-60	Special Maintenance and Inspections	5.41
5-61	Tail Skid Strike	5.41
5-62	Tail Rotor Strike	5.42
5-63	Main Rotor Strike	5.43
5-64	Rotor/Engine Overspeed	5.44
5-65	Hard Landing	5.47
5-66	Dye Penetrant Inspection of F020-1 Upper Frame	5.48
5-67	Corrosion on F020-1 Upper Frame	5.48
5-68	Main Rotor Gearbox Overtemp Illumination	5.48
5-69	Main Rotor Gearbox (MR) Chip Light Illumination	5.49
5-70	Tail Rotor Gearbox (TR) Chip Light Illumination	5.49
5-71	Main Rotor Gearbox Filter Bypass Indicator	5.49
5-72	Lightning Strike	5.50

CHAPTER 6 — DIMENSIONS AND DESCRIPTIONS

<u>Section</u>	<u>Title</u>	<u>Page</u>
6-10	Version Description	6.1
6-20	Datum	6.1
6-30	Method of Measurement	6.1
6-40	External Dimensions	6.3
6-50	Baggage Compartment Dimensions	6.4
6-60	Station Diagrams	6.6
6-61	Fuselage Station (FS) Locations	6.6
6-62	Tailcone Station (TS) Locations	6.7
6-63	Water Line (WL) Station Locations	6.8
6-64	Butt Line (BL) Station Locations	6.9
6-70	Access and Inspection Panels	6.11
6-71	B526 screws and B527-08 washers	6.12
6-80	Antenna Locations	6.13

CONTENTS

CHAPTER 7 — JACKING AND HOISTING

<u>Section</u>	<u>Title</u>	<u>Page</u>
7-10	Jacking	7.1
7-20	Hoisting	7.5

CHAPTER 8 — WEIGHT AND BALANCE

<u>Section</u>	<u>Title</u>	<u>Page</u>
8-10	Leveling	8.1
8-11	Leveling for Weight and Balance	8.1
8-12	Leveling for Rigging	8.3
8-20	Weighing	8.5
8-21	Preparing Helicopter for Weighing	8.5
8-22	Weighing Procedure and Calculations	8.7
8-30	Fixed Ballast	8.11
8-31	Nose Ballast	8.11
8-32	Empennage Ballast	8.13

CHAPTER 9 — GROUND HANDLING

<u>Section</u>	<u>Title</u>	<u>Page</u>
9-10	Ground Handling	9.1
9-11	Ground Handling Wheels	9.1
9-12	Moving Helicopter on Ground Handling Wheels	9.3
9-13	Ground Handling Carts	9.3
9-14	Ground Power Start	9.3
9-20	Trailerling	9.4

CHAPTER 10 — PARKING AND STORAGE

<u>Section</u>	<u>Title</u>	<u>Page</u>
10-10	Parking	10.1
10-11	Parking in High Wind or Turbulent Air	10.1
10-12	Main Rotor Blade Tie-Downs	10.3
10-13	Main Rotor Blade Supports	10.5
10-20	Storage (Greater than 30 days)	10.6

CHAPTER 11 — PLACARDS AND MARKINGS

<u>Section</u>	<u>Title</u>	<u>Page</u>
11-10	Placard Locations	11.1
11-20	Placard Illustrations	11.3

CONTENTS

CHAPTER 12 – SERVICING

<u>Section</u>	<u>Title</u>	<u>Page</u>
12-10	Main Rotor Gearbox	12.1
12-11	Servicing	12.1
12-12	Filter Replacement	12.3
12-13	Chip Detector and Sight Gage	12.3
12-20	Tail Rotor Gearbox	12.7
12-21	Servicing	12.7
12-22	Chip Detector and Sight Gage	12.8
12-23	Drain and Flush	12.8
12-30	Hydraulic System	12.9
12-31	Servicing	12.9
12-32	Filter Replacement	12.9
12-33	Drain and Flush	12.11
12-34	Bleeding	12.12
12-40	Fuel System	12.13
12-41	Fueling	12.13
12-42	Defueling	12.13
12-50	Main Rotor Blades	12.15
12-51	Pitch Bearing Housing	12.15
12-60	Engine Oil Servicing	12.16
12-70	(Engine) Compressor Rinse and Wash	12.17
12-80	Air Conditioning System	12.18
12-81	Refrigerant Recovery and System Charging	12.18
12-82	Desiccant Replacement	12.19
12-83	Leak Detection	12.19

CHAPTER 18 – TRACK AND BALANCE

<u>Section</u>	<u>Title</u>	<u>Page</u>
18-10	Main Rotor Track and Balance	18.1
18-11	Preparing Helicopter for Main Rotor Track and Balance	18.3
18-12	Flight Checks	18.5
18-13	Track Adjustment	18.7
18-14	Balance Adjustment	18.10
18-15	Troubleshooting	18.11
18-16	Autorotational RPM Adjustment	18.12
18-20	Tail Rotor Dynamic Balance	18.17
18-21	Preparing Helicopter for Tail Rotor Dynamic Balance	18.17
18-22	Ground Checks	18.19
18-23	Balance Adjustment	18.19
18-30	Main Rotor Flight Control Rigging	18.21
18-40	Main Rotor Blade Angle Rigging	18.23
18-41	Collective Travel	18.24

CONTENTS

CHAPTER 18 — TRACK AND BALANCE (Continued)

<u>Section</u> <u>Title</u>	<u>Page</u>
18-42 Cyclic Travel	18.26
18-50 Tail Rotor Flight Control Rigging	18.28
18-51 Pedals	18.28
18-52 Forward Bellcrank	18.28
18-53 Intermediate Bellcrank	18.28
18-60 Tail Rotor Blade Rigging	18.29
18-70 Fan Shaft and Engine Shaft Balancing	18.33
18-71 Preparing Helicopter for Fan Shaft and Engine Shaft Balancing	18.33
18-72 Ground Checks	18.34

CHAPTER 20 — STANDARD PRACTICES

<u>Section</u> <u>Title</u>	<u>Page</u>
20-10 Cleaning	20.1
20-20 Lubrication	20.2
20-30 Torque Requirements	20.3
20-31 Torque Seal	20.5
20-32 Standard Torques	20.6
20-33 Special Torques	20.7
20-34 Push-Pull Tube Rod End Adjustment	20.11A
20-40 Non-Destructive Testing	20.12
20-41 Magnetic Particle Inspection	20.12
20-42 Fluorescent Penetrant Inspection	20.13
20-50 Corrosion Control	20.13
20-60 Priming and Painting	20.13
20-70 Approved Materials	20.16
20-71 Paint Strippers	20.16
20-72 Solvents and Cleaners	20.16
20-73 Fillers and Putty	20.17
20-74 Torque Stripe	20.17
20-75 Primers	20.17
20-76 Powder Coat	20.18
20-77 Paints	20.19
20-78 Lubricants	20.22
20-79 Adhesives and Sealants	20.23
20-80 Storage Limits	20.24
20-90 Miscellaneous Practices	20.25
20-91 Part Interchangeability	20.25
20-92 Thermal Fitting Parts	20.26
20-93 Replacement Component Identification (Data) Plates	20.26
20-94 Crimp Inspection	20.27

CONTENTS

CHAPTER 21 — ENVIRONMENT CONTROL

<u>Section</u>	<u>Title</u>	<u>Page</u>
21-00	Description	21.1
21-10	Ventilation	21.3
21-11	Nose Vent	21.3
21-20	Air Conditioning	21.5
21-21	Compressor Assembly	21.5
21-22	Condenser and Fan Assemblies	21.7
21-23	Evaporator Assembly	21.8
21-24	Troubleshooting	21.9
21-30	Cabin Heat	21.11
21-31	Valve Assembly and Control Rigging	21.11
21-32	Muffler Assembly	21.12
21-33	Diffuser and Tee Assemblies	21.12

CHAPTER 22 — AUTOPILOT

<u>Section</u>	<u>Title</u>	<u>Page</u>
22-00	Description	22.1
22-10	(Pitch) Servo Assembly	22.3
22-20	(Roll) Servo Assembly	22.4
22-30	Flight Control Computer	22.5
22-40	Control Panel	22.6
22-50	Cyclic Grip Assembly	22.7
22-60	Maintenance	22.8
22-61	Scheduled Maintenance and Inspections	22.8
22-62	Special Maintenance and Inspections	22.10

CHAPTER 25 — FURNISHINGS

<u>Section</u>	<u>Title</u>	<u>Page</u>
25-00	Description	25.1
25-10	Seat Harnesses	25.3
25-11	Seat Harness Removal	25.3
25-12	Seat Harness Installation	25.4
25-20	Seat Assemblies and Back Rests	25.5
25-21	Seat Assembly Removal and Installation	25.5
25-22	Back Rest Assembly Removal and Installation	25.5
25-23	Back Rest Cushion Replacement	25.5
25-30	Carpet	25.7
25-40	Insulation (Foam and Headliner)	25.8
25-50	General Maintenance	25.8
25-51	Pilot's Operating Handbook (POH) Strap Replacement	25.8
25-52	License Holder Replacement	25.9

CONTENTS

CHAPTER 25 — FURNISHINGS (Continued)

<u>Section</u> <u>Title</u>	<u>Page</u>
25-53 Map Pocket Replacement	25.9
25-60 Emergency Equipment	25.10
25-61 Emergency Locator Transmitter (ELT)	25.10
25-62 Fire Extinguisher	25.11

CHAPTER 28 — FUEL SYSTEM

<u>Section</u> <u>Title</u>	<u>Page</u>
28-00 Description	28.1
28-10 Bladder Assembly	28.3
28-11 Roll-Over Vent Valves	28.6
28-12 Sump Valve	28.6
28-20 Fuel Quantity	28.7
28-21 Fuel Quantity Sender	28.7
28-22 Low-Fuel Switch Assembly	28.8
28-30 Fuel Valve	28.11
28-31 Fuel Valve Control Rigging	28.11
28-40 Fuel Flow Check	28.12

CHAPTER 29 — HYDRAULICS

<u>Section</u> <u>Title</u>	<u>Page</u>
29-00 Description	29.1
29-10 Hydraulic Pump	29.3
29-20 Hydraulic Reservoir	29.5
29-30 Hydraulic Servos	29.6

CHAPTER 32 — LANDING GEAR

<u>Section</u> <u>Title</u>	<u>Page</u>
32-00 Description	32.1
32-10 Landing Gear Assembly	32.1
32-20 Cross Tubes	32.5
32-30 Skid Tubes	32.7
32-31 Skid Shoes	32.8
32-32 Skid Extension Replacement	32.8
32-33 Ground Handling Wheel Support Replacement	32.8
32-40 Fairing Assemblies	32.9
32-50 Maintenance	32.9
32-60 Pop-Out Floats Installation	32.11
32-61 Cylinder Assembly	32.11
32-62 Lever Rigging and Shear-Rivet Replacement	32.17
32-63 Float Installation	32.19

CONTENTS

CHAPTER 32 — LANDING GEAR (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
32-64	System Maintenance	32.22

CHAPTER 33 — LIGHTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
33-00	Description	33.1
33-10	Exterior Lights	33.1
33-11	Strobe Light(s)	33.1
33-12	Navigation Lights	33.2
33-13	Landing Lights	33.3
33-20	Interior Lights	33.3

CHAPTER 52 — DOORS AND WINDOWS

<u>Section</u>	<u>Title</u>	<u>Page</u>
52-00	Description	52.1
52-10	Door Assembly	52.1
52-11	Door Lock Replacement	52.4
52-12	Weather Seal (Door Assembly) Replacement	52.4
52-13	Gas Springs	52.7
52-20	Door Vent Replacement	52.7
52-21	Weather Seal (Door Vent) Replacement	52.7
52-22	Door Vent Hinge Replacement	52.8
52-23	Pivot Friction Adjustment	52.8
52-30	Windshield Assembly	52.11

CHAPTER 53 — FUSELAGE

<u>Section</u>	<u>Title</u>	<u>Page</u>
53-00	Description	53.1
53-10	Cabin Assembly	53.1
53-11	Repair	53.1
53-20	Fairing, Cowlings, and Panels	53.3
53-21	Engine Cowling	53.3
53-22	Mast Fairing	53.3
53-23	Tailcone Cowling	53.4
53-24	Access and Inspection Panels	53.4
53-30	Frame Assemblies	53.5
53-31	Lower Frames	53.5
53-32	Hydraulic Servo Support Frame	53.9
53-33	Upper Frame	53.10
53-40	Tailcone Assembly	53.13

CONTENTS

CHAPTER 53 — FUSELAGE (Continued)

<u>Section</u> <u>Title</u>	<u>Page</u>
53-41 Inspection and Repair	53.15
53-50 Empennage Assembly	53.17
53-51 Vertical Stabilizer	53.17
53-52 Horizontal Stabilizer	53.19
53-53 Tail Rotor Guard	53.21
53-54 Tail Skid	53.22

CHAPTER 62 — MAIN ROTOR

<u>Section</u> <u>Title</u>	<u>Page</u>
62-00 Description	62.1
62-10 Main Rotor Blades	62.1
62-11 Blade Boots	62.6
62-20 Main Rotor Hub	62.7
62-21 Bearing Replacement	62.9
62-30 Main Rotor Assembly	62.11
62-31 Journal and Shim Calculations	62.11
62-32 Adjusting Hinge Friction	62.15
62-33 Drilling Nuts and Bolts	62.17
62-40 Inspection of Main Rotor Blades	62.19
62-41 Scratches and Corrosion	62.19
62-42 Dents	62.21
62-43 Spar Damage	62.23
62-44 Root Fitting Damage	62.23
62-45 Nicks and Notches	62.23
62-46 Voids and Debonds	62.25
62-50 Repair of Main Rotor Blades	62.27
62-51 Sealing, Filling, and Fairing	62.27
62-52 Painting	62.28

CHAPTER 63 — MAIN ROTOR DRIVE SYSTEM

<u>Section</u> <u>Title</u>	<u>Page</u>
63-00 Description	63.1
63-10 Engine Shaft Weldment	63.1
63-11 (Engine Driveline) Forward Flex Plate Shimming	63.2
63-12 Clutch Assembly	63.5
63-20 Main Rotor Gearbox Assembly	63.6
63-21 Yoke and Seal Replacement	63.8
63-30 Rotor Brake	63.11
63-31 Pad Replacement	63.12
63-40 Rotor RPM	63.12

CONTENTS

CHAPTER 64 — TAIL ROTOR

<u>Section</u>	<u>Title</u>	<u>Page</u>
64-00	Description	64.1
64-10	Tail Rotor Assembly	64.1
64-11	Static Balance	64.5
64-20	Tail Rotor Blades	64.8
64-30	Tail Rotor Blade Inspection and Repair	64.9
64-31	Scratches and Corrosion	64.9
64-32	Dents	64.9
64-33	Erosion	64.11
64-34	Root Fitting Damage	64.11
64-35	Nicks and Notches	64.11
64-36	Painting	64.11
64-40	Tail Rotor Hub	64.13
64-41	Bearing Replacement	64.13
64-42	Inspection	64.13

CHAPTER 65 — TAIL ROTOR DRIVE SYSTEM

<u>Section</u>	<u>Title</u>	<u>Page</u>
65-00	Description	65.1
65-10	Tail Rotor Drive Fan Shaft	65.1
65-20	Tail Rotor Drive Shaft Assembly	65.3
65-21	Runout	65.5
65-22	Damper Assembly	65.7
65-30	(Tail Rotor Driveline) Intermediate Flex Plate Shimming	65.8
65-40	Tail Rotor Gearbox Assembly	65.10
65-41	Output Shaft Seal Replacement	65.11
65-42	Input Shaft Seal Replacement	65.12

CHAPTER 67 — FLIGHT CONTROLS

<u>Section</u>	<u>Title</u>	<u>Page</u>
67-00	Description	67.1
67-10	Cyclic Controls	67.1
67-11	Cyclic Control Assembly	67.1
67-12	Cyclic Grip Assembly	67.4
67-13	Cyclic Friction Assembly	67.6
67-20	Collective Control	67.6
67-21	Collective Stick Assembly	67.6
67-22	Collective Friction	67.8
67-30	Jackshaft and Strut Assembly	67.8
67-31	Jackshaft	67.8
67-40	Swashplate	67.9

CONTENTS

CHAPTER 67 — FLIGHT CONTROLS (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
67-41	Swashplate Tilting Friction Adjustment	67.11
67-42	Upper and Lower Scissor Assemblies	67.11
67-50	Tail Rotor Controls	67.13
67-51	Pedals	67.13
67-52	Pitch Control	67.14
67-60	Bellcranks	67.15
67-61	C317-5 or C317-9 Bellcrank	67.15
67-62	C317-7 Bellcrank	67.16
67-63	F316-1 Bellcrank	67.17
67-64	A331-4 Bellcrank	67.18
67-65	A120-5 Bellcrank	67.18

CHAPTER 71 — POWERPLANT

<u>Section</u>	<u>Title</u>	<u>Page</u>
71-00	Description	71.1
71-10	Engine	71.3
71-11	Preparing Engine for Rolls-Royce Maintenance Facility	71.6
71-12	Preparing Engine for Helicopter Installation	71.7
71-20	Induction	71.11
71-21	Air Filter Assembly	71.11
71-22	Cage Assembly	71.12
71-23	Engine Inlet Bellmouth	71.12
71-30	Exhaust Weldment	71.15
71-40	Accessories	71.16
71-41	Starter-Generator	71.16
71-42	Generator Control Unit (GCU)	71.16
71-43	Engine Monitoring Unit (EMU)	71.17

CHAPTER 75 — ENGINE AIR SYSTEMS

<u>Section</u>	<u>Title</u>	<u>Page</u>
75-00	Description	75.1
75-10	Engine Anti-Ice	75.1

CHAPTER 76 — ENGINE CONTROLS

<u>Section</u>	<u>Title</u>	<u>Page</u>
76-00	Description	76.1
76-10	Fuel Control Unit (FCU)	76.1
76-11	FCU Throttle Control Rigging	76.3
76-12	FCU Fuel Cutoff Control Rigging	76.3
76-20	Power Turbine Governor (PTG)	76.5

CONTENTS

CHAPTER 76 — ENGINE CONTROLS (Continued)

<i>Section</i>	<i>Title</i>	<i>Page</i>
76-21	PTG Control Rigging	76.5
76-22	PTG Rigging Check	76.7

CHAPTER 79 — ENGINE OIL SYSTEM

<i>Section</i>	<i>Title</i>	<i>Page</i>
79-00	Description	79.1
79-10	Scroll and Fanwheel Assemblies	79.3
79-11	Fanwheel-to-Inlet Gaps	79.3
79-20	Oil Tank Assembly	79.5
79-21	Oil Temperature Sender	79.6
79-22	Sight Gage	79.7
79-30	Engine Oil Cooler	79.7
79-40	Engine Oil Line Assemblies and Fittings	79.8

CHAPTER 95 — INSTRUMENT SYSTEM

<i>Section</i>	<i>Title</i>	<i>Page</i>
95-00	Description	95.1
95-10	Pitot-Static System	95.3
95-20	Primary Instruments	95.5
95-21	Vertical Speed Indicator	95.5
95-22	Airspeed Indicator	95.5
95-23	Engine (N2) and Rotor Dual Tachometer	95.5
95-24	Altimeter	95.7
95-25	Torquemeter	95.7
95-26	Magnetic Compass	95.7
95-30	Engine Gages	95.7
95-31	N1 Tachometer	95.7
95-32	Measure Gas (Turbine) Temperature (MGT) Gage	95.7
95-33	Engine Oil Pressure Gage	95.7
95-34	Engine Oil Temperature Gage	95.7
95-35	Fuel Quantity Gage	95.7
95-40	Additional Standard Indicating Equipment	95.8
95-41	Clock	95.8
95-42	Ammeter	95.8
95-43	Outside Air Temperature (OAT) Gage/Voltmeter	95.8
95-44	Hourmeters	95.8
95-50	Instrument Markings	95.8
95-60	Troubleshooting Guide	95.8
95-70	Garmin G500H Electronic Flight Instrument System (EFIS)	95.11
95-71	Garmin GDU 620 Display Installation	95.11

CONTENTS

CHAPTER 95 – INSTRUMENT SYSTEM (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
95-80	Aspen EFD Electronic Flight Instrument System (EFIS)	95.15
95-81	Aspen EFD500H & EFD1000H Display(s) Installation	95.15

CHAPTER 96 – ELECTRICAL SYSTEM

<u>Section</u>	<u>Title</u>	<u>Page</u>
96-00	Description	96.1
96-10	Battery	96.2
96-20	External Power	96.5
96-30	Starter and Ignition System	96.5
96-40	Lighting System	96.6
96-50	Annunciator Panel	96.6
96-60	Low Rotor RPM Warning Unit Adjustment	96.7
96-70	Audio System	96.7
96-80	Engine Monitoring Unity (EMU)	96.8
96-90	Emergency Locator Transmitter (ELT)	96.8
96-100	Electrical Load Analysis	96.9

CHAPTER 97 – AVIONICS

<u>Section</u>	<u>Title</u>	<u>Page</u>
97-10	Garmin G500H Electronic Flight Instrument System (EFIS) Installation	97.1
97-11	LRU Installation – GDU 620 Display	97.1
97-12	LRU Installation – GDC 74H Air Data Computer	97.1
97-13	LRU Installation – GRS 77H AHRS	97.3
97-14	LRU Installation – GMU 44 Magnetometer	97.4
97-15	GPS Installation	97.6
97-20	Radar Altimeter Installation	97.9
97-30	Garmin GTX 33 Transponder Installation	97.12
97-40	Garmin GDL 69A XM Receiver Installation	97.15
97-50	Avionics for R66 S/N 293, 520, 522 & Subsequent	97.17
97-51	Cyclic Grip Assembly	97.17
97-52	Aspen EFD Electronic Flight Instrument System (EFIS) Installations	97.17
97-53	Garmin GTR 225B COM Radio Installation	97.18
97-54	Garmin GDL 88 ADS-B In Receiver Installation	97.20
97-55	Garmin GTX 330 ES Transponder Installation	97.22
97-56	Garmin GTN 600/700-series GPS Installation	97.24
97-57	Electrical System Installation	97.27
97-58	Intercom System Installation	97.27

CONTENTS

CHAPTER 98 — WIRING DIAGRAMS

<i>Figure</i>	<i>Title</i>	<i>Page</i>
98-1	R66 Electrical System (F024-2 Revision P)	98.1
98-2	R66 Electrical System (F024-1 Revision J)	98.2
98-3	Air Conditioning Installation	98.3
98-4	ADF Installation	98.5
98-5	Standard Audio Installation	98.7
98-6	Dual Audio Control Installation	98.9
98-7	PA/Siren Installation	98.11
98-8	Autopilot Installation	98.13
98-9	Garmin GDU 620 Display Installation	98.15
98-10	Garmin GDC 74H Air Data Computer Installation	98.17
98-11	Garmin GRS 77 AHRS Installation	98.19
98-12	Garmin GTN 600/700-series GPS Installation (G500H EFIS)	98.21
98-13	Radar Altimeter Installation	98.23
98-14	Garmin GTX 33 Transponder Installation	98.25
98-15	Garmin GDL 69A XM Receiver Installation	98.27
98-16	Aspen EFD500H Display Installation	98.29
98-17	Aspen EFD500H & EFD1000H Displays Installation	98.31
98-18	Garmin GTR 225B COM Radio Installation	98.33
98-19	Garmin GDL 88 ADS-B In Receiver Installation	98.35
98-20	Garmin GTX 330 ES Transponder Installation	98.37
98-21	Garmin GTN 600/700-series GPS Installation (Pilot-Side Console)	98.39
98-22	Intercom System Installation (Garmin GMA 350 Audio Control)	98.41

CHAPTER 99 — SPECIAL TOOLS

<i>Section</i>	<i>Title</i>	<i>Page</i>
99-10	Special Tools	99.1
99-20	Illustrations and Tasks	99.3

CHAPTER 100 — REVISION LOG

<i>Section</i>	<i>Title</i>	<i>Page</i>
—	Revision Log	100.1