


# ROBINSON HELICOPTER COMPANY

## R22 MAINTENANCE MANUAL AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS RTR 060 VOLUME I

Type Certificate Number H10WE

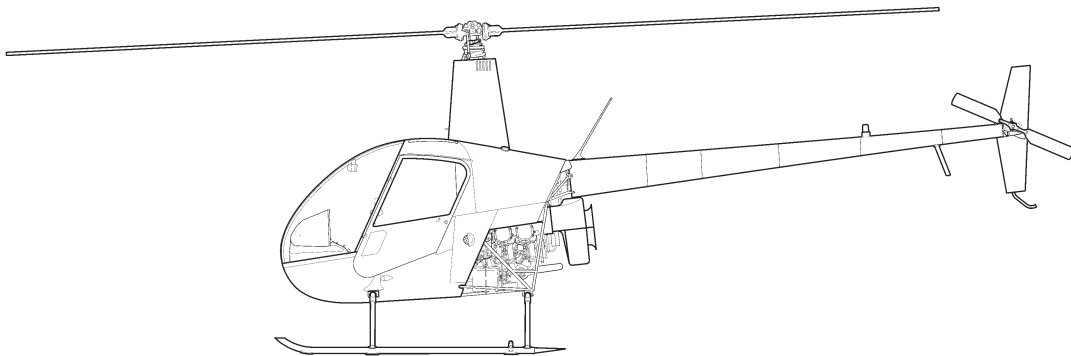

Robinson Helicopter Company  
2901 Airport Drive  
Torrance, California 90505-6115  
UNITED STATES

Phone: (310) 539-0508  
Fax: (310) 539-5198  
Web: [www.robinsonheli.com](http://www.robinsonheli.com)

### OFFICE HOURS

Monday through Friday, 7:30 a.m. to 4:30 p.m., Pacific Time.  
Lunch hour is 11:30 a.m. to 12:30 p.m.

### HOLIDAYS

Please visit [www.robinsonheli.com](http://www.robinsonheli.com) and click on the Customer Support tab for a complete list of holidays and company shutdowns.

### CUSTOMER SUPPORT AND ORDERS

Please visit [www.robinsonheli.com](http://www.robinsonheli.com) and click on the Customer Support tab for a complete service directory.

Procure parts from any R22 Dealer or Service Center, or order directly from assigned [RHC Customer Service Representative](#) via email, fax, or phone.

### PUBLICATIONS

Please visit [www.robinsonheli.com](http://www.robinsonheli.com) and click on the Publications tab to view our publications electronically.

**SUBSCRIPTION ORDER AND RENEWAL FORM**

Name: \_\_\_\_\_ Phone: \_\_\_\_\_  
 Address: \_\_\_\_\_ Fax: \_\_\_\_\_  
 \_\_\_\_\_ Email: \_\_\_\_\_  
 \_\_\_\_\_

I Own R22 Serial Number(s): \_\_\_\_\_  
 I Own R44/R44 II Serial Number(s): \_\_\_\_\_  
 I Own R66 Serial Number(s): \_\_\_\_\_

Covers updates during the subscription period only. Requests for revisions produced before the subscription period are subject to an additional charge at the full subscription rate for each past year requested.

MODEL/CLASS	DESCRIPTION	PRICE/YR.	QTY.	TOTAL
<b>R22</b>				
A	Future updates to R22 Pilot's Operating Handbook & Safety Notices	\$15.00	_____	_____
B	Future updates to R22 Pilot's Operating Handbook & Safety Notices, R22 Service Bulletins & Service Letters	\$25.00	_____	_____
C	Future updates to R22 Pilot's Operating Handbook & Safety Notices, R22 Service Bulletins, Service Letters, & R22 Maintenance Manual/Illustrated Parts Catalog revisions	\$45.00	_____	_____
<b>R44</b>				
Q	Future updates to R44 Pilot's Operating Handbook & Safety Notices	\$15.00	_____	_____
R	Future updates to R44 Pilot's Operating Handbook & Safety Notices, R44 Service Bulletins & Service Letters	\$25.00	_____	_____
S	Future updates to R44 Pilot's Operating Handbook & Safety Notices, R44 Service Bulletins, Service Letters, & R44 Maintenance Manual/Illustrated Parts Catalog revisions	\$45.00	_____	_____
<b>R44 II</b>				
V	Future updates to R44 II Pilot's Operating Handbook & Safety Notices	\$15.00	_____	_____
W	Future updates to R44 II Pilot's Operating Handbook & Safety Notices, R44 Service Bulletins & Service Letters	\$25.00	_____	_____
X	Future updates to R44 II Pilot's Operating Handbook & Safety Notices, R44 Service Bulletins, Service Letters, & R44 Maintenance Manual/Illustrated Parts Catalog revisions	\$45.00	_____	_____
<b>R66</b>				
J	Future updates to R66 Pilot's Operating Handbook & Safety Notices	\$15.00	_____	_____
K	Future updates to R66 Pilot's Operating Handbook & Safety Notices, R66 Service Bulletins & Service Letters	\$25.00	_____	_____
L	Future updates to R66 Pilot's Operating Handbook & Safety Notices, R66 Service Bulletins, Service Letters, & R66 Maintenance Manual/Illustrated Parts Catalog revisions	\$45.00	_____	_____

**Method of Payment:** No cash or CODs. We cannot be responsible for cash sent by mail. For faster processing, order online.

- U.S. Check, Money Order, payable to Robinson Helicopter Company
- Wire Transfer (subscription will not take effect until wire transfer has been received)
- VISA, MasterCard or American Express

Credit Card Number: \_\_\_\_\_ Month / Year: \_\_\_\_\_

Cardholder Signature: \_\_\_\_\_ Verification Code: \_\_\_\_\_

Return to: **ROBINSON HELICOPTER COMPANY**, Attn: Subscriptions Billing Zip: \_\_\_\_\_  
 2901 Airport Drive, Torrance, CA 90505 / Fax: (310) 539-5198

**CHAPTER LIST**

	Introduction
Chapter 1	General
Chapter 2	Inspection
Chapter 3	Life-Limited Components
Chapter 4	Airframe
Chapter 5	Landing Gear
Chapter 6	Powerplant
Chapter 7	Drive Train
Chapter 8	Flight Controls
Chapter 9	Rotor Systems
Chapter 10	Rigging, Track and Balance
Chapter 11	Heating and Ventilation
Chapter 12	Fuel System
Chapter 13	Instruments
Chapter 14	Electrical and Avionics Systems
Chapter 15	Furnishings
Chapter 16	Special Tools
Chapter 17	Revision Log

**RECOMMENDED CHANGE REPORT**

Please direct recommended changes to RHC Technical Publications via the email address listed below, by phone, or by submitting a duplicate of this completed form by fax or mail. Please include or have available the information detailed by this form.

Recommended changes may include but are not limited to: general comments, corrections, omitted information, or clarification of instructions.

Please send recommendations to:

Email: [techpubs@robinsonheli.com](mailto:techpubs@robinsonheli.com)  
Phone: (310) 539-0508  
Fax: (310) 539-5198

**Robinson Helicopter Company**  
Attention: Technical Publications  
2901 Airport Drive  
Torrance, CA 90505-6115  
UNITED STATES

Date:	_____	Publication:	_____
Name:	_____	Chapter:	_____
Company:	_____	Section:	_____
Helicopter Model:	_____	Page:	_____
Serial Number:	_____	Revision:	_____
Phone:	_____		
Email:	_____		

COMMENTS:

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

**LIMITED AIRCRAFT WARRANTY**

*Effective R22 S/N 3318 & on; R44 S/N 1202 & on*

*Robinson Helicopter Company, Inc. (hereafter referred to as RHC) warrants each new helicopter to be free from defects in material and workmanship appearing within two years from the date of delivery from the RHC factory or during the first one thousand (1000) hours of operation, whichever event occurs first; provided, the aircraft has been subjected to normal use and service. This Warranty is limited to repair or replacement on an exchange basis, as selected by RHC, of any part, which upon examination by RHC is deemed to have been defective when the aircraft left the factory. A new warranty period is not established for parts replaced under the terms of this Warranty. Such replacement parts are warranted only for the remainder of the original warranty period. This Warranty shall not apply to any helicopter or part which has been repaired or altered outside the factory, and which, in RHC's judgment, has affected the performance or reliability of the helicopter or part. This Warranty shall not apply to any helicopter or part which has been subject to corrosion, misuse, negligence or accident, nor to any parts normally replaced during routine maintenance, such as, air cleaners, skid shoes, rod end or spherical bearings, light bulbs, etc. This Warranty shall not apply to any helicopter, which has been crated for shipping unless such crating is performed by RHC. RHC is not responsible for the cost of shipping parts under the terms of this Warranty. However, RHC will credit the RHC Dealership, which sold and delivered the new helicopter to its original owner, with an allowance for labor performed by that Dealership for removing and reinstalling the defective part. No credit will be issued for trouble-shooting.*

*RHC makes no Warranty with respect to batteries, instruments, avionics or other trade accessories since they are usually warranted separately by their respective manufacturers. New aircraft are equipped with new engines which have a separate Lycoming limited warranty.*

**ADDITIONAL WARRANTY FOR MAIN & TAIL GEARBOXES**

*In addition to the warranty specified above, an extended pro-rated warranty shall apply to the main and tail gearboxes for the first 2200 hours of service or three years from the date of manufacture, whichever event occurs first. During this period, if a gearbox must be overhauled due to failure of a part which was defective when it left the factory, RHC will pro-rate the cost of the overhaul by dividing the hours in service by 2200 or the months in service by thirty-six (36), whichever fraction is greater.*

***THE FOREGOING WARRANTY IS EXCLUSIVE AND IS GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESS, IMPLIED, OR STATUTORY, WHETHER WRITTEN OR ORAL, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR TRADE USAGE, THE REMEDIES OF THE BUYER SHALL BE LIMITED TO THOSE PROVIDED HEREIN. IN NO EVENT WILL THE MANUFACTURER BE LIABLE FOR LOSSES RESULTING FROM LOSS OF USE OF THE HELICOPTER, COLLATERAL, CONSEQUENTIAL OR SPECIAL DAMAGES, OR ANY OTHER COSTS.***

*Warranty adjustments with respect to any helicopter or parts manufactured by RHC will be made only upon compliance with the following procedure:*

- (1) The defective part or assembly, together with a written Warranty Claim, must be returned to RHC not later than thirty (30) days after discovery of the defect nor more than thirty (30) days after expiration of the Warranty period.*
- (2) RHC will, after inspection, determine whether the material or part was defective when it left the factory and will respond accordingly. Final determination of a Warranty adjustment rests with RHC.*

**ROBINSON HELICOPTER COMPANY, INC.  
2901 Airport Drive  
Torrance, California 90505 U.S.A.**

**Effective 1 February 2003**

### LIMITED PARTS WARRANTY

*Robinson Helicopter Company, Inc. (hereafter referred to as RHC) warrants each new helicopter part to be free from defects in material and workmanship appearing within one year from the date of delivery from the RHC factory or during the first one thousand (1000) hours of operation, whichever event occurs first; provided, the part has been subjected to normal use and service. This Warranty is limited to repair or replacement on an exchange basis, as selected by RHC, of any part, which upon examination by RHC is deemed to have been defective when the part left the factory. A new warranty period is not established for parts replaced under the terms of this Warranty. Such replacement parts are warranted only for the remainder of the original warranty period. RHC is not responsible for the cost of removing, shipping, or reinstallation of parts under the terms of this Warranty. This Warranty shall not apply to any part which has been repaired or altered outside the factory, and which, in RHC's judgment, has affected the performance or reliability of the part. This Warranty shall not apply to any part which has been subject to corrosion, misuse, negligence or accident, nor to any parts normally replaced during routine maintenance, such as, air cleaners, skid shoes, rod end or spherical bearings, light bulbs, etc.*

*RHC makes no Warranty with respect to batteries, instruments, avionics or other trade accessories since they are usually warranted separately by their respective manufacturers.*

### ADDITIONAL WARRANTY FOR MAIN & TAIL GEARBOXES

*In addition to the warranty specified above, an extended pro-rated warranty shall apply to the main and tail gearboxes for the first 2200 hours of service or three years from the date of manufacture, whichever event occurs first. During this period, if a gearbox must be overhauled due to failure of a part which was defective when it left the factory, RHC will pro-rate the cost of the overhaul by dividing the hours in service by 2200 or the months in service by thirty-six (36), whichever fraction is greater.*

**THE FOREGOING WARRANTY IS EXCLUSIVE AND IS GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESS, IMPLIED, OR STATUTORY, WHETHER WRITTEN OR ORAL, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR TRADE USAGE, THE REMEDIES OF THE BUYER SHALL BE LIMITED TO THOSE PROVIDED HEREIN. IN NO EVENT WILL THE MANUFACTURER BE LIABLE FOR LOSSES RESULTING FROM LOSS OF USE OF THE HELICOPTER, COLLATERAL, CONSEQUENTIAL OR SPECIAL DAMAGES, OR ANY OTHER COSTS.**

*Warranty adjustments with respect to any helicopter or parts manufactured by RHC will be made only upon compliance with the following procedure:*

- (1) The defective part or assembly, together with a written Warranty Claim, must be returned to RHC not later than thirty (30) days after discovery of the defect nor more than thirty (30) days after expiration of the Warranty period.*
- (2) RHC will, after inspection, determine whether the material or part was defective when it left the factory and will respond accordingly. Final determination of a Warranty adjustment rests with RHC.*

01 June 06

**ROBINSON HELICOPTER COMPANY, INC.  
2901 Airport Drive  
Torrance, California 90505 U.S.A.**

**CONTENTS**

**INTRODUCTION**

<u>Section</u>	<u>Title</u>	<u>Page</u>
–	Cover Page . . . . .	i
–	Subscription Order and Renewal Form . . . . .	ii
–	Chapter List . . . . .	iii
–	Recommended Change Report . . . . .	iv
–	Limited Aircraft Warranty . . . . .	v
–	Limited Parts Warranty . . . . .	vi
–	Contents . . . . .	vii

**CHAPTER 1 – GENERAL**

<u>Section</u>	<u>Title</u>	<u>Page</u>
1.000	Introduction . . . . .	1.1
1.001	R22 Maintenance Manual Revisions . . . . .	1.1
1.002	R22 Maintenance Authorization . . . . .	1.1
1.003	R22 Component Overhaul Authorization . . . . .	1.1
1.004	Maintenance Record . . . . .	1.2
1.005	Notations . . . . .	1.2
1.006	Definitions and Abbreviations . . . . .	1.3
1.007	Service Directory . . . . .	1.4
1.008	External Dimensions . . . . .	1.5
1.009	Version Description . . . . .	1.8
1.100	Helicopter Servicing . . . . .	1.11
1.101	Scheduled Maintenance and Inspections . . . . .	1.11
1.105	Calibration of Tools . . . . .	1.11
1.110	Lubrication – General . . . . .	1.11
1.115	Chip Detector Cleaning . . . . .	1.12
1.120	Main Rotor Gearbox Drain and Flush . . . . .	1.13
1.130	Tail Rotor Gearbox Drain and Flush . . . . .	1.14
1.140	A184 Upper Bearing Lubrication . . . . .	1.15
1.150	Defueling . . . . .	1.15A
1.160	Storage (Greater than 30 days) . . . . .	1.15B
1.200	Handling, Jacking, Hoisting, Leveling, and Weighing . . . . .	1.15D
1.210	Ground Handling . . . . .	1.15D
1.211	Ground Handling Wheels Installation . . . . .	1.15D
1.212	Ground Handling Wheels Installation – Float Ship Landing Gear . . . . .	1.16
1.213	Moving the Helicopter on Ground Handling Wheels . . . . .	1.18
1.214	Main Rotor Blade Tie-Downs . . . . .	1.18
1.215	Parking . . . . .	1.20
1.216	Trailerling . . . . .	1.20
1.220	Jacking, Hoisting, and Leveling . . . . .	1.21
1.230	Weighing and CG Calculation . . . . .	1.25
1.231	Preparing Helicopter for Weighing . . . . .	1.25

**CONTENTS**

**CHAPTER 1 — GENERAL (Continued)**

<u>Section</u>	<u>Title</u>	<u>Page</u>
1.232	Weighing Procedure and Calculations . . . . .	1.25
1.240	Ballast Installation . . . . .	1.29
1.300	Fastener Torque Requirements . . . . .	1.31
1.310	General . . . . .	1.31
1.311	Torque Seal . . . . .	1.32
1.320	Standard Torques . . . . .	1.33
1.330	Special Torques . . . . .	1.34
1.400	Approved Materials . . . . .	1.38
1.410	Paint Strippers . . . . .	1.38
1.420	Solvents and Cleaners . . . . .	1.38
1.430	Fillers and Putty . . . . .	1.39
1.440	Torque Seal . . . . .	1.39
1.450	Primers . . . . .	1.39
1.455	Powder Coat . . . . .	1.39
1.460	Paints . . . . .	1.41
1.470	Lubricants . . . . .	1.43
1.480	Adhesives and Sealants . . . . .	1.44
1.490	Storage Limits . . . . .	1.44B
1.500	Part Interchangeability . . . . .	1.45
1.600	Instructions for Uncrating, Reassembling, and Flight Testing R22 Series Helicopters . . . . .	1.46
1.700	Replacement Component Identification (Data) Plates . . . . .	1.48

**CHAPTER 2 — INSPECTION**

<u>Section</u>	<u>Title</u>	<u>Page</u>
2.000	Introduction . . . . .	2.1
2.100	General Procedures . . . . .	2.1
2.110	Ball and Roller Bearings . . . . .	2.1
2.120	Push-Pull Tubes, Rod Ends, and Spherical Bearings . . . . .	2.1
2.121	Push-Pull Tubes . . . . .	2.1
2.122	Rod Ends and Spherical Bearings . . . . .	2.2
2.125	Elastomeric Bearings . . . . .	2.3
2.130	Telatemp Indicators . . . . .	2.6
2.200	Ground and Flight Check For 100-Hour/Annual Inspection . . . . .	2.7
2.205	Ground Check . . . . .	2.7
2.210	Run Up . . . . .	2.9
2.220	Flight Check . . . . .	2.10
2.300	Airframe Preparation For 100-Hour/Annual Inspection . . . . .	2.10
2.400	100-Hour/Annual Airframe Inspection . . . . .	2.11
2.410	Inspection Procedures and Checklist . . . . .	2.11
2.500	Special Inspections . . . . .	2.41
2.501	Clutch Actuator Upper and Lower Bearings . . . . .	2.41
2.502	A181-4 Actuator Lower Bearing Inspection and Lubrication . . . . .	2.41
2.503	A184 Actuator Upper Bearing Inspection and Lubrication . . . . .	2.42



**CONTENTS**

**CHAPTER 2 – INSPECTION (Continued)**

<u>Section</u> <u>Title</u>	<u>Page</u>
2.507 V-Belt Inspection . . . . .	2.43
2.508 Lower Sheave V-Belt Wear Pattern Inspection . . . . .	2.45
2.510 Tail Skid Strike . . . . .	2.46
2.520 Tail Rotor Strike . . . . .	2.47
2.530 Main Rotor Strike . . . . .	2.48
2.540 Rotor/Engine Overspeed . . . . .	2.49
2.550 Hard Landing . . . . .	2.51
2.560 Steel Tube Frame Corrosion . . . . .	2.53
2.570 Main Rotor Blade Detail Inspection . . . . .	2.54
2.571 Spar Cover Adhesive Damage (A016-2 main rotor blade only) . . . . .	2.54
2.572 Main Rotor Blade Sealant and Filler Cracking . . . . .	2.56
2.573 Visual Inspection of Main Rotor Blade Root Area . . . . .	2.57
2.580 Float Inspection and Testing . . . . .	2.58
2.590 Windshield Inspection . . . . .	2.59
2.600 12-Year Inspection And Limited Overhaul Requirements . . . . .	2.60
2.610 Inspection Procedure . . . . .	2.60
2.620 Additional Parts Requiring Replacement on Some R22s . . . . .	2.62
2.630 Component Inspection Procedure . . . . .	2.63
2.700 2200-Hour Overhaul Requirements & Instructions . . . . .	2.64
2.710 Inspection Procedure . . . . .	2.65
2.720 Additional Parts Requiring Replacement on Some R22s . . . . .	2.66
2.800 Additional Special Inspections . . . . .	2.67
2.810 Volcanic Ash Recommendations . . . . .	2.67
2.820 Lightning Strike . . . . .	2.68

**CHAPTER 3 – LIFE-LIMITED COMPONENTS**

<u>Section</u> <u>Title</u>	<u>Page</u>
3.000 Life-Limited Components . . . . .	3.1
3.001 Introduction . . . . .	3.1
3.002 Time-In-Service Records . . . . .	3.1
3.003 Fatigue Life-Limited Parts . . . . .	3.1
3.100 Inspection And Overhaul Requirements . . . . .	3.2
3.110 Powerplant Overhaul Requirements . . . . .	3.2
3.120 Aircraft Overhaul Requirements . . . . .	3.2
3.130 12-Year Inspection and Limited Overhaul Requirements . . . . .	3.2
3.140 Additional Bearing Replacement Requirements . . . . .	3.2
3.200 Type Certificate Data Sheet (TCDS) . . . . .	3.2
3.300 Airworthiness Limitations . . . . .	3.13

**CHAPTER 4 – AIRFRAME**

<u>Section</u> <u>Title</u>	<u>Page</u>
4.000 Airframe . . . . .	4.1
4.001 Introduction . . . . .	4.1
4.002 Description . . . . .	4.1

**CONTENTS**

**CHAPTER 4 — AIRFRAME (Continued)**

<u>Section</u>	<u>Title</u>	<u>Page</u>
4.100	Fuselage . . . . .	4.1
4.110	Cabin Assembly . . . . .	4.1
4.120	Windshield Assembly . . . . .	4.2
4.121	Windshield Removal . . . . .	4.2
4.122	Windshield Installation . . . . .	4.2
4.123	Windshield Replacement . . . . .	4.3
4.130	Door Removal and Installation . . . . .	4.4
4.140	Fairing, Cowling and Inspection Panels . . . . .	4.4
4.141	Side Skirts . . . . .	4.4
4.142	Mast Fairing . . . . .	4.6
4.143	Aft Cowling . . . . .	4.6
4.144	Cabin Inspection Panels . . . . .	4.6
4.200	Welded Steel Tube Frame Assemblies . . . . .	4.7
4.210	Left-Hand Frame Assembly . . . . .	4.8
4.211	Left-Hand Frame Removal . . . . .	4.8
4.212	Left-Hand Frame Installation . . . . .	4.8
4.220	Right-Hand Frame Assembly . . . . .	4.9
4.221	Right-Hand Frame Removal . . . . .	4.9
4.222	Right-Hand Frame Installation . . . . .	4.12
4.230	Upper Frame Assembly . . . . .	4.13
4.231	Upper Frame Removal . . . . .	4.13
4.232	Upper Frame Installation . . . . .	4.14
4.240	Strut Assembly Removal and Installation . . . . .	4.15
4.300	Tailcone And Empennage . . . . .	4.16
4.310	Tailcone . . . . .	4.16
4.311	Tailcone Removal . . . . .	4.16
4.312	Tailcone Installation . . . . .	4.16
4.313	Tailcone Replacement . . . . .	4.17
4.314	Tailcone Repair . . . . .	4.22
4.320	Empennage Assembly . . . . .	4.22
4.321	Empennage Removal . . . . .	4.22
4.322	Empennage Installation . . . . .	4.23
4.323	Upper Stabilizer Replacement . . . . .	4.23
4.324	Lower Stabilizer Replacement . . . . .	4.23
4.325	Horizontal Stabilizer Replacement . . . . .	4.24

**CHAPTER 5 — LANDING GEAR**

<u>Section</u>	<u>Title</u>	<u>Page</u>
5.000	Landing Gear . . . . .	5.1
5.001	Introduction . . . . .	5.1
5.002	Description . . . . .	5.1
5.100	Landing Gear Assembly . . . . .	5.1
5.110	Landing Gear Removal . . . . .	5.1
5.120	Landing Gear Installation . . . . .	5.3
5.200	Cross Tubes . . . . .	5.3

**CONTENTS**

**CHAPTER 5 — LANDING GEAR (Continued)**

<u>Section</u> <u>Title</u>	<u>Page</u>
5.210 Cross Tube Removal . . . . .	5.3
5.220 Cross Tube Installation . . . . .	5.6
5.300 Skid Tubes . . . . .	5.6
5.310 Skid Tube Removal . . . . .	5.6
5.320 Skid Tube Installation . . . . .	5.6
5.330 Skid Shoe Removal and Replacement . . . . .	5.6
5.340 Ground Handling Wheel Support Removal and Replacement . . . . .	5.8
5.400 Preventive Maintenance . . . . .	5.8
5.500 Float Ship Landing Gear . . . . .	5.9
5.510 Float Landing Gear Removal . . . . .	5.9
5.520 Float Landing Gear Installation . . . . .	5.10
5.530 Float Tube Removal . . . . .	5.11
5.540 Float Tube Installation . . . . .	5.11
5.550 Float Tube Repair . . . . .	5.13

**CHAPTER 6 — POWERPLANT**

<u>Section</u> <u>Title</u>	<u>Page</u>
6.000 Powerplant And Related Systems . . . . .	6.1
6.001 Introduction . . . . .	6.1
6.002 Description . . . . .	6.1
6.100 Powerplant . . . . .	6.2
6.110 Engine Removal . . . . .	6.2
6.120 Engine Installation . . . . .	6.2
6.130 Engine Shimming . . . . .	6.6
6.200 Cooling System . . . . .	6.9
6.210 Fanwheel Removal . . . . .	6.9
6.220 Fanwheel Installation . . . . .	6.12
6.230 (Reserved)	
6.240 Balancing Fanwheel . . . . .	6.13
6.250 Cooling Scroll Replacement . . . . .	6.16A
6.300 Lubrication System . . . . .	6.18
6.310 Oil Cooler Removal . . . . .	6.18
6.320 Oil Cooler Installation . . . . .	6.18
6.400 Induction System . . . . .	6.18
6.410 Carburetor Removal . . . . .	6.18
6.420 Air Box Removal . . . . .	6.19
6.430 Air Box Installation . . . . .	6.19
6.435 Air Filter Cleaning . . . . .	6.21
6.440 Carburetor Installation . . . . .	6.21
6.450 Carburetor Heat Scoop Removal . . . . .	6.22
6.460 Carburetor Heat Scoop Installation . . . . .	6.22
6.500 Exhaust System . . . . .	6.22
6.510 Exhaust System Removal . . . . .	6.22
6.520 Exhaust System Installation . . . . .	6.22
6.600 Troubleshooting . . . . .	6.23

**CONTENTS**

**CHAPTER 6 — POWERPLANT (Continued)**

<u>Section</u>	<u>Title</u>	<u>Page</u>
6.610	Low-Power Checklist . . . . .	6.23
6.700	Throttle Control And Carburetor Heat Assist . . . . .	6.25
6.710	Overtravel Spring . . . . .	6.25
6.711	Overtravel Spring Removal . . . . .	6.25
6.712	Overtravel Spring Installation . . . . .	6.25
6.720	(Reserved)	
6.730	Throttle Push-Pull Tube Assembly . . . . .	6.26
6.731	Throttle Push-Pull Tube Assembly Removal . . . . .	6.26
6.732	Throttle Push-Pull Tube Assembly Installation . . . . .	6.26
6.740	Carburetor Heat Assist . . . . .	6.26
6.741	Carburetor Heat Control Cable Removal . . . . .	6.26
6.742	Carburetor Heat Control Cable Installation . . . . .	6.27
6.743	D334-5 Carburetor Heat Assist Bellcrank Removal . . . . .	6.27
6.744	D334-5 Carburetor Heat Assist Bellcrank Installation . . . . .	6.27
6.745	D334-5 Bellcrank Friction Adjustment . . . . .	6.29

**CHAPTER 7 — DRIVE TRAIN**

<u>Section</u>	<u>Title</u>	<u>Page</u>
7.000	Drive Train . . . . .	7.1
7.001	Introduction . . . . .	7.1
7.002	Description . . . . .	7.1
7.100	Main Rotor Gearbox . . . . .	7.1
7.110	Main Rotor Gearbox Removal . . . . .	7.1
7.120	Main Rotor Gearbox Installation . . . . .	7.3
7.130	Leveling Main Rotor Gearbox . . . . .	7.5
7.140	A006-5/A908-4 Yoke Removal and Installation . . . . .	7.7
7.141	Setting Hall Effect Sender Gap . . . . .	7.7
7.150	Replacement of Main Rotor Gearbox Pinion Seal . . . . .	7.7
7.155	Replacement of Main Rotor Gearbox Sump O-Ring . . . . .	7.9
7.160	Main Rotor Gearbox Overtemp Inspection . . . . .	7.9A
7.170	Main Rotor Gearbox Chip Light Indicator . . . . .	7.9B
7.180	(Reserved)	
7.200	Clutch Assembly . . . . .	7.10
7.210	Clutch Assembly Removal . . . . .	7.10
7.211	A184 Bearing Removal . . . . .	7.12
7.212	A184 Bearing Installation . . . . .	7.14
7.213	Clutch Assembly Seal Replacement . . . . .	7.15
7.214	Clutch Assembly Lubricant Inspection and Servicing . . . . .	7.16
7.220	Clutch Assembly Installation . . . . .	7.19
7.230	Clutch Sheave Alignment . . . . .	7.22
7.240	Clutch Shaft Angle . . . . .	7.24
7.250	Lateral Clutch Centering . . . . .	7.24
7.260	A907 Yoke Removal and Installation . . . . .	7.26
7.270	A195 Yoke Removal and Installation . . . . .	7.26
7.280	V-Belts . . . . .	7.27

**CONTENTS**

**CHAPTER 7 — DRIVE TRAIN (Continued)**

<u>Section</u>	<u>Title</u>	<u>Page</u>
7.281	V-Belt Removal . . . . .	7.27
7.282	V-Belt Installation . . . . .	7.31
7.290	A007 Fanshaft and Bearing Assembly, Starter Ring Gear Support, Lower Sheave and Alternator Belt Replacement . . . . .	7.33A
7.291	Removal . . . . .	7.33A
7.292	Installation . . . . .	7.33A
7.300	Tail Rotor Drive Shaft . . . . .	7.34
7.310	Tail Rotor Drive Shaft Removal . . . . .	7.34
7.320	Tail Rotor Drive Shaft Installation . . . . .	7.35
7.321	Adjustment of Damper Friction . . . . .	7.37
7.330	Intermediate Flex Plate Installation and Shimming . . . . .	7.40
7.340	Checking Tail Rotor Drive Shaft Runout . . . . .	7.40
7.350	Two-Piece Tail Rotor Drive Shaft . . . . .	7.44A
7.360	B224-1 Tail Rotor Drive Shaft Corrosion Removal . . . . .	7.44D
7.400	Tail Rotor Gearbox . . . . .	7.45
7.410	Tail Rotor Gearbox Removal . . . . .	7.45
7.420	Tail Rotor Gearbox Installation . . . . .	7.45
7.430	Tail Rotor Gearbox Shimming . . . . .	7.46
7.440	Tail Rotor Gearbox Chip Indicator . . . . .	7.46
7.450	A021 Tail Rotor Gearbox Output Shaft Seal Replacement . . . . .	7.47
7.460	B021 Tail Rotor Gearbox Output Shaft Seal Replacement . . . . .	7.48
7.470	B021 Tail Rotor Gearbox Input Shaft Seal Replacement . . . . .	7.48B
7.500	Actuator Assembly . . . . .	7.49
7.510	Actuator Removal . . . . .	7.49
7.520	Actuator Installation . . . . .	7.49
7.530	Actuator Motor Replacement . . . . .	7.49
7.540	Actuator Adjustment . . . . .	7.50
7.550	Switch and Fuse Replacement . . . . .	7.53
7.551	Switch Replacement . . . . .	7.53
7.552	Fuse Replacement . . . . .	7.53
7.600	Rotor Brake . . . . .	7.54
7.610	Rotor Brake Removal . . . . .	7.54
7.620	Rotor Brake Installation . . . . .	7.54
7.630	Rotor Brake Pad Replacement . . . . .	7.55

**CHAPTER 8 — FLIGHT CONTROLS**

<u>Section</u>	<u>Title</u>	<u>Page</u>
8.000	Flight Controls . . . . .	8.1
8.001	Introduction . . . . .	8.1
8.002	Description . . . . .	8.1
8.100	Cyclic Controls . . . . .	8.1
8.110	Cyclic Assembly . . . . .	8.1
8.111	Removal of Cyclic Assembly . . . . .	8.1
8.112	Installation of Cyclic Assembly . . . . .	8.4
8.120	Cyclic Grip Assembly . . . . .	8.7

**CONTENTS**

**CHAPTER 8 — FLIGHT CONTROLS (Continued)**

<u>Section</u>	<u>Title</u>	<u>Page</u>
8.121	Removal of Cyclic Grip Assembly . . . . .	8.7
8.122	Installation of Cyclic Grip Assembly . . . . .	8.8
8.130	Cyclic Lateral (Right) Trim . . . . .	8.10
8.131	Right Trim Spring Assembly Removal . . . . .	8.10
8.132	Right Trim Spring Assembly Installation . . . . .	8.10
8.133	Right Trim Spring Replacement and Shimming . . . . .	8.11
8.140	Cyclic Longitudinal (Fore-Aft) Elastic Trim Cord . . . . .	8.15
8.141	Longitudinal Trim Cord Removal . . . . .	8.19
8.142	Longitudinal Trim Cord Installation . . . . .	8.19
8.150	Cyclic Friction Assembly . . . . .	8.20
8.151	Cyclic Friction Adjustment . . . . .	8.20
8.160	A121-7 Push-Pull Tube . . . . .	8.21
8.161	A121-7 Push-Pull Tube Removal . . . . .	8.21
8.162	A121-7 Push-Pull Tube Inspection/Repair . . . . .	8.21
8.163	A121-7 Push-Pull Tube Sleeve Installation . . . . .	8.22
8.164	A121-7 Push-Pull Tube Sleeve Inspection . . . . .	8.22
8.165	A121-7 Push-Pull Tube Installation . . . . .	8.23
8.200	Collective Control . . . . .	8.25
8.210	Collective Stick Assembly . . . . .	8.25
8.211	Collective Stick Removal . . . . .	8.25
8.212	Collective Stick Installation . . . . .	8.26
8.220	Collective Spring Assembly . . . . .	8.30
8.221	Collective Spring Removal . . . . .	8.30
8.222	Collective Spring Installation . . . . .	8.32
8.223	Collective Spring Adjustment for A038-1 thru -4 Assembly . . . . .	8.33
8.224	Collective Spring Adjustment for A038-5 and -6 Assembly . . . . .	8.34
8.225	Collective Friction Adjustment . . . . .	8.34
8.230	RPM Governor System . . . . .	8.34A
8.231	Governor Controller Removal . . . . .	8.34A
8.232	Governor Controller Installation . . . . .	8.34A
8.233	Governor Assembly Removal . . . . .	8.34A
8.234	Governor Assembly Installation . . . . .	8.34C
8.239	Governor Troubleshooting . . . . .	8.34C
8.300	Jackshaft and Support Struts . . . . .	8.35
8.310	Jackshaft . . . . .	8.35
8.311	Jackshaft Removal . . . . .	8.35
8.312	Jackshaft Installation . . . . .	8.35
8.320	Strut Assembly (Jackshaft Support) . . . . .	8.35
8.321	Strut Removal . . . . .	8.35
8.322	Strut Installation . . . . .	8.38
8.400	Swashplate and Main Rotor Pitch Links . . . . .	8.39
8.410	Swashplate . . . . .	8.39
8.411	Swashplate Removal . . . . .	8.39
8.412	Swashplate Installation . . . . .	8.40
8.413	(Reserved)	
8.414	(Reserved)	

**CONTENTS**

**CHAPTER 8 – FLIGHT CONTROLS (Continued)**

<u>Section</u>	<u>Title</u>	<u>Page</u>
8.415	(Reserved)	
8.416	Shimming Upper (Unflanged) Spherical Sleeve with Aluminum Ball . . . . .	8.48
8.500	Tail Rotor Controls . . . . .	8.48
8.510	Tail Rotor Pedals . . . . .	8.48
8.511	Tail Rotor Pedal Removal . . . . .	8.48
8.512	Tail Rotor Pedal Installation . . . . .	8.52
8.520	A317-1 Lower Bellcrank . . . . .	8.52
8.521	A317-1 Lower Forward Bellcrank Removal . . . . .	8.52
8.522	A317-1 Lower Forward Bellcrank Installation . . . . .	8.53
8.530	A316-1 Upper Bellcrank . . . . .	8.55
8.531	Bellcrank Removal . . . . .	8.55
8.532	Bellcrank Installation . . . . .	8.55
8.540	A331-4 Intermediate Bellcrank . . . . .	8.56
8.541	Bellcrank Removal . . . . .	8.56
8.542	Bellcrank Installation . . . . .	8.57
8.550	A120-3 Aft Bellcrank . . . . .	8.57
8.551	Bellcrank Removal . . . . .	8.57
8.552	Bellcrank Installation . . . . .	8.57
8.560	A031-1 Pitch Control . . . . .	8.57
8.561	Pitch Control Removal . . . . .	8.57
8.562	Pitch Control Installation . . . . .	8.57
8.570	Tail Rotor Pitch Links . . . . .	8.58
8.571	Tail Rotor Pitch Link Removal . . . . .	8.58
8.572	Tail Rotor Pitch Link Installation . . . . .	8.58
8.600	A203 Yoke and A205 Fork Assemblies . . . . .	8.60
8.610	Bearing Removal . . . . .	8.60
8.615	C648-2 Bearing Installation . . . . .	8.60
8.620	A139-1 Bearing Installation . . . . .	8.60
8.630	B115-1 Bearing Installation . . . . .	8.62
8.640	Yoke and Fork Assembly Installation . . . . .	8.63

**CHAPTER 9 – ROTOR SYSTEMS**

<u>Section</u>	<u>Title</u>	<u>Page</u>
9.000	Rotor Systems . . . . .	9.1
9.100	Main Rotor . . . . .	9.1
9.110	Main Rotor Blades . . . . .	9.1
9.111	Main Rotor Blade Removal . . . . .	9.1
9.112	Main Rotor Blade Installation . . . . .	9.4
9.113	Boot Removal . . . . .	9.5
9.114	Boot Installation . . . . .	9.5
9.115	Filling Pitch Bearing Housing . . . . .	9.7
9.116	Drilling Main Rotor Hub Bolts . . . . .	9.7
9.120	Main Rotor Hub . . . . .	9.8
9.121	Main Rotor Hub Removal . . . . .	9.8
9.122	Main Rotor Hub Installation . . . . .	9.8

**CONTENTS**

**CHAPTER 9 – ROTOR SYSTEMS (Continued)**

<u>Section</u>	<u>Title</u>	<u>Page</u>
9.123	Main Rotor Hub Journal and Shim Calculations . . . . .	9.11
9.124	Adjustment of Hinge Friction . . . . .	9.14
9.125	Shifting the Main Rotor Hub . . . . .	9.14
9.126	Main Rotor Hub Bearing Replacement . . . . .	9.15
9.130	Inspection of Main Rotor Blades . . . . .	9.17
9.131	Scratches and Corrosion on Blade Skins and Doublers . . . . .	9.17
9.132	Dents and Local Deformations . . . . .	9.19
9.133	Root Fitting Damage . . . . .	9.21
9.134	Voids . . . . .	9.23
9.140	Repair of Main Rotor Blades . . . . .	9.25
9.141	Trimming . . . . .	9.26A
9.142	Painting . . . . .	9.26A
9.200	Tail Rotor . . . . .	9.26C
9.210	Tail Rotor Assembly Removal . . . . .	9.26C
9.212	Tail Rotor Installation with Spherical Teeter Bearings . . . . .	9.27
9.213	Tail Rotor Installation with Elastomeric Teeter Bearings . . . . .	9.30
9.214	Tail Rotor Hub Spherical Bearing Replacement . . . . .	9.32A
9.215	Tail Rotor Hub Elastomeric Bearing Replacement . . . . .	9.32B
9.220	Inspection and Repair of Tail Rotor Blades . . . . .	9.33

**CHAPTER 10 – RIGGING, TRACK AND BALANCE**

<u>Section</u>	<u>Title</u>	<u>Page</u>
10.000	Rigging, Track and Balance . . . . .	10.1
10.001	Introduction . . . . .	10.1
10.002	Rod End Adjustment Procedure for Rigging . . . . .	10.1
10.100	Rigging . . . . .	10.2
10.110	Main Rotor Flight Controls . . . . .	10.2
10.111	Cyclic Controls . . . . .	10.2
10.112	Swashplate . . . . .	10.3
10.113	Collective Control . . . . .	10.3
10.120	Main Rotor . . . . .	10.3
10.121	Cyclic Travel Rigging . . . . .	10.8
10.122	Collective Travel Rigging . . . . .	10.11
10.130	Tail Rotor Flight Controls . . . . .	10.12
10.131	Pedals . . . . .	10.12
10.132	A316 Bellcrank . . . . .	10.12
10.133	A331 Bellcrank . . . . .	10.12
10.134	A120-1 Bellcrank . . . . .	10.15
10.135	Tail Rotor Pitch Links . . . . .	10.15
10.140	Tail Rotor Rigging . . . . .	10.15
10.150	Throttle Correlation Rigging . . . . .	10.19
10.200	Track and Balance . . . . .	10.21
10.210	Equipment Requirements . . . . .	10.21
10.220	Equipment Installation . . . . .	10.22
10.221	Main Rotor Equipment Installation . . . . .	10.22



**CONTENTS**

**CHAPTER 10 – RIGGING, TRACK AND BALANCE (Continued)**

<u>Section</u> <u>Title</u>	<u>Page</u>
10.222 Tail Rotor Equipment Installation . . . . .	10.23
10.230 Main Rotor Track and Balance Procedure . . . . .	10.27
10.231 Main Rotor Balance Adjustments . . . . .	10.28
10.232 Main Rotor Pitch Link Adjustment . . . . .	10.28
10.233 Main Rotor Trim Tab Adjustment . . . . .	10.31
10.234 Main Rotor Track and Balance Trouble Shooting . . . . .	10.33
10.240 Tail Rotor Balance Procedure . . . . .	10.35
10.250 Autorotational RPM Adjustment . . . . .	10.38

**CHAPTER 11 – HEATING AND VENTILATION**

<u>Section</u> <u>Title</u>	<u>Page</u>
11.000 Heating and Ventilation . . . . .	11.1
11.001 Introduction . . . . .	11.1
11.002 Description . . . . .	11.1
11.100 Cabin Heater . . . . .	11.1
11.110 Cabin Heater Removal . . . . .	11.1
11.120 Cabin Heater Installation . . . . .	11.2
11.200 Ventilation . . . . .	11.4
11.210 Cabin Air Vent Removal . . . . .	11.4
11.220 Cabin Air Vent Installation . . . . .	11.6
11.230 Door Vent . . . . .	11.6

**CHAPTER 12 – FUEL SYSTEM**

<u>Section</u> <u>Title</u>	<u>Page</u>
12.000 Description . . . . .	12.1
12.100 Fuel Tanks . . . . .	12.3
12.110 Main Tank . . . . .	12.3
12.120 Auxiliary Tank . . . . .	12.7
12.200 Fuel Vents . . . . .	12.11
12.210 (Vent Line) Rollover Valve Assemblies . . . . .	12.11
12.300 Drain Valves . . . . .	12.11
12.400 Fuel Quantity . . . . .	12.13
12.410 Fuel Quantity Senders . . . . .	12.13
12.420 Fuel Quantity Indication . . . . .	12.14
12.430 Low-Fuel Switch Assembly . . . . .	12.15
12.500 Gascolator Assembly . . . . .	12.16
12.600 Minimum Fuel Flow Check . . . . .	12.17

**CHAPTER 13 – INSTRUMENTS**

<u>Section</u> <u>Title</u>	<u>Page</u>
13.000 Description . . . . .	13.1
13.100 Pitot-Static System . . . . .	13.3
13.200 Primary Instruments . . . . .	13.4

**CONTENTS**

**CHAPTER 13 – INSTRUMENTS (Continued)**

<u>Section</u>	<u>Title</u>	<u>Page</u>
13.210	Vertical Speed Indicator . . . . .	13.4
13.220	Airspeed Indicator . . . . .	13.4
13.230	Engine and Rotor Dual Tachometer . . . . .	13.4
13.240	Altimeter . . . . .	13.4
13.250	Manifold Pressure Gage . . . . .	13.5
13.260	Magnetic Compass . . . . .	13.5
13.300	Engine Gages . . . . .	13.5
13.310	Ammeter . . . . .	13.5
13.320	Engine Oil Pressure Gage . . . . .	13.5
13.330	Engine Oil Temperature Gage . . . . .	13.5
13.340	Cylinder Head Temperature Gage . . . . .	13.5
13.350	Fuel Quantity Gages . . . . .	13.6
13.360	Carburetor Air Temperature Gage . . . . .	13.6
13.400	Additional Standard Indicating Equipment . . . . .	13.6
13.410	Clock . . . . .	13.6
13.420	Outside Air Temperature (OAT) Gage/Voltmeter . . . . .	13.6
13.430	Hourmeter . . . . .	13.6
13.500	Optional Equipment . . . . .	13.9
13.510	Aspen PFD Installation . . . . .	13.9
13.600	Instrument Markings . . . . .	13.11
13.700	Troubleshooting . . . . .	13.11

**CHAPTER 14 – ELECTRICAL AND AVIONICS SYSTEMS**

<u>Section</u>	<u>Title</u>	<u>Page</u>
14.000	Electrical and Avionics Systems . . . . .	14.1
14.001	Introduction . . . . .	14.1
14.002	Description . . . . .	14.1
14.100	Dual Tachometer Adjustment . . . . .	14.2
14.200	Low RPM Horn Adjustment . . . . .	14.3
14.300	Alternator Output Voltage Adjustment without A942-1 . . . . .	14.3
14.400	Troubleshooting . . . . .	14.3
14.405	A569 Low Rotor RPM Warning Unit . . . . .	14.3
14.410	Electrical Troubleshooting . . . . .	14.4
14.420	Instrument Troubleshooting . . . . .	14.6
14.430	Clutch Actuator Troubleshooting . . . . .	14.7
14.440	Electrically-Powered Instrument Calibration Values . . . . .	14.8
14.500	Electrical Load Analysis . . . . .	14.11
14.600	Electrical Systems Schematics . . . . .	14.12
14.700	Antenna Locations . . . . .	14.24A
14.800	Avionics Schematics . . . . .	14.25
14.900	Upper Console Harness Plugs . . . . .	14.41
14.1000	IFR Trainer . . . . .	14.43
14.1010	IFR Trainer Component Loads . . . . .	14.43
14.1020	IFR Trainer Console Access . . . . .	14.45
14.1030	IFR Trainer Component Location . . . . .	14.46

**CONTENTS**

**CHAPTER 14 — ELECTRICAL AND AVIONICS SYSTEMS (Continued)**

<u>Section</u> <u>Title</u>	<u>Page</u>
14.1040 IFR Trainer Avionics Schematics . . . . .	14.47
14.1100 R22 Mariner Avionics Schematics . . . . .	14.60
14.1200 Avionics for R22 Helicopter S/N 4591, 4650, 4651, 4656 & Subsequent . . . . .	14.67
14.1210 A024-9 Electrical System Installation . . . . .	14.67
14.1220 A036-9 Electrical Components Installation . . . . .	14.67
14.1230 A804-12 Transponder (Garmin GTX 330 ES) Installation . . . . .	14.71
14.1240 C058-5 Cyclic Grip Assembly . . . . .	14.75
14.1250 C800-1 Aspen PFD Installation . . . . .	14.75
14.1260 C802-2 COM Radio (Garmin GTR 225B) Installation . . . . .	14.77
14.1270 C822-1 Audio Control (Garmin GMA 350H) Installation . . . . .	14.81
14.1280 C831 GPS (Garmin GTN 600 series) Installation . . . . .	14.85

**CHAPTER 15 — FURNISHINGS**

<u>Section</u> <u>Title</u>	<u>Page</u>
15.000 Furnishings . . . . .	15.1
15.001 Introduction . . . . .	15.1
15.002 Description . . . . .	15.1
15.100 Seat Belt . . . . .	15.1
15.110 Seat Belt Removal . . . . .	15.1
15.120 Seat Belt Installation . . . . .	15.1
15.200 Seat Assembly . . . . .	15.3
15.210 Seat Bottom Assembly Removal and Installation . . . . .	15.3
15.220 Seat Back Assembly Removal and Installation . . . . .	15.3
15.300 Carpet . . . . .	15.4
15.310 Carpet Removal . . . . .	15.4
15.320 Carpet Installation . . . . .	15.5
15.400 Foam Installation . . . . .	15.5
15.410 Foam Removal . . . . .	15.5
15.420 Foam Installation . . . . .	15.5
15.500 Map Holder Pocket . . . . .	15.6
15.510 Map Holder Removal . . . . .	15.6
15.520 Map Holder Installation . . . . .	15.6
15.600 Fire Extinguisher . . . . .	15.6
15.610 Fire Extinguisher Holder Removal . . . . .	15.6
15.620 Fire Extinguisher Holder Installation . . . . .	15.7
15.700 License Holder . . . . .	15.7
15.710 License Holder Removal . . . . .	15.7
15.720 License Holder Installation . . . . .	15.7
15.800 Operator’s Manual Strap . . . . .	15.8
15.810 Strap Removal . . . . .	15.8
15.820 Strap Installation . . . . .	15.8

**CONTENTS****CHAPTER 16 — SPECIAL TOOLS**

<u>Section</u>	<u>Title</u>	<u>Page</u>
16.100	Special Tools . . . . .	16.1
16.200	Illustrations and Tasks . . . . .	16.3

**CHAPTER 17 — REVISION LOG**

<u>Section</u>	<u>Title</u>	<u>Page</u>
17.100	Revision Log . . . . .	17.1