

APPENDIX A  
ALPHABETICAL INDEX

<i>Figure</i>	<i>Title</i>	<i>Page</i>
—	Alphabetical Index . . . . .	A3

Intentionally Blank

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
A/C Compressor Cut Off Switch	21.11	Anchor – Seat Belt . . . . .	25.7	Ballast – Nose . . . . .	8.1
Access Panels – Chin . . . . .	6.1	Angle – ELT Mount . . . . .	25.34	Ballast – Empennage . . . . .	8.3
Access Panels – Pedals & Floor	6.3	Angle – Headset Holder . . . . .	21.15	Ballast Plate . . . . .	8.1
Access Panels – Forward Cabin	6.5	Angle – Headset Holder . . . . .	21.31	Barrier – Instrument Cluster . . .	95.6
Access Panels – Mid Cabin . . . .	6.7	Angle – Headset Holder . . . . .	33.15	Barrier – Vent Door . . . . .	52.2
Access Panels – Aft Cabin . . . .	6.11	Angle – Headset Holder . . . . .	33.17	Barrier – Vent Door . . . . .	52.8
Access Panels – Belly . . . . .	6.13	Angle – Headset Holder . . . . .	97.11	Battery – Sealed Case . . . . .	96.1
Actuator – Clutch (Belt Tension)	63.19	Angle – Radio Installation . . . . .	97.1	Battery – Sealed Case . . . . .	96.6
Actuator Test Plug Assembly . . .	96.55	Angle – Vent Door . . . . .	52.3	Battery – Sealed Case . . . . .	96.9
Adapter – Gimbal Installation . . .	90.1	Angle – Vent Door . . . . .	52.9	Battery – Sealed Case . . . . .	96.13
Adapter – Oil Filter . . . . .	79.9	Antenna – DME . . . . .	6.21	Battery – Sealed Case . . . . .	96.19
Adhesive – Carpet . . . . .	25.20	Antenna – DME . . . . .	97.20	Battery – Sealed Case . . . . .	96.23
Adhesive – Clamp . . . . .	32.17	Antenna – ELT . . . . .	6.27	Battery – Sealed Case . . . . .	96.29
Adhesive – Door Seal . . . . .	52.1	Antenna – ELT . . . . .	25.33	Battery – Sealed Case . . . . .	96.31
Adhesive – Door Seal . . . . .	52.7	Antenna – Microwave . . . . .	92.19	Bead Clamp – Muffler . . . . .	71.21
Adhesive – Foam Grip . . . . .	67.4	Antenna – Radar Altimeter . . . . .	6.17	Bearing – Clutch Assembly . . . .	63.15
Adhesive – Foam Grip . . . . .	67.12	Antenna – Transponder . . . . .	97.20	Bearing – Cyclic Grip . . . . .	67.4
Adhesive – Foam Grip . . . . .	67.23	Antenna – UHF Transceiver . . . . .	97.37	Bearing – Cyclic Grip . . . . .	67.12
Adhesive – Grommet . . . . .	21.38	Arm – Alternator . . . . .	71.51	Bearing – Cyclic Pivot . . . . .	67.9
Adhesive – Grommet . . . . .	28.18	Arm – Alternator . . . . .	71.60	Bearing – Cyclic Pivot . . . . .	67.39
Adhesive – Grommet . . . . .	53.16	Arm – Alternator . . . . .	90.29	Bearing – Elastomeric . . . . .	64.1
Adhesive – Grommet . . . . .	90.19	Arm – Damper . . . . .	65.5	Bearing – Elastomeric . . . . .	64.7
Adhesive – Grommet . . . . .	95.31	Arm – Rotor Brake . . . . .	63.2	Bearing – Fanshaft . . . . .	63.19
Adhesive – Grommet . . . . .	96.24	Arm – Rotor Brake . . . . .	63.8	Bearing – Fork . . . . .	67.61
Adhesive – Insulation . . . . .	25.23	Arm – Swashplate . . . . .	67.61	Bearing – Fork . . . . .	67.65
Adhesive – Molding . . . . .	90.17	Arm – Throttle . . . . .	76.1	Bearing – Fork . . . . .	67.69
Adhesive – Molding . . . . .	95.1	Arm Assembly – Door . . . . .	52.3	Bearing – Ground Wheel . . . . .	9.1
Adhesive – Molding . . . . .	95.13	Arm Assembly – Rotor Brake . . .	63.8	Bearing – Ground Wheel . . . . .	9.5
Adhesive – Seal . . . . .	52.1	Arm Assembly – Vent Door . . . .	52.2	Bearing – Main Rotor Hub . . . . .	62.7
Adhesive – Seal . . . . .	52.7	Arm Assembly – Vent Door . . . .	52.8	Bearing – Mast Tube . . . . .	63.4
Adhesive – Seal . . . . .	96.5	Aspen PFD . . . . .	95.63	Bearing – TR Pitch Control . . . .	65.8
Adhesive – Seal . . . . .	96.9	Aspen PFD . . . . .	95.65	Bearing – Tail Rotor Hub . . . . .	64.1
Adhesive – Seal (Fairing) . . . . .	90.6	Aspen MFD . . . . .	95.65	Bearing – Tail Rotor Hub . . . . .	64.6
Adhesive – Seal (Fairing) . . . . .	92.3	Attitude Indicator . . . . .	95.2	Bearing – Tail Rotor Hub . . . . .	64.9
Adhesive – Seal (Fairing) . . . . .	92.7	Autopilot – Computer . . . . .	22.7	Bearing – Yoke . . . . .	67.27
Adjustable Pedals . . . . .	67.77	Autopilot – Pitch Servo . . . . .	22.1	Bearing – Yoke . . . . .	67.31
ADS-B Receiver . . . . .	97.33	Autopilot – Roll Servo . . . . .	22.5	Bearing Assembly – Damper . . . .	65.5
Air Box Assembly . . . . .	71.13	Aux Fuel Tank Bladder . . . . .	28.9	Bearing Block – Pedal Assy . . . .	67.77
Air Box Assembly . . . . .	71.17	Aux Fuel Tank Assembly . . . . .	28.9	Bearing Block – Pedal Assy . . . .	67.81
Air Filter . . . . .	71.14	Avionics Blower . . . . .	97.25	Bearing Tools (Elastomeric) . . . .	99.19
Air Filter . . . . .	71.17	Baffle Assembly – Alternator . . .	71.51	Bellcrank – Carb Heat Assist . . . .	76.13
Airspeed Indicator . . . . .	95.1	Baffle Assembly – Alternator . . .	71.59	Bellcrank – Tail Rotor Control . . .	67.85
Airspeed Indicator . . . . .	95.19	Baffle Assembly – MR Gearbox . . .	63.3	Bellcrank – Tail Rotor Control . . .	67.89
Airspeed Indicator . . . . .	95.39	Balance Strip – Main Rotor . . . .	62.1	Bellcrank – Tail Rotor Control . . .	67.91
Airspeed Indicator . . . . .	95.43	Balance Strip – Main Rotor . . . .	62.3	Bellcrank – Tail Rotor Gearbox . . .	65.7
Alternator . . . . .	71.51	Balance Weight – Tail Rotor . . . .	64.5	Bellcrank – Throttle . . . . .	21.11
Alternator . . . . .	71.59	Balancing System (Chadwick) . . . .	18.5	Belly Panel . . . . .	6.13
Alternator . . . . .	90.29	Balancing System (ACES) . . . . .	18.1	Belly Panel . . . . .	6.19
Alternator Control Unit . . . . .	71.63	Balancing System (ACES) . . . . .	18.3	Belly Panel . . . . .	6.21
Altimeter . . . . .	95.40	Ball – Carb Heat Assist . . . . .	76.13	Belt – Seat . . . . .	25.7
Altimeter . . . . .	95.44	Ball – Ground Handling . . . . .	9.11	Belt – Seat . . . . .	25.9
Ammeter . . . . .	95.7	Ball Stud – Door . . . . .	52.3	Belt – Seat . . . . .	25.11
Ammeter . . . . .	95.47	Ball Stud – Door . . . . .	52.8	Belt – Seat . . . . .	25.15
Ammeter . . . . .	95.51			Belt – V (Drive) . . . . .	63.23

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Belt – V (Alternator) . . . . .	71.51	Bracket – Droop Stop . . . . .	62.7	Cable – Battery . . . . .	96.37
Belt – V (Alternator) . . . . .	71.60	Bracket – ELT . . . . .	25.29	Cable – Battery . . . . .	96.38
Belt – V (Alternator) . . . . .	90.29	Bracket – ELT . . . . .	25.33	Cable – Battery . . . . .	96.41
Belt – V (Air Conditioning) . . . . .	21.5	Bracket – Lower Bearing Mount . . . . .	63.19	Cable – Battery . . . . .	96.43
Blade – Main Rotor . . . . .	62.1	Bracket – Lower Bearing Mount . . . . .	71.27	Cable – Cabin Air Vent . . . . .	21.1
Blade – Main Rotor . . . . .	62.3	Bracket – Lower Bearing Mount . . . . .	71.29	Cable – Camera Installation . . . . .	92.9
Blade – Tail Rotor . . . . .	64.1	Bracket – Mag Pickup . . . . .	67.62	Cable – Camera Installation . . . . .	92.11
Blade – Tail Rotor . . . . .	64.5	Bracket – Mag Pickup . . . . .	67.66	Cable – Camera Installation . . . . .	92.13
Blade Support – Main Rotor . . . . .	10.9	Bracket – Rotor Brake . . . . .	63.8	Cable – Camera Installation . . . . .	92.15
Blind Encoder . . . . .	97.19	Bracket – RPM Sensor . . . . .	63.2	Cable – Ground . . . . .	96.79
Blind Encoder . . . . .	97.23	Bracket – Scroll . . . . .	71.27	Cable – Heater Control . . . . .	21.1
Blind Encoder . . . . .	97.35	Bracket – Servo Mount . . . . .	29.3	Cable – Heater Control . . . . .	21.2
Block – Bearing . . . . .	67.77	Brake – Rotor . . . . .	63.2	Cable – Lever Assy (Floats) . . . . .	32.17
Block – Bearing . . . . .	67.81	Brake – Rotor . . . . .	63.8	Cable – Mixture Control . . . . .	76.9
Block – Carb Heat Assist . . . . .	76.13	Breather Tube – Engine . . . . .	71.5	Cable – Mixture Control . . . . .	76.17
Block – Gimbal Installation . . . . .	90.9	Breather Tube – Engine . . . . .	71.9	Cable – Mixture Control . . . . .	97.1
Block – Primer Pump . . . . .	28.33	Buckle Assembly – Seat Belt . . . . .	25.7	Cable – Tailcone . . . . .	6.29
Block – Tail Rotor Drive Shaft . . . . .	65.1	Buckle Assembly – Seat Belt . . . . .	25.9	Cable – Tailcone . . . . .	53.25
Block – Tail Rotor Guard . . . . .	53.38	Buckle Assembly – Seat Belt . . . . .	25.15	Cable – Tailcone . . . . .	53.29
Blocks – Swashplate Rigging . . . . .	99.15	Bulb – Digital Clock . . . . .	95.25	Cable Assembly – VCR . . . . .	90.17
Block Assembly – Float Gear . . . . .	9.9	Bulb – Position Light . . . . .	32.33	Call Letters Plate . . . . .	95.40
Blower Assembly . . . . .	97.25	Bulb – Position Light . . . . .	33.5	Camera – Micro . . . . .	92.9
Blower Assembly . . . . .	97.27	Bulb – Post Light . . . . .	67.1	Camera – Micro . . . . .	92.11
Bolt – MR Blade & Hub Attach . . . . .	62.7	Bulb – Post Light . . . . .	95.6	Camera – Micro . . . . .	92.13
Bolt – Tail Rotor Assembly . . . . .	64.1	Bulb – Post Light . . . . .	95.14	Cap – Camera Mount . . . . .	92.15
Bolt – Tail Rotor Assembly . . . . .	64.5	Bulb – Post Light . . . . .	95.23	Cap – Charging Post . . . . .	96.77
Bolt – Tail Rotor Assembly . . . . .	64.9	Bulb – Searchlight . . . . .	90.6	Cap – Cooling Panel . . . . .	71.35
Booster – Power . . . . .	96.69	Bulb – Tail Light . . . . .	33.7	Cap – Float Valve . . . . .	32.25
Boot – Collective . . . . .	6.5	Bulkhead – Aft (MRGB area) . . . . .	53.16	Cap – Fuel Tank . . . . .	28.5
Boot – Cyclic . . . . .	67.1	Bulkhead Adapter – MAP Line . . . . .	96.50	Cap – Fuel Tank . . . . .	28.9
Boot – Main Rotor Blade . . . . .	62.1	Bus Bar – Circuit Breaker Panel . . . . .	96.47	Cap – Hydraulic Line . . . . .	29.17
Boot – Main Rotor Blade . . . . .	62.3	Bus Bar – Ground . . . . .	95.6	Cap – Instrument Light . . . . .	95.7
Boot – Swashplate . . . . .	67.61	Bus Bar – Ground . . . . .	95.14	Cap – Landing Gear Rain . . . . .	32.2
Boot – Swashplate . . . . .	67.65	Bushing – Charging Post . . . . .	96.77	Cap – Landing Gear Rain . . . . .	32.19
Boot – Swashplate . . . . .	67.69	Bushing – Damper Assembly . . . . .	65.5	Cap – Tail Rotor Gearbox . . . . .	65.11
Box – Battery . . . . .	96.2	Bushing – Gimbal Installation . . . . .	90.1	Cap – Windshield Bow . . . . .	52.12
Box – Battery . . . . .	96.6	Bushing – Primer Line . . . . .	28.33	Carb Air Temp Gage . . . . .	95.8
Box – Battery . . . . .	96.9	Bushing – Primer Line . . . . .	28.37	Carb Air Temp Gage . . . . .	95.14
Box – Battery . . . . .	96.15	Bushing – Push–Pull Tube Guide . . . . .	67.51	Carb Air Temp Gage . . . . .	95.47
Box – Battery . . . . .	96.16	Button – Intercom Switch . . . . .	97.13	Carburetor . . . . .	71.7
Box – Battery . . . . .	96.20	Bypass Valve – Oil Cooler . . . . .	79.9	Carburetor . . . . .	71.14
Box – Battery . . . . .	96.24	Bypass Valve – Oil Cooler . . . . .	79.12	Carpet . . . . .	25.19
Box – Battery . . . . .	96.27			Carpet . . . . .	25.20
Box – Battery . . . . .	96.31	Cable – Battery . . . . .	96.1	Cartridge Assy – Compressor . . . . .	21.5
Box – Cyclic . . . . .	67.3	Cable – Battery . . . . .	96.5	Channel – Servo Installation . . . . .	29.3
Box – Cyclic . . . . .	67.17	Cable – Battery . . . . .	96.9	Charging Post – Battery . . . . .	96.77
Box – Heater Installation . . . . .	21.37	Cable – Battery . . . . .	96.13	Chin (Fiberglass) . . . . .	52.12
Box Assembly – Monitor . . . . .	92.17	Cable – Battery . . . . .	96.15	Chip Detectors . . . . .	63.2
Brace – Pitot Tube . . . . .	95.31	Cable – Battery . . . . .	96.19	Chip Detectors . . . . .	65.7
Brace Assembly – Aft Console . . . . .	6.7	Cable – Battery . . . . .	96.23	Circle Cotter – Battery Install . . . . .	96.1
Bracket (Antenna Mount) . . . . .	6.15	Cable – Battery . . . . .	96.27	Circle Cotter – Battery Install . . . . .	96.5
Bracket (Antenna Mount) . . . . .	90.27	Cable – Battery . . . . .	96.29	Circle Cotter – Battery Install . . . . .	96.9
Bracket (Antenna Mount) . . . . .	92.19	Cable – Battery . . . . .	96.31	Circle Cotter – Battery Install . . . . .	96.13
Bracket – Carburetor . . . . .	76.10	Cable – Battery . . . . .	96.33	Circle Cotter – Battery Install . . . . .	96.15

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Circuit Breakers . . . . .	96.47	Clamp – Primer Line . . . . .	28.37	Connector – Hydraulic Res. . . . .	29.8
Clamp – Airframe Tube . . . . .	53.20	Clamp – Relay Installation . . . . .	96.43	Connector – Hydraulic Res. . . . .	29.12
Clamp – Antenna Cable . . . . .	6.23	Clamp – Rotor Brake . . . . .	63.7	Connector – Magneto . . . . .	71.5
Clamp – Antenna Cable . . . . .	6.25	Clamp – Searchlight Installation . . . . .	90.5	Connector – Magneto . . . . .	71.10
Clamp – Antenna Cable . . . . .	6.29	Clamp – Siren Speaker . . . . .	90.15	Connector – Magneto . . . . .	96.63
Clamp – Antenna Cable . . . . .	6.31	Clamp – Strut Fairing . . . . .	32.9	Connector – Master Radio Relay . . . . .	96.61
Clamp – Antenna Cable . . . . .	6.35	Clamp – Tailcone (Cables) . . . . .	6.29	Connector – Rotor Brake . . . . .	63.7
Clamp – Cable Mount . . . . .	32.13	Clamp – Tailcone (Cables) . . . . .	53.25	Connector – Searchlight Harness . . . . .	90.5
Clamp – Carb Heat Assist . . . . .	76.13	Clamp – Tailcone (Cables) . . . . .	53.29	Connector – Spotlight Install . . . . .	33.15
Clamp – Carb Heat Cable . . . . .	76.9	Clamp – Vent Cable . . . . .	21.1	Connector – Spotlight Install . . . . .	33.17
Clamp – Cooling Hoses . . . . .	29.8	Clamp – Vent Cable . . . . .	21.2	Connector – Trim Motor . . . . .	67.2
Clamp – Cooling Hoses . . . . .	29.12	Clamp – Vent Tube . . . . .	28.1	Connector – VCR Wiring . . . . .	90.19
Clamp – Cooling Hoses . . . . .	71.27	Clamp – VCR Wiring . . . . .	90.19	Connectors – Antenna Cable . . . . .	6.29
Clamp – Cooling Hoses . . . . .	71.31	Clamp Assy – Blade Support . . . . .	10.9	Console – Aft Cabin . . . . .	6.7
Clamp – Cooling Hoses . . . . .	71.35	Cleat – Support Strap . . . . .	10.9	Console – Aft Cabin . . . . .	6.11
Clamp – Cooling Hoses . . . . .	71.37	Clevis – Servo Installation . . . . .	29.1	Console Assembly . . . . .	95.1
Clamp – Cooling Hoses . . . . .	71.42	Clevis – Servo Installation . . . . .	29.3	Console Assembly . . . . .	95.5
Clamp – Cooling Hoses . . . . .	71.46	Clip – Access Cover . . . . .	71.31	Console Assembly . . . . .	95.11
Clamp – Cooling Hoses . . . . .	71.49	Clip – Airbox (IO–540) . . . . .	71.17	Console Assembly . . . . .	95.13
Clamp – Cooling Hoses . . . . .	96.1	Clip – Door Assembly . . . . .	52.4	Console Assembly . . . . .	95.38
Clamp – Cooling Hoses . . . . .	96.5	Clip – Door Assembly . . . . .	52.9	Console Assembly . . . . .	95.42
Clamp – Cooling Hoses . . . . .	96.9	Clip – Micro Camera Mount . . . . .	92.9	Control – Cabin Air . . . . .	21.1
Clamp – Cooling Hoses . . . . .	96.13	Clipnut – NAV Antenna Mount . . . . .	6.15	Control – Cabin Heat . . . . .	21.1
Clamp – Cooling Hoses . . . . .	96.15	Clipnut – Attach Plate . . . . .	71.31	Control – Carb Heat Assist . . . . .	76.14
Clamp – ELT Installation . . . . .	25.33	Clipnut – Attach Plate . . . . .	71.37	Control – Mixture . . . . .	76.9
Clamp – Empennage . . . . .	53.37	Clipnut – Attach Plate . . . . .	71.41	Control – Throttle . . . . .	76.1
Clamp – Float Hoses . . . . .	32.27	Clipnut – Attach Plate . . . . .	71.46	Control Panel – Auto Pilot . . . . .	22.1
Clamp – Fuel Drain . . . . .	28.2	Clipnut – Battery Box . . . . .	96.29	Controller – Governor . . . . .	96.63
Clamp – Fuel Drain . . . . .	28.10	Clipnut – Battery Box . . . . .	96.31	Controller – Trim . . . . .	67.3
Clamp – Fuel Hose . . . . .	28.25	Clipnut – Floor Switch . . . . .	97.13	Converter – Power . . . . .	96.71
Clamp – Fuel Hose . . . . .	28.29	Clipnut – Strut Fairing . . . . .	32.9	Converter – Power . . . . .	96.73
Clamp – Heater Cable . . . . .	21.1	Clock . . . . .	95.8	Cooler – Oil . . . . .	79.1
Clamp – Horn Wiring . . . . .	95.5	Clock . . . . .	95.15	Cooler – Oil . . . . .	79.3
Clamp – Horn Wiring . . . . .	95.15	Clock . . . . .	95.25	Cooler – Oil . . . . .	79.7
Clamp – Hydraulic Line . . . . .	29.7	Clock – Digital . . . . .	95.40	Cooling Hose . . . . .	29.8
Clamp – Hydraulic Line . . . . .	29.8	Cluster – Instrument . . . . .	95.6	Cooling Hose . . . . .	29.12
Clamp – Hydraulic Line . . . . .	29.11	Clutch Assembly . . . . .	63.15	Cooling Hose . . . . .	71.31
Clamp – Hydraulic Line . . . . .	29.12	CO Detector . . . . .	95.48	Cooling Hose . . . . .	71.35
Clamp – Ignition Harness . . . . .	71.6	CO Detector . . . . .	95.52	Cooling Hose . . . . .	71.37
Clamp – Ignition Harness . . . . .	71.10	CO Detector . . . . .	95.55	Cooling Hose . . . . .	71.42
Clamp – Induction Hose . . . . .	71.13	CO Detector . . . . .	96.59	Cooling Hose . . . . .	71.46
Clamp – Main Rotor Blade Boot . . . . .	62.1	Collar – Carb Heat Assist . . . . .	76.13	Cooling Hose . . . . .	71.49
Clamp – Main Rotor Blade Boot . . . . .	62.3	Collective Spring Assembly . . . . .	67.25	Cord – Pop-Out Float Lacing . . . . .	32.19
Clamp – MAP Line . . . . .	96.50	Collective Stick Assembly . . . . .	67.21	Cord Assembly – Cyclic . . . . .	67.2
Clamp – Mast Tube . . . . .	53.11	Collective Switches . . . . .	96.57	Cord Assembly – Cyclic . . . . .	67.17
Clamp – Micro Camera Install . . . . .	92.9	Compass . . . . .	95.23	Cotter Pin – Cabin Air Control . . . . .	21.1
Clamp – Micro Camera Install . . . . .	92.11	Compressor – Air Conditioner . . . . .	21.5	Cotter Pin – Cyclic . . . . .	67.4
Clamp – Mixture Cable . . . . .	76.9	Condenser – Air Conditioner . . . . .	21.13	Cotter Pin – Ground Wheel . . . . .	9.2
Clamp – Muffler Shroud . . . . .	71.22	Connector – Actuator . . . . .	96.55	Cotter Pin – Ground Wheel . . . . .	9.6
Clamp – Nozzle Assembly . . . . .	71.49	Connector – Alternator . . . . .	90.29	Cotter Pin – Ground Wheel . . . . .	9.9
Clamp – Oil Lines . . . . .	79.3	Connector – ACU . . . . .	71.63	Cotter Pin – Main Rotor Install . . . . .	62.7
Clamp – Pitot/Static Tube . . . . .	95.27	Connector – Cable . . . . .	32.13	Cotter Pin – Pulley . . . . .	63.7
Clamp – Primer Line . . . . .	28.33	Connector – Cable . . . . .	63.7	Cotter Pin – Tail Rotor Gearbox . . . . .	65.11
Clamp – Primer Line . . . . .	28.34	Connector – ELT Switch . . . . .	25.34	Cotter Pin – Vent Door . . . . .	52.4

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Cotter Pin – Vent Door . . . . .	52.9	Cradle Assy – Blade Support . . .	10.9	Decals – Charging Post . . . . .	96.77
Counter Weight – Swashplate . .	67.61	Crates – Shipping . . . . .	99.23	Decals – Collective . . . . .	11.2
Cover – Antenna Mount . . . . .	6.23	Crates – Shipping . . . . .	99.25	Decals – Collective . . . . .	67.21
Cover – Antenna Mount . . . . .	53.25	Cross Tube (Landing Gear) . . . .	32.1	Decals – Collective . . . . .	67.22
Cover – Antenna Mount . . . . .	53.29	Cross Tube (Landing Gear) . . . .	32.2	Decals – Cyclic . . . . .	67.1
Cover – Collective . . . . .	6.5	Crystal – Instrument Cluster . . .	95.8	Decals – Cyclic . . . . .	67.11
Cover – Collective . . . . .	25.13	Cushion – Pilot . . . . .	25.1	Decals – Cyclic . . . . .	67.12
Cover – Collective . . . . .	25.17	Cyclic Grip Assembly . . . . .	67.11	Decals – Cyclic . . . . .	67.14
Cover – Cowl Panels . . . . .	53.1	Cyclic Grip Assembly . . . . .	67.12	Deflector – Cabin Heat . . . . .	21.37
Cover – Cowl Panels . . . . .	53.6	Cyclic Grip Assembly . . . . .	67.13	Deflector – Wind . . . . .	53.43
Cover – Cowl Panels . . . . .	53.16	Cyclic Grip Assembly . . . . .	67.14	Detector – Chip . . . . .	63.2
Cover – Cyclic . . . . .	67.1	Cyclic Grip Assembly . . . . .	67.15B	Detector – Chip . . . . .	65.7
Cover – Cyclic . . . . .	76.9	Cyclic Friction Assembly . . . . .	67.17	Detector – Carbon Monoxide . . .	96.59
Cover – Floor . . . . .	25.20	Cyclic Spring Assembly . . . . .	67.3	Deviation Card – Compass . . . .	95.23
Cover – Five-Point Harness . . . .	25.11	Cylinder Assy – Pop-Out Floats . .	32.15	Deviation Plate – Compass . . . .	95.23
Cover – Five-Point Harness . . . .	25.13	Cylinder Assy – Pop-Out Floats . .	32.9	Digital Clock . . . . .	95.8
Cover – Four-Point Harness . . . .	25.15	Cylinder Head Temp Meter . . . .	95.47	Digital Clock . . . . .	95.15
Cover – Four-Point Harness . . . .	25.17	Cylinder Head Temp Meter . . . .	95.51	Digital Clock . . . . .	95.25
Cover – Hyd. Pump Housing . . . .	63.1	Cylinder Head Temp Probe . . . .	96.50	Dimmer Assembly . . . . .	95.5
Cover – Gimbal Removed . . . . .	90.3			Dimmer Assembly . . . . .	95.15
Cover – Gimbal Removed . . . . .	92.3	Damper – Cyclic . . . . .	67.1	Dimmer Assembly . . . . .	95.55
Cover – Gimbal Removed . . . . .	92.7	Damper – Cyclic . . . . .	67.11	Dimmer Assembly . . . . .	95.59
Cover – Inspection (Tailcone) . . .	53.25	Damper Assy – TR Drive Shaft . .	65.1	Dimmer Assembly . . . . .	95.61
Cover – Inspection (Tailcone) . . .	53.29	Damper Assy – TR Drive Shaft . .	65.5	Dimmer Assembly . . . . .	96.59
Cover – Instrument Panel . . . . .	95.1	Decal – Battery Box . . . . .	96.1	Diode Assembly . . . . .	96.19
Cover – Instrument Panel . . . . .	95.5	Decal – Battery Box . . . . .	96.5	Diode Assembly . . . . .	96.23
Cover – Instrument Panel . . . . .	95.11	Decal – Battery Box . . . . .	96.9	Diode Assembly . . . . .	96.33
Cover – Pop-Out Float . . . . .	32.19	Decal – Battery Box . . . . .	96.15	Diode Assembly . . . . .	96.37
Cover – Primer Pump . . . . .	28.37	Decal – Battery Box . . . . .	96.19	Diode Assembly . . . . .	96.41
Cover – Seat Harness . . . . .	25.7	Decal – Battery Box . . . . .	96.23	Diode Assembly . . . . .	96.43
Cover – Seat Harness . . . . .	25.9	Decal – Battery Box . . . . .	96.27	Diode Assembly . . . . .	96.55
Cover – Seat Harness . . . . .	25.13	Decal – ELT Switch . . . . .	25.33	Dipstick – Oil . . . . .	71.5
Cover – Seat Harness . . . . .	25.17	Decal – ELT Switch . . . . .	25.33	Dipstick – Oil . . . . .	71.9
Cover – Scroll . . . . .	71.27	Decal – Float Cylinder . . . . .	32.13	Display – Bendix King XCVR . . .	97.37
Cover – Scroll . . . . .	71.29	Decal – Float Cylinder . . . . .	32.15	Door – Airbox . . . . .	71.14
Cover – Spark Plug Access . . . . .	71.31	Decal – Fuel Drain Instructions . .	11.5	Door – Cowl . . . . .	53.1
Cover – Spark Plug Access . . . . .	71.37	Decal – GB Fill Instructions . . . .	11.3	Door – Cowl . . . . .	53.5
Cover – Spark Plug Access . . . . .	71.42	Decal – GB Fill Instructions . . . .	63.3	Door – Cowl . . . . .	53.15
Cover – Spark Plug Access . . . . .	71.45	Decal – Hardpoint Installation . .	10.7	Doors – Cabin . . . . .	52.1
Cover – Aux Power Socket . . . . .	6.7	Decal – Hourmeter (Collective) . .	96.57	Doors – Cabin . . . . .	52.7
Cover – Spotlight Installation . . .	33.15	Decal – Hydraulic Reservoir . . . .	29.7	Doubler – Antenna . . . . .	6.21
Cover – Spotlight Installation . . .	33.17	Decal – Hydraulic Reservoir . . . .	29.12	Doubler – ELT Antenna Install . .	6.27
Cover – Throttle Linkage . . . . .	76.2	Decal – Power Outlet . . . . .	6.7	Doubler – ELT Antenna Install . .	25.33
Cover – Throttle Linkage . . . . .	76.6	Decal – Primer Installation . . . . .	28.33	Doubler – Tailcone . . . . .	53.26
Cover Assembly – Evaporator . . .	21.15	Decal – Radar Altimeter . . . . .	95.35	Doubler – Tailcone . . . . .	53.30
Cover – Windshields . . . . .	10.3	Decal – Scuff Plate . . . . .	25.20	Doubler Plate – Antenna . . . . .	6.21
Cover Assy – Police & ENG . . . .	90.19	Decal – Spotlight Switch . . . . .	33.17	Dowel Pin – Damper Assembly . .	65.5
Covers – Tunnel . . . . .	6.5	Decal – Tail Rotor (Danger) . . . .	6.7	Drain – Chin . . . . .	32.34
Covers – Tunnel . . . . .	6.11	Decal – Tail Rotor (Danger) . . . .	11.3	Drain – Gascolator . . . . .	28.15
Cowl Panels – Belly . . . . .	6.13	Decal – Tail Rotor Guard . . . . .	53.38	Drain Assembly . . . . .	28.10
Cowl Panels . . . . .	53.1	Decals . . . . .	11.1	Drain Plug – Landing Gear . . . .	32.19
Cowl Panels . . . . .	53.5	Decals . . . . .	11.2	Drain Plug – Landing Gear . . . .	32.29
Cowl Panels . . . . .	53.6	Decals . . . . .	11.3	Drain Plug – Pitot Tube . . . . .	95.27
Cowl Panels . . . . .	53.15	Decals . . . . .	11.5	Drain Tool – MR Gearbox . . . .	99.15
		Decals . . . . .	11.7		

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Drain Tube – Battery Box . . . . .	96.20	Face – Lower Console . . . . .	97.1	Fluid – Hydraulic . . . . .	29.12
Drain Tube – Battery Box . . . . .	96.24	Face – Upper Console . . . . .	95.1	Foam – Insulation . . . . .	25.23
Drain Tube – Evaporator . . . . .	21.23	Face – Upper Console . . . . .	95.11	Foam Grip – Collective . . . . .	67.21
Drain Valve – Fuel . . . . .	28.2	Face – Upper Console . . . . .	95.13	Foam Grip – Cyclic . . . . .	67.2
Drain Valve – Fuel . . . . .	28.10	Face – Upper Console . . . . .	95.20	Foam Grip – Cyclic . . . . .	67.13
Drain Valve – Fuel . . . . .	28.31	Fairing – Gimbal . . . . .	90.3	Foam Pad – Harness Install . . . . .	25.11
Drain Valve – Oil . . . . .	71.6	Fairing – Gimbal . . . . .	92.1	Foam Pad – Harness Install . . . . .	25.15
Drain Valve – Oil . . . . .	71.10	Fairing – Gimbal . . . . .	92.3	Foil (Aluminum) Tape . . . . .	21.15
Drive Shaft – Tail Rotor . . . . .	65.1	Fairing – Gimbal . . . . .	92.5	Foil (Aluminum) Tape . . . . .	21.19
Drive Shaft – Tail Rotor . . . . .	65.2	Fairing – Gimbal . . . . .	92.7	Foil (Aluminum) Tape . . . . .	21.38
Droop Stop . . . . .	62.7	Fairing – Mast . . . . .	53.11	Foil (Aluminum) Tape . . . . .	28.2
Duct – Heater . . . . .	21.37	Fairing – Strut . . . . .	32.9	Foil (Aluminum) Tape . . . . .	33.7
Duct Assembly – A/C . . . . .	21.31	Fan Assembly – Avionics . . . . .	97.25	Foil (Aluminum) Tape . . . . .	53.5
		Fan Assembly – Avionics . . . . .	97.27	Foil (Aluminum) Tape . . . . .	71.14
Elastic Cord – Flight Controls . . . . .	67.2	Fan Assembly – Avionics . . . . .	97.29	Foil (Aluminum) Tape . . . . .	71.22
Elastic Cord – Flight Controls . . . . .	67.9	Fan Assembly – Pilot Console . . . . .	97.3	Foil (Aluminum) Tape . . . . .	71.27
Elastic Cord – Flight Controls . . . . .	67.17	Fan Assembly – Pilot Console . . . . .	97.8	Foil (Aluminum) Tape . . . . .	71.29
Elastic Cord – Flight Controls . . . . .	67.42	Fan Shaft Bearing . . . . .	63.19	Foil (Aluminum) Tape . . . . .	71.31
Elastic Cord – Flight Controls . . . . .	67.85	Fanwheel Assembly . . . . .	63.23	Foil (Aluminum) Tape . . . . .	71.35
Elbow – Aux Tank Fuel Line . . . . .	28.2	Fanwheel Assembly . . . . .	71.65	Foil (Aluminum) Tape . . . . .	71.37
Elbow – Hydraulic Lines . . . . .	29.11	Fill Gun – Utility Float PSI Gage . . . . .	32.30	Foil (Aluminum) Tape . . . . .	71.41
Elbow – Hydraulic Lines . . . . .	29.15	Filler Plug – Hydraulic Reservoir . . . . .	29.7	Foil (Aluminum) Tape . . . . .	71.46
Elbow – Landing Gear . . . . .	32.5	Filler Plug – Hydraulic Reservoir . . . . .	29.11	Foil (Aluminum) Tape . . . . .	79.1
Elbow – Landing Gear . . . . .	32.19	Filler Plug – MR Gearbox . . . . .	63.2	Foil (Aluminum) Tape . . . . .	97.27
Elbow – Oil System . . . . .	79.1	Filler Plug – Tail Rotor Gearbox . . . . .	65.7	Fork Assy – Cyclic Torque Tube . . . . .	67.27
Elbow – Oil System . . . . .	79.3	Filter – Hydraulic Reservoir . . . . .	29.7	Fork Assy – Swashplate . . . . .	67.61
Elbow – Oil System . . . . .	79.7	Filter – Hydraulic Reservoir . . . . .	29.13	Frame Assembly . . . . .	53.19
Elbow – Oil System . . . . .	79.11	Filter – Oil . . . . .	79.9	Frame Assembly . . . . .	53.23
Elbow – Pitot Tube . . . . .	95.28	Filter – Oil . . . . .	79.12	Fuel Bladder . . . . .	28.5
Elbow – Primer Pump . . . . .	28.33	Fitting – Airspeed Indicator . . . . .	95.27	Fuel Bladder . . . . .	28.9
ELT Installation . . . . .	25.29	Fitting – Condenser . . . . .	21.13	Fuel Control . . . . .	28.25
ELT Installation . . . . .	25.33	Fitting (Elbow) . . . . .	28.31	Fuel Control . . . . .	76.17
Engine Components . . . . .	71.5	Fitting – Manifold Pressure Line . . . . .	96.50	Fuel Drain Valve . . . . .	28.2
Engine Components . . . . .	71.9	Fitting – Main Rotor Gearbox . . . . .	63.3	Fuel Drain Valve . . . . .	28.10
Engine Manual . . . . .	99.15	Fitting – Pitot Tube . . . . .	95.27	Fuel Drain Valve . . . . .	28.15
Empennage . . . . .	53.37	Fire Detection Switch . . . . .	96.49	Fuel Drain Valve . . . . .	28.31
End Cap – Collective . . . . .	67.22	Fire Extinguisher . . . . .	25.25	Fuel Mixture Control . . . . .	76.9
End Cap – Cyclic . . . . .	67.4	Fire Extinguisher . . . . .	25.27	Fuel Mixture Control . . . . .	76.17
End Cover – MR Gearbox . . . . .	63.2	Flash Tube – Strobe . . . . .	33.3	Fuel Primer Installation . . . . .	28.33
Engine Mounts . . . . .	71.1	Flathead Pin . . . . .	67.77	Fuel Primer Installation . . . . .	28.37
Engine Mounts . . . . .	71.3	Flex Plates . . . . .	67.81	Fuel Pump – Mechanical . . . . .	28.31
Engine Mounts . . . . .	71.5	Flex Plates . . . . .	63.13	Fuel Quantity Meter . . . . .	95.47
Engine Mounts . . . . .	71.9	Float – Landing Gear . . . . .	65.1	Fuel Quantity Meter . . . . .	95.51
Engine Oil . . . . .	12.1	Float – Landing Gear . . . . .	32.19	Fuel Quantity Sender . . . . .	28.7
Escutcheon (Fuel Primer) . . . . .	28.37	Float – Landing Gear . . . . .	32.29	Fuel Quantity Sender . . . . .	28.10
Evaporator Assembly – A/C . . . . .	21.15	Float – Pop-Out . . . . .	32.23	Fuel Return Line Assembly . . . . .	28.25
Evaporator Assembly – A/C . . . . .	21.19	Float – Pop-Out . . . . .	32.25	Fuel Return Line Assembly . . . . .	28.29
Exhaust System . . . . .	71.21	Float Ground Handling Wheels . . . . .	9.5	Fuel Tanks . . . . .	28.1
Extended Landing Gear . . . . .	32.1	Float Ground Handling Wheels . . . . .	9.9	Fuel Tanks . . . . .	28.2
Extension – Skid . . . . .	32.2	Float Repair Kit . . . . .	32.25	Fuel Tanks . . . . .	28.9
Extension – Skid . . . . .	32.19	Float Repair Kit . . . . .	32.30	Fuel Valve . . . . .	28.13
Extinguisher – Fire . . . . .	25.25	Float Stabilizer . . . . .	53.41	Fuse – Actuator . . . . .	96.49
Extinguisher – Fire . . . . .	25.27	Fluid – Hydraulic . . . . .	29.7	Fuse – Actuator . . . . .	96.55
Eye Bolt – Blade Strut . . . . .	10.9			Fuse – Diode Assembly . . . . .	96.19

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Fuse – Diode Assembly . . . . .	96.23	Gasket – Strobe Light . . . . .	33.1	Grommet – Searchlight Install . .	90.5
Fuse – Diode Assembly . . . . .	96.33	Gasket – Strobe Light . . . . .	33.3	Grommet – Tailcone . . . . .	53.25
Fuse – Diode Assembly . . . . .	96.34	Gasket – TRGB Filler Vent Plug . .	65.8	Grommet – Tailcone . . . . .	53.26
Fuse – Diode Assembly . . . . .	96.37	Gearbox – Main Rotor . . . . .	63.1	Grommet – Tailcone . . . . .	53.29
Fuse – Diode Assembly . . . . .	96.41	Gearbox – Tail Rotor . . . . .	65.7	Grommet – Tailcone . . . . .	53.30
Fuse – Diode Assembly . . . . .	96.65	Gearmotor – Actuator . . . . .	63.19	Grommet – Tailcone . . . . .	96.29
Fuse Block . . . . .	96.49	Gearmotor – Trim . . . . .	67.2	Grommet – Tailcone . . . . .	96.31
Fuse Block . . . . .	96.65	Gimbal – ENG Helicopter . . . . .	92.1	Grommet (Wiring) . . . . .	53.25
Fuse Holder . . . . .	96.53	Gimbal – ENG Helicopter . . . . .	92.5	Grommet (Wiring) . . . . .	53.29
		Gimbal – Police Helicopter . . . . .	90.1	Grommet (Wiring) . . . . .	53.37
Gage – Float . . . . .	32.30	Gimbal Assembly – Searchlight . . .	90.5	Grommet (Wiring) . . . . .	67.11
Gages . . . . .	95.8	Governor Assembly . . . . .	67.27	Grommet (Wiring) . . . . .	90.5
Gages . . . . .	95.14	Governor Controller . . . . .	96.63	Grommet (Wiring) . . . . .	90.19
Gages – Sight . . . . .	29.7	GPS Receiver . . . . .	97.3	Ground Cable (Alternator) . . . . .	71.59
Gages – Sight . . . . .	29.11	Grease – Foot Pedals . . . . .	67.77	Ground Cable (Alternator) . . . . .	90.29
Gages – Sight . . . . .	63.1	Grease – Foot Pedals . . . . .	67.81	Ground Cable (Battery) . . . . .	96.1
Gages – Sight . . . . .	65.7	Grease – Ground Handling Wheel . .	9.1	Ground Cable (Battery) . . . . .	96.5
Gages – Sight . . . . .	65.8	Grease – Ground Handling Wheel . .	9.5	Ground Cable (Battery) . . . . .	96.9
Gang Channel – Door Post . . . . .	25.11	Grip – Foam (Cyclic) . . . . .	67.2	Ground Cable (Battery) . . . . .	96.13
Gang Channel – Door Post . . . . .	25.15	Grip – Foam (Cyclic) . . . . .	67.13	Ground Cable (Battery) . . . . .	96.15
Gang Channel – Mast Fairing . . . . .	53.11	Grip Assembly – Cyclic . . . . .	67.1	Ground Cable (Battery) . . . . .	96.19
Garmin – GPS Receiver . . . . .	97.3	Grip Assembly – Cyclic . . . . .	67.11	Ground Cable (Battery) . . . . .	96.23
Garmin – GPS Receiver . . . . .	97.7	Grip Assembly – Cyclic . . . . .	67.12	Ground Cable (Battery) . . . . .	96.27
Garmin – GPS Transceiver . . . . .	97.4	Grip Assembly – Cyclic . . . . .	67.13	Ground Cable (Battery) . . . . .	96.29
Garmin – GPS Transceiver . . . . .	97.8	Grip Assembly – Police Version . . .	67.13	Ground Cable (Battery) . . . . .	96.31
Garmin – Transceiver . . . . .	97.41	Grommet – Antenna Install . . . . .	6.25	Ground Handling Ball . . . . .	9.11
Garmin – Transceiver . . . . .	97.45	Grommet – Battery Box . . . . .	96.1	Ground Handling Wheel Assy . . . . .	9.1
Garmin – Transceiver . . . . .	97.49	Grommet – Battery Box . . . . .	96.5	Ground Handling Wheel Assy . . . . .	9.5
Garmin – Transponder . . . . .	97.35	Grommet – Battery Box . . . . .	96.9	Ground Handling Wheel Assy . . . . .	9.9
Gas Spring – Cabin Doors . . . . .	52.3	Grommet – Battery Box . . . . .	96.13	Ground Strap (Engine) . . . . .	96.79
Gas Spring – Cabin Doors . . . . .	52.8	Grommet – Battery Box . . . . .	96.15	Guard – Air Inlet . . . . .	71.13
Gascolator . . . . .	28.15	Grommet – Battery Box . . . . .	96.19	Guard – Air Inlet . . . . .	71.17
Gasket – Bypass Valve . . . . .	79.9	Grommet – Battery Box . . . . .	96.23	Guard – Battery Relay . . . . .	96.33
Gasket – Bypass Valve . . . . .	79.12	Grommet – Battery Box . . . . .	96.27	Guard – Battery Relay . . . . .	96.37
Gasket – Carburetor . . . . .	71.7	Grommet – Battery Box . . . . .	96.29	Guard – Battery Relay . . . . .	96.38
Gasket – Carburetor . . . . .	71.13	Grommet – Battery Box . . . . .	96.31	Guard – Clutch Switch . . . . .	95.5
Gasket – Eng. Oil Filter Adapter . . .	79.9	Grommet – Bulkhead . . . . .	53.14	Guard – Mixture Control . . . . .	76.10
Gasket – Eng. Oil Filter Adapter . . .	79.12	Grommet (Cable) . . . . .	21.1	Guard – Mixture Control . . . . .	76.17
Gasket – Fuel Cap . . . . .	28.5	Grommet (Cable) . . . . .	21.38	Guard – Rotor Brake . . . . .	63.8
Gasket – Fuel Cap . . . . .	28.9	Grommet (Cable) . . . . .	90.19	Guard – Tail Rotor . . . . .	53.38
Gasket – Fuel Sender . . . . .	28.7	Grommet (Cable) . . . . .	92.11	Guide – Push-Pull Tubes . . . . .	67.51
Gasket – Fuel Sender . . . . .	28.10	Grommet (Cable) . . . . .	92.15		
Gasket – Gascolator . . . . .	28.15	Grommet – Compass . . . . .	95.23	Handle Pin – Cyclic . . . . .	67.1
Gasket – Low Fuel Switch . . . . .	28.7	Grommet – Empennage . . . . .	53.37	Handle Pin – Cyclic . . . . .	67.11
Gasket – Oil Port Cover . . . . .	79.11	Grommet – Heated Pitot . . . . .	95.31	Handle Pin – Cyclic . . . . .	97.15
Gasket – Oil Suction Screen . . . . .	71.6	Grommet – Heater Duct . . . . .	21.37	Hanger – Headset . . . . .	21.15
Gasket – Oil Suction Screen . . . . .	71.10	Grommet – Heater Duct . . . . .	21.38	Hanger – Headset . . . . .	21.31
Gasket – Oil Temp Sender . . . . .	79.11	Grommet – Keel Panel . . . . .	96.69	Hanger – Headset . . . . .	33.15
Gasket – Oil Temp Sender . . . . .	96.49	Grommet – LED Spotlight Install . .	33.15	Hanger – Headset . . . . .	97.11
Gasket – Position Light . . . . .	32.33	Grommet – Mast Fairing . . . . .	53.11	Hardpoint Hinge Kit . . . . .	10.7
Gasket – Position Light . . . . .	33.5	Grommet – Push Rod . . . . .	71.31	Harness – Blind Encoder . . . . .	97.19
Gasket – Rocker Arm Covers . . . . .	71.5	Grommet – Push Rod . . . . .	71.37	Harness – ELT Installation . . . . .	25.29
Gasket – Rocker Arm Covers . . . . .	71.9	Grommet – Push Rod . . . . .	71.41	Harness – ELT Installation . . . . .	25.34
Gasket – Screen Housing . . . . .	71.7	Grommet – Push Rod . . . . .	71.46	Harness – Five-Point . . . . .	25.11



<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Harness – Four-Point . . . . .	25.15	Hole Plug – Console . . . . .	95.15	Ignition Switch . . . . .	95.5
Harness – Ignition . . . . .	71.6	Hole Plug – Door . . . . .	52.2	Ignition Switch . . . . .	95.15
Harness – Ignition . . . . .	71.10	Hood – Aft Monitor . . . . .	92.17	Indicator – Airspeed . . . . .	95.1
Harness – Seat Belt . . . . .	25.7	Horn Assy – Low RPM Warning . . . . .	95.6	Indicator – Airspeed . . . . .	95.19
Harness – Seat Belt . . . . .	25.9	Horn Assy – Low RPM Warning . . . . .	95.15	Indicator – Radar Altimeter . . . . .	95.33
Harness – Seat Belt . . . . .	25.11	Horn Assy – Low RPM Warning . . . . .	95.39	Indicator – Radar Altimeter . . . . .	95.35
Harness – Seat Belt . . . . .	25.15	Horn Assy – Low RPM Warning . . . . .	95.43	Indicator – Rate of Climb (VSI) . . . . .	95.1
Harness – Wire (Searchlight) . . . . .	90.6	Hose – Air Induction . . . . .	71.13	Indicator – Rate of Climb (VSI) . . . . .	95.19
Harness Assy – Cyclic Trim . . . . .	67.3	Hose – Air Induction . . . . .	71.14	Indicator – Telatemp . . . . .	11.3
Harness Assy – MR Gearbox . . . . .	63.1	Hose – Alternator Cooling . . . . .	71.35	Indicator – Telatemp . . . . .	29.17
Harness Assy – MR Gearbox . . . . .	63.2	Hose – Alternator Cooling . . . . .	71.51	Indicator – Telatemp . . . . .	63.1
Harness Assy – Rotor Brake . . . . .	63.7	Hose – Alternator Cooling . . . . .	71.59	Indicator – Telatemp . . . . .	65.8
Harness Plate – Ignition Wires . . . . .	71.5	Hose – Battery Cooling . . . . .	96.1	Injector – Fuel Primer . . . . .	28.33
Harness Plate – Ignition Wires . . . . .	71.9	Hose – Battery Cooling . . . . .	96.5	Inlet – Air Induction . . . . .	53.2
Headliner . . . . .	21.31	Hose – Battery Cooling . . . . .	96.9	Inlet – Heater Installation . . . . .	21.37
Headliner . . . . .	25.23	Hose – Cabin Heater . . . . .	21.37	Inner Wire – Carb Heat . . . . .	76.14
Heat Assist – Carburetor . . . . .	76.13	Hose – Cabin Heater . . . . .	21.41	Inner Wire – Mixture Control . . . . .	76.10
Heat Shrink – Connector . . . . .	53.25	Hose – Cooling . . . . .	71.27	Input Cartridge – TR Gearbox . . . . .	65.11
Heat Shrink – Connector . . . . .	53.29	Hose – Cooling . . . . .	71.31	Instrument Cluster . . . . .	95.6
Heat Shrink – Connector . . . . .	63.19	Hose – Cooling . . . . .	71.37	Instrument Cluster . . . . .	95.14
Heat Shrink – Connector . . . . .	67.23	Hose – Cooling . . . . .	71.49	Instrument Cluster . . . . .	95.47
Heat Shrink – Fuse Holder . . . . .	63.20	Hose – Cooling . . . . .	71.51	Instrument Cluster . . . . .	95.51
Heat Shrink – Fuse Holder . . . . .	96.49	Hose – Float Cylinder . . . . .	32.13	Instrument Nut . . . . .	95.1
Heat Shrink – Hoses (Floats) . . . . .	32.23	Hose – Float Cylinder . . . . .	32.15	Instrument Nut . . . . .	95.2
Heat Shrink – Hoses (Floats) . . . . .	32.25	Hose – Fuel . . . . .	28.1	Instrument Nut . . . . .	95.8
Heat Shrink – Oil Lines . . . . .	79.3	Hose – Fuel . . . . .	28.17	Instrument Nut . . . . .	95.19
Heat Shrink (Wire Terminals) . . . . .	25.29	Hose – Fuel . . . . .	28.25	Instrument Nut . . . . .	95.20
Heat Shrink (Wire Terminals) . . . . .	33.15	Hose – Fuel Return . . . . .	28.29	Instrument Nut . . . . .	97.23
Heat Shrink (Wire Terminals) . . . . .	33.17	Hose – Magneto Cooling . . . . .	71.31	Insulation – Cabin . . . . .	25.23
Heat Shrink (Wire Terminals) . . . . .	67.14	Hose – Magneto Cooling . . . . .	71.37	Insulation – Firewall . . . . .	25.23
Heat Shrink (Wire Terminals) . . . . .	71.60	Hose – Magneto Cooling . . . . .	71.42	Insulation – Heater Installation . . . . .	21.37
Heat Shrink (Wire Terminals) . . . . .	90.21	Hose – Magneto Cooling . . . . .	71.46	Insulator – Charging Post . . . . .	96.77
Heat Shrink (Wire Terminals) . . . . .	90.23	Hose – Oil Filter Installation . . . . .	79.11	Intercom System . . . . .	97.11
Heat Shrink (Wire Terminals) . . . . .	92.29	Hose – Oil Pressure Sender . . . . .	79.3	Intercom System . . . . .	97.13
Heat Shrink (Wire Terminals) . . . . .	95.23	Hose Assembly – Fuel . . . . .	28.1	Intercom System Unit . . . . .	95.47
Heat Shrink (Wire Terminals) . . . . .	95.31	Hose Assembly – Pop-Out Float . . . . .	32.23	Intercom System Unit . . . . .	95.51
Heat Shrink (Wire Terminals) . . . . .	95.35	Hose Assembly – Pop-Out Float . . . . .	32.27	Interrupter – Swashplate . . . . .	67.70
Heat Shrink (Wire Terminals) . . . . .	96.57	Hoses – Heater . . . . .	21.37		
Heated Pitot Installation . . . . .	95.31	Hoses – Heater . . . . .	21.38	Jack – External Audio Input . . . . .	6.7
Heater Installation . . . . .	21.37	Hoses – Heater . . . . .	21.41	Jack – Intercom . . . . .	21.15
Heater Installation . . . . .	21.41	Hourmeter . . . . .	95.6	Jack – Intercom . . . . .	97.11
Hinge – Air Box . . . . .	71.14	Hourmeter . . . . .	95.8	Jack – Tailcone Bulkhead . . . . .	6.29
Hinge – Cabin Doors . . . . .	52.1	Hourmeter . . . . .	96.57	Jackshaft Assembly . . . . .	67.53
Hinge – Cabin Doors . . . . .	52.7	Housing – Oil Pressure Screen . . . . .	71.6	Jackshaft Assembly . . . . .	67.59
Hinge – Cabin Doors . . . . .	52.8	Hub – Main Rotor . . . . .	62.7	Journal – Aft Support . . . . .	67.45
Hinge – Cowl Door . . . . .	53.1	Hub Assembly – Tail Rotor . . . . .	64.1	Journal – Actuator Upper Bearing . . . . .	63.19
Hinge – Cowl Door . . . . .	53.5	Hub Assembly – Tail Rotor . . . . .	64.5	Journal – Bellcrank . . . . .	67.41
Hinge – Cowl Door . . . . .	53.15	Hydraulic Flight Controls . . . . .	29.1	Journal – Bellcrank . . . . .	67.45
Hinge – Cowl Door . . . . .	53.16	Hydraulic Flight Controls . . . . .	64.9	Journal – Bellcrank . . . . .	67.85
Hole Plug – Cabin . . . . .	6.3	Hydraulic Flight Controls . . . . .	67.53	Journal – Bellcrank . . . . .	67.89
Hole Plug – C.B. Panel . . . . .	96.47	Hydraulic Flight Controls . . . . .	67.57	Journal – Damper Assembly . . . . .	65.5
Hole Plug – Console . . . . .	95.2	Ignition Harness . . . . .	71.6	Journal – MR Installation . . . . .	62.7
Hole Plug – Console . . . . .	95.6	Ignition Harness . . . . .	71.10	Jumper Tab – Terminal Block . . . . .	95.5
Hole Plug – Console . . . . .	95.11			Jumper Tab – Terminal Block . . . . .	95.15

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Key – Blank . . . . .	95.40	Lens – Micro Camera . . . . .	92.13	Magnet – Yoke . . . . .	63.3
Key – Duplicate (Door) . . . . .	52.4	Lens – Micro Camera . . . . .	92.15	Magnetos . . . . .	71.6
Key – Duplicate (Ignition) . . . . .	95.5	Lens – LED Spotlight . . . . .	33.15	Magnetos . . . . .	71.10
Key – Duplicate (Ignition) . . . . .	95.40	Lever – Collective Friction . . . . .	67.21	Main Rotor Blade . . . . .	62.1
Key – Swashplate . . . . .	67.61	Lever – Ground Wheel . . . . .	9.1	Main Rotor Blade . . . . .	62.3
Key – Swashplate . . . . .	67.65	Lever – Ground Wheel . . . . .	9.5	Main Rotor Blade Support . . . . .	10.9
Key – Swashplate . . . . .	67.69	Lever Assy – Pop-Out Float . . . . .	32.17	Maintenance Tools . . . . .	99.15
Kit – Oil Filter . . . . .	79.9	License Holder . . . . .	25.19	Maintenance Tools . . . . .	99.17
Kit – Spare Parts . . . . .	99.1	Light – Console . . . . .	33.19	Maintenance Tools . . . . .	99.19
Knob – Cyclic Friction . . . . .	67.17	Light – Circuit Breaker Panel . . . . .	33.19	Manifold – Intake . . . . .	28.26
Knob – Dimmer . . . . .	95.5	Light – Position . . . . .	32.33	Manifold Pressure Gage . . . . .	95.40
Knob – Dimmer . . . . .	95.14	Light – Position . . . . .	33.5	Manifold Pressure Gage . . . . .	95.44
Knob – Fuel Valve . . . . .	28.13	Light – Position . . . . .	33.7	Manifold Pressure Line . . . . .	96.50
Knob – Rotor Brake . . . . .	63.7	Light – Post . . . . .	67.1	Manifold Pressure Line . . . . .	96.53
Knob – Rotor Brake . . . . .	63.11	Light – Post . . . . .	95.1	Mast Assembly . . . . .	63.1
Knob – Vent Door . . . . .	52.2	Light – Post . . . . .	95.14	Mast Assembly . . . . .	63.3
Knob – Vent Door . . . . .	52.8	Light – Post . . . . .	95.20	Mast Fairing . . . . .	53.11
Lamp – Compass . . . . .	95.23	Light – Post (Switch Panel) . . . . .	95.7	Master Radio Relay . . . . .	96.61
Lamp – Digital Clock . . . . .	95.25	Light – Post (Switch Panel) . . . . .	95.13	MFD – Aspen . . . . .	95.65
Lamp – Landing Light . . . . .	33.11	Light – Tail (Incandescent) . . . . .	33.7	Micro Camera . . . . .	92.9
Lamp – Landing Light . . . . .	33.13	Light – Tail (LED) . . . . .	33.7	Micro Camera . . . . .	92.11
Lamp – Position Light . . . . .	32.33	Light Bar – Compass . . . . .	95.23	Micro Camera . . . . .	92.13
Lamp – Position Light . . . . .	33.5	Lighter . . . . .	6.7	Micro Camera . . . . .	92.15
Lamp – Position Light . . . . .	33.7	Line – Fuel . . . . .	28.13	Mixture Control – Cable . . . . .	76.9
Lamp – Post Light . . . . .	67.1	Line Assy – Air Conditioner . . . . .	21.25	Mixture Control – Cable . . . . .	76.17
Lamp – Post Light . . . . .	95.1	Line Assy – Air Conditioner . . . . .	21.27	Mixture Control – Cable . . . . .	97.1
Lamp – Post Light . . . . .	95.5	Line Assy – Air Conditioner . . . . .	21.29	Motor – Cyclic Trim . . . . .	67.2
Lamp – Post Light . . . . .	95.14	Line Assembly – Fuel Primer . . . . .	28.33	Molding – VCR Tray . . . . .	90.17
Lamp – Post Light . . . . .	95.20	Line Assembly – Fuel Primer . . . . .	28.34	Monitors – Aft . . . . .	92.17
Lamp – Post Light . . . . .	95.20	Line Assembly – Fuel Primer . . . . .	28.37	Mount – Compass . . . . .	95.23
Lamp – Searchlight . . . . .	90.6	Liner Assembly – Skid . . . . .	32.2	Mount – Engine . . . . .	71.1
Lamp – Spotlight . . . . .	33.17	Liner Assembly – Skid . . . . .	32.20	Mount – Engine . . . . .	71.3
Lamp – Tail Light . . . . .	33.7	Link – Alternator/Starter . . . . .	71.52	Mount – Engine . . . . .	71.5
Lamp – Warning Lights . . . . .	95.1	Link – Alternator/Starter . . . . .	71.55	Mount – Engine . . . . .	71.9
Lamp – Warning Lights . . . . .	95.14	Link – Alternator/Starter . . . . .	71.60	Mount – MR Gearbox . . . . .	63.3
Lamp – Warning Lights . . . . .	95.20	Link – Alternator/Starter . . . . .	90.29	Mount – Strobe Light . . . . .	53.30
Lamp – Warning Lights . . . . .	95.43	Link – Engine Mount . . . . .	71.3	Mount – Tail Light . . . . .	53.37
Landing Gear . . . . .	32.1	Link – Main Rotor Pitch . . . . .	67.66	Mount – VCR Installation . . . . .	90.17
Landing Gear – Float . . . . .	32.19	Link – Cyclic Friction . . . . .	67.17	Mount Assembly – Gimbal . . . . .	92.1
Landing Gear – Float . . . . .	32.29	Link – Tail Rotor Pitch . . . . .	64.1	Mount Bracket – ELT . . . . .	25.29
Landing Light . . . . .	33.11	Link – Tail Rotor Pitch . . . . .	64.5	Mount Bracket – ELT . . . . .	25.33
Landing Light . . . . .	33.13	Lip – Scroll . . . . .	71.29	Muffler Assembly . . . . .	71.21
Lap Belt – Harness . . . . .	25.7	Lock Set – Door . . . . .	52.2	Nipple – Alternator Installation . . . . .	71.51
Lap Belt – Harness . . . . .	25.9	Locking Pin – Adjustable Pedals . . . . .	67.77	Nipple – Alternator Installation . . . . .	71.59
Lap Belt – Harness . . . . .	25.11	Locking Tab – Carb Bolt . . . . .	76.10	Nipple – Alternator Installation . . . . .	90.29
Lap Belt – Harness . . . . .	25.13	Lockwasher – Primer Pump . . . . .	28.33	Nipple – Battery Installation . . . . .	96.13
Lap Belt – Harness . . . . .	25.15	Logic Module Assy (Fuel Pump) . . . . .	96.61	Nipple – Battery Relay . . . . .	96.19
Lap Belt – Harness . . . . .	25.17	Louver – Duct Assy (A/C) . . . . .	21.31	Nipple – Battery Relay . . . . .	96.23
Latch – Blade Support Clamp . . . . .	10.9	Low Fuel Switch . . . . .	28.7	Nipple – Battery Relay . . . . .	96.33
LED – Spotlight . . . . .	21.34	Lower Frames (Steel Tube) . . . . .	53.19	Nipple – Battery Relay . . . . .	96.37
LED – Spotlight . . . . .	33.15	Lower Frames (Steel Tube) . . . . .	53.23	Nipple – Battery Relay . . . . .	96.37
Lens – Micro Camera . . . . .	92.9	Lower Sheave . . . . .	63.23	Nipple – Battery Relay . . . . .	96.41
Lens – Micro Camera . . . . .	92.11	Lubricants . . . . .	12.1	Nipple – Battery Relay . . . . .	96.43
				Nipple – Fuel Line . . . . .	28.15

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Nipple – Oil Pressure Sender . . .	79.3	O-Ring – Gearmotor . . . . .	63.20	Panels – Mid Cabin . . . . .	6.7
Nipple – Shunt . . . . .	96.65	O-Ring – Hydraulic System . . . .	29.4	Panels – Aft Cabin . . . . .	6.11
Nipple – Starter . . . . .	71.52	O-Ring – Hydraulic System . . . .	29.7	Passenger Safety Card . . . . .	6.11
Nipple – Starter . . . . .	71.55	O-Ring – Hydraulic System . . . .	29.8	Patent Plate . . . . .	11.5
Nozzle Assembly – MRGB . . . . .	71.49	O-Ring – Hydraulic System . . . .	29.11	Pedal Assembly . . . . .	67.77
Nut – Main Rotor Blade . . . . .	62.1	O-Ring – Hydraulic System . . . .	29.12	Pedal Assembly . . . . .	67.81
Nut – Main Rotor Blade . . . . .	62.3	O-Ring – Hydraulic System . . . .	29.15	Pedal Cover . . . . .	67.77
Nut – Main Rotor Hub . . . . .	62.7	O-Ring – Hydraulic System . . . .	29.15	PFD – Aspen . . . . .	95.63
Nutplate – Airbox . . . . .	71.17	O-Ring – Hydraulic System . . . .	29.17	PFD – Aspen . . . . .	95.65
Nutplate – Console . . . . .	97.1	O-Ring – LED Installation . . . . .	33.15	Pilot Side Console . . . . .	97.3
Nutplate – Cowl Panel . . . . .	53.1	O-Ring – Main Rotor Gearbox . . .	63.1	Pilot Side Console . . . . .	97.7
Nutplate – Cowl Panel . . . . .	53.5	O-Ring – Main Rotor Gearbox . . .	63.2	Pilot Side Console . . . . .	97.41
Nutplate – Mast Fairing . . . . .	53.11	O-Ring – Main Rotor Gearbox . . .	63.3	Pilot Side Console . . . . .	97.45
Nutplate – Scroll Bracket . . . . .	63.19	O-Ring – OAT Probe . . . . .	96.53	Pilot Side Console . . . . .	97.50
		O-Ring – Primer Line Bushing . . .	28.33	Pin – Connector . . . . .	6.27
OAT Gage . . . . .	95.47	O-Ring – Primer Line Bushing . . .	28.37	Pin – Connector . . . . .	21.5
OAT Gage . . . . .	95.51	O-Ring – Primer Pump . . . . .	28.34	Pin – Connector . . . . .	25.29
OAT Gage . . . . .	97.1	O-Ring – Primer Pump . . . . .	28.37	Pin – Connector . . . . .	28.17
OAT Probe . . . . .	96.53	O-Ring – Sump . . . . .	63.1	Pin – Connector . . . . .	29.8
Oil – Engine . . . . .	12.1	O-Ring – Tail Rotor Gearbox . . .	65.11	Pin – Connector . . . . .	32.33
Oil – Main Rotor Blade . . . . .	62.1	O-Ring – VSI (or IVSI) . . . . .	95.27	Pin – Connector . . . . .	33.1
Oil – Main Rotor Blade . . . . .	62.3	Overtemp Switch Harness Assy . . .	63.2	Pin – Connector . . . . .	53.25
Oil – Main Rotor Gearbox . . . . .	63.3	Overtravel Spring – Collective . . .	76.1	Pin – Connector . . . . .	63.20
Oil Coolers . . . . .	79.1	Overtravel Spring – Collective . . .	76.5	Pin – Connector . . . . .	67.2
Oil Coolers . . . . .	79.3			Pin – Connector . . . . .	90.5
Oil Coolers . . . . .	79.7	Packing – O-Ring . . . . .	28.1	Pin – Connector . . . . .	92.21
Oil Filter . . . . .	79.9	Packing – O-Ring . . . . .	28.17	Pin – Connector . . . . .	95.23
Oil Filter . . . . .	79.12	Packing – O-Ring . . . . .	29.7	Pin – Connector . . . . .	96.33
Oil Filter Kit . . . . .	79.9	Packing – O-Ring . . . . .	32.15	Pin – Connector . . . . .	97.4
Oil Filter Kit . . . . .	79.12	Packing – O-Ring . . . . .	65.7	Pin – Damper Assembly . . . . .	65.5
Oil Lines . . . . .	79.1	Packing – O-Ring . . . . .	79.11	Pin – Fan Installation . . . . .	63.23
Oil Lines . . . . .	79.3	Packing – O-Ring . . . . .	95.27	Pin – Locking . . . . .	10.9
Oil Pressure Meter . . . . .	95.47	Packing – O-Ring . . . . .	99.3	Pin – Locking . . . . .	67.1
Oil Pressure Meter . . . . .	95.51	Packing – VSI (or IVSI) . . . . .	95.27	Pin – Locking . . . . .	67.4
Oil Pressure Sender . . . . .	79.3	Pad – Battery Box . . . . .	96.2	Pin – Locking . . . . .	67.77
Oil Screen . . . . .	71.6	Pad – Battery Box . . . . .	96.6	Pin – Locking . . . . .	67.81
Oil Screen . . . . .	71.10	Palnut – Engine Mount . . . . .	71.1	Pin – Vent Door (Cotter) . . . . .	21.1
Oil Temp Meter . . . . .	95.47	Palnut – Engine Mount . . . . .	71.3	Pin – Vent Door (Cotter) . . . . .	52.4
Oil Temp Meter . . . . .	95.51	Panel – Circuit Breaker . . . . .	96.47	Pin – Vent Door (Cotter) . . . . .	52.9
Oil Temp Sender . . . . .	71.6	Panel – Test Switches . . . . .	96.49	Pistol Grip – Cyclic . . . . .	67.11
Oil Temp Sender . . . . .	79.9	Panel – Test Switches . . . . .	96.53	Pitch Control – Tail Rotor . . . . .	65.8
Oil Temp Sender . . . . .	79.11	Panels – Belly . . . . .	6.13	Pitch Link – Swashplate Assy . . .	67.62
Oil Temp Sender . . . . .	96.49	Panels – Engine Cooling . . . . .	71.31	Pitch Link – Swashplate Assy . . .	67.66
O-Ring – Actuator Gearmotor . . .	63.20	Panels – Engine Cooling . . . . .	71.32	Pitch Link – Swashplate Assy . . .	67.69
O-Ring – Blind Encoder (B240–1) . .	97.23	Panels – Engine Cooling . . . . .	71.35	Pitch Link – TR Assembly . . . . .	64.1
O-Ring – Micro Camera Install . . .	92.15	Panels – Engine Cooling . . . . .	71.37	Pitot Lines – Aspen . . . . .	95.67
O-Ring – Chip Detector . . . . .	63.2	Panels – Engine Cooling . . . . .	71.38	Pitot Lines – Aspen . . . . .	95.71
O-Ring – Chip Detector . . . . .	63.4	Panels – Engine Cooling . . . . .	71.41	Pitot Tube . . . . .	64.5
O-Ring – Clutch Assembly . . . . .	63.15	Panels – Engine Cooling . . . . .	71.45	Pitot Tube – Heated . . . . .	95.27
O-Ring – Drain Plug . . . . .	32.19	Panels – Engine Cooling . . . . .	71.46	Pivot Assembly – Cyclic . . . . .	67.9
O-Ring – Drain Plug . . . . .	32.29	Panels – Fuselage . . . . .	53.1	Pivot Assembly – Cyclic . . . . .	67.28
O-Ring – Fuel Control . . . . .	28.25	Panels – Fuselage . . . . .	53.5	Pivot Assembly – Cyclic . . . . .	67.32
O-Ring – Fuel Drain . . . . .	28.10	Panels – Fuselage . . . . .	53.15	Pivot Assembly – Cyclic . . . . .	67.36
O-Ring – Fuel Drain . . . . .	28.15	Panels – Forward Cabin . . . . .	6.5	Pivot Assembly – Cyclic . . . . .	67.39

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Pivot Assembly – Cyclic . . . . .	95.31	Post Light . . . . .	95.14	Receptacle Assembly – Cowl . .	53.15
Plate – Ballast . . . . .	8.1	Post Light . . . . .	95.20	Regulator (28V to 14V) . . . . .	95.61
Plate – Fanshaft Bearing Mount	63.19	Power Converter . . . . .	96.71	Relay – A/C Cutoff . . . . .	21.3
Plate – Fanshaft Bearing Mount	71.27	Power Converter . . . . .	96.73	Relay – Battery . . . . .	96.1
Plate – Cyclic Switches . . . . .	67.11	Power Converter . . . . .	96.75	Relay – Battery . . . . .	96.5
Plate – Cyclic Switches . . . . .	67.12	Power Supply – Strobe . . . . .	33.3	Relay – Battery . . . . .	96.9
Plate – Cyclic Switches . . . . .	97.15	Pressure Switch – Oil . . . . .	79.3	Relay – Battery . . . . .	96.13
Plate – Door Frame . . . . .	52.1	Primer Pump (Fuel) . . . . .	28.33	Relay – Battery . . . . .	96.19
Plate – Door Frame . . . . .	52.7	Primer Pump (Fuel) . . . . .	28.37	Relay – Battery . . . . .	96.23
Plate – Gimbal Inst'l . . . . .	90.9	Probe – Carb Air Temp . . . . .	71.7	Relay – Battery . . . . .	96.27
Plate – Horn Mount . . . . .	95.6	Probe – Cylinder Head Temp . .	96.50	Relay – Battery . . . . .	96.33
Plate – Horn Mount . . . . .	95.15	Probe – Cylinder Head Temp . .	96.53	Relay – Battery . . . . .	96.37
Plate – Ignition Harness . . . . .	71.5	Probe – Outside Air Temp . . . .	96.49	Relay – Battery . . . . .	96.41
Plate – Ignition Harness . . . . .	71.9	Pulley – Air Conditioning . . . . .	21.9	Relay – Battery . . . . .	96.43
Plate – Primer Pump . . . . .	28.33	Pulley – Alternator . . . . .	71.51	Relay – Fuel Pump . . . . .	96.61
Plate – Scroll . . . . .	63.19	Pulley – Alternator . . . . .	71.60	Relay – Governor Off Lamp . . . .	96.61
Plate – Scroll . . . . .	71.27	Pulley – Alternator . . . . .	90.29	Relay – Landing Light . . . . .	96.61
Plate – Siren Speaker Install . . .	90.11	Pulley – Rotor Brake . . . . .	28.9	Relay – Master Radio . . . . .	96.61
Plate – Siren Speaker Install . . .	90.15	Pulley – Rotor Brake . . . . .	63.7	Repair Kit – Float . . . . .	32.30
Plate Assy – Oil Filter Install . . .	79.11	Pulley – Rotor Brake . . . . .	63.11	Resistor – Low RPM Horn . . . . .	95.5
Plug – Clutch Assembly . . . . .	63.15	Pump – Fuel . . . . .	28.17	Resistor – Low RPM Horn . . . . .	95.13
Plug – Console . . . . .	95.2	Pump – Fuel . . . . .	28.21	Resistor – LED Switch Assy . . . .	33.15
Plug – Console . . . . .	95.6	Pump – Fuel Primer . . . . .	28.33	Restraint – Forward Doors . . . . .	52.11
Plug – Console . . . . .	95.11	Pump – Fuel Primer . . . . .	28.37	Retainer – Clutch Assembly . . . .	63.15
Plug – Console . . . . .	95.15	Pump – Hydraulic . . . . .	29.17	Retainer – Cooling Panel . . . . .	71.31
Plug – Console . . . . .	95.20	Push-Pull Tube (Carb Assist) . . .	76.13	Retainer – Cooling Panel . . . . .	71.32
Plug – Converter . . . . .	96.71	Push-Pull Tube (Flight Controls)	67.27	Retainer – Cooling Panel . . . . .	71.37
Plug – Converter . . . . .	96.73	Push-Pull Tube (Flight Controls)	67.31	Retainer – Cooling Panel . . . . .	71.42
Plug – Converter . . . . .	96.75	Push-Pull Tube (Flight Controls)	67.32	Retainer – Cooling Panel . . . . .	71.46
Plug – Governor Controller . . . . .	96.63	Push-Pull Tube (Flight Controls)	67.35	Retainer – Landing Light . . . . .	33.13
Plug – Cyclic Cover . . . . .	67.3	Push-Pull Tube (Flight Controls)	67.49	Retainer Strip – Windshield . . . .	52.11
Plug – Cyclic Grip (Plastic) . . . . .	67.11	Push-Pull Tube (Flight Controls)	67.77	Retainer Strip – Windshield . . . .	52.12
Plug – Cyclic Grip (Plastic) . . . . .	67.13	Push-Pull Tube (Flight Controls)	67.81	Retaining Ring . . . . .	92.15
Plug – Cyclic Grip (Electrical) . . .	97.15	Push-Pull Tube (Flight Controls)	67.85	Rib – Mast Fairing . . . . .	53.11
Plug – Hole (Cabin) . . . . .	32.2	Push-Pull Tube (Flight Controls)	67.89	Ring – Aft Cowling . . . . .	53.5
Plug – Hole (Console) . . . . .	95.2	Push-Pull Tube (Flight Controls)	67.91	Ring – Collective Boot . . . . .	6.5
Plug – Hole (Console) . . . . .	95.6	Push-Pull Tube (Throttle) . . . . .	76.1	Ring – Cotter . . . . .	52.1
Plug – Hole (Console) . . . . .	95.11	Push-Pull Tube (Throttle) . . . . .	76.6	Ring – Cotter . . . . .	52.7
Plug – Hole (Console) . . . . .	95.15	Quantity Sender – Fuel . . . . .	28.7	Ring – Horn Installation . . . . .	95.6
Plug – Hole (Console) . . . . .	95.20	Quantity Sender – Fuel . . . . .	28.10	Ring – Horn Installation . . . . .	95.15
Plug – Hub Bearing Tool . . . . .	95.19	Radar Altimeter . . . . .	6.17	Ring – Retaining . . . . .	67.25
Plug – Drain (Pitot/Static Install)	95.27	Radar Altimeter . . . . .	95.33	Ring – Retaining . . . . .	99.17
Plug – Searchlight (Connector) . . .	90.6	Radar Altimeter . . . . .	95.35	Ring – Tie-Down . . . . .	10.7
Plug – Skid Extension . . . . .	32.19	Radar Altimeter . . . . .	95.37	Rivet – Clamp (Camera) . . . . .	92.11
Plug – Skid Extension . . . . .	32.29	Radio Installation . . . . .	97.1	Rivet – Harness Tube Support . . .	25.11
Plug – VCR Cable . . . . .	90.17	Rain Cap – Landing Gear . . . . .	32.1	Rivet – Harness Tube Support . . .	25.15
Plug Assembly – Tailcone . . . . .	53.25	Rain Cap – Landing Gear . . . . .	32.19	Rivet – Pocket (Fire Extinguisher)	25.25
Plug Assembly – Tailcone . . . . .	53.29	Rate-of-climb Indicator (VSI) . . .	95.43	Rivet – Pocket (Fire Extinguisher)	25.27
Pocket – Fire Extinguisher . . . . .	25.25	Receiver (ADS-B) . . . . .	97.33	Rivet – Push (Aft Battery Install)	53.20
Pocket – Fire Extinguisher . . . . .	25.27	Receptacle (Connector) . . . . .	90.6	Rivet – Push (Aft Battery Install)	96.13
Position Lights . . . . .	32.33	Receptacle Assembly – Cowl . . .	53.1	Rivet – Stabilizer . . . . .	53.37
Position Lights . . . . .	33.5	Receptacle Assembly – Cowl . . .	53.5	Rivnut . . . . .	32.2
Post Light . . . . .	67.1			Rivnut . . . . .	32.19
Post Light . . . . .	95.1			Rod – Battery Box . . . . .	96.2

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Rod – Battery Box . . . . .	96.5	Screen – Oil . . . . .	71.10	Seats . . . . .	25.1
Rod – Battery Box . . . . .	96.10	Scroll Assembly . . . . .	71.27	Sender – Fuel Quantity . . . . .	28.7
Rod End – Collective . . . . .	67.23	Scroll Assembly . . . . .	71.29	Sender – Fuel Quantity . . . . .	28.10
Rod End – Engine Mount . . . . .	71.3	Scuff Plate – Carpet . . . . .	25.19	Sender – Oil Pressure . . . . .	79.3
Rod End – Flight Controls . . . . .	67.27	Seal – Battery Box . . . . .	96.1	Sender – Oil Pressure . . . . .	79.6
Rod End – Flight Controls . . . . .	67.31	Seal – Battery Box . . . . .	96.5	Sender – Oil Temperature . . . . .	71.6
Rod End – Flight Controls . . . . .	67.35	Seal – Battery Box . . . . .	96.9	Sender – Oil Temperature . . . . .	79.9
Rod End – Gimbal Installation . . . . .	92.5	Seal – Battery Box . . . . .	96.15	Sender – RPM (Hall Effect) . . . . .	63.2
Rod End – Hard Point Install . . . . .	10.7	Seal – Cabin Doors . . . . .	52.1	Servo – Hydraulic . . . . .	29.1
Rod End – Hyd. Controls Install . . . . .	67.49	Seal – Cabin Doors . . . . .	52.2	Servo – Hydraulic . . . . .	29.3
Rod End – Hyd. Controls Install . . . . .	67.53	Seal – Cabin Doors . . . . .	52.7	Servo – Pitch . . . . .	22.1
Rod End – Hyd. Controls Install . . . . .	67.57	Seal – Cabin Doors . . . . .	52.8	Servo – Roll . . . . .	22.5
Rod End – Centering Strut . . . . .	63.15	Seal – Clutch Shaft . . . . .	63.15	Shaft – Clutch . . . . .	63.15
Rod End – Coll. Spring Assy . . . . .	67.25	Seal – Cowling . . . . .	53.5	Shaft – Main Rotor Drive . . . . .	63.1
Rod End – Swashplate . . . . .	67.62	Seal – Cowling . . . . .	53.15	Shaft – Tail Rotor Drive . . . . .	65.2
Rod End – Swashplate . . . . .	67.65	Seal – Gimbal Fairing . . . . .	90.3	Shear Rivet . . . . .	32.17
Rod End – Swashplate . . . . .	67.69	Seal – Gimbal Fairing . . . . .	92.3	Sheave – Lower . . . . .	63.23
Rod End – Tail Rotor Control . . . . .	67.77	Seal – Gimbal Fairing . . . . .	92.7	Sheave – Upper . . . . .	63.15
Rod End – Tail Rotor Control . . . . .	67.81	Seal – MRGB Drive Pinion . . . . .	63.2	Shield – Battery Box . . . . .	96.2
Rod End – Tail Rotor Control . . . . .	67.85	Seal – Peripheral (Connector) . . . . .	90.6	Shield – Battery Box . . . . .	96.6
Rod End – Tail Rotor Control . . . . .	67.89	Seal – Scroll Assembly . . . . .	71.27	Shield – Battery Relay . . . . .	96.43
Rod End – Tail Rotor Control . . . . .	67.91	Seal – Searchlight (Cable Entry) . . . . .	90.5	Shield – Muffler . . . . .	71.25
Roll Pin – Cyclic . . . . .	67.4	Seal – TR Gearbox . . . . .	65.11	Shim – MR Gearbox Installation . . . . .	63.3
Roll Pin – Cyclic Friction . . . . .	67.17	Seal – Throttle . . . . .	76.1	Shim – Main Rotor Installation . . . . .	62.7
Roll Pin – Throttle . . . . .	76.1	Seal – Throttle . . . . .	76.5	Shim – Servo Installation . . . . .	29.3
Roller – Push-Pull Tube Guide . . . . .	67.51	Seal – VCR Tray . . . . .	90.17	Shim – Swashplate Installation . . . . .	67.61
Rotor Blades . . . . .	62.1	Seal – Vent Door . . . . .	52.2	Shipping Crates . . . . .	99.23
Rotor Blades . . . . .	62.3	Seal – Vent Door . . . . .	52.8	Shipping Crates . . . . .	99.25
Rotor Blades . . . . .	64.1	Seal Assembly – Gimbal Fairing . . . . .	92.3	Shoe – Skid . . . . .	32.2
Rotor Blades . . . . .	64.5	Seal Assembly – Gimbal Fairing . . . . .	92.7	Shoe – Skid . . . . .	32.19
Rotor Brake . . . . .	63.8	Sealant – Control Cables . . . . .	76.9	Shoe – Skid . . . . .	32.29
Rub Strip – Door . . . . .	52.1	Sealant – Door Restraint . . . . .	52.12	Shroud – Muffler . . . . .	21.37
Safety Wire – Alternator Install . . . . .	71.51	Sealant – Float Installation . . . . .	32.19	Shroud Weldment – Alternator . . . . .	71.51
Safety Wire – Alternator Install . . . . .	71.59	Sealant – Float Installation . . . . .	32.29	Shroud Weldment – Alternator . . . . .	71.59
Safety Wire – Alternator Install . . . . .	90.29	Sealant – Heater Installation . . . . .	21.37	Shunt – Ammeter . . . . .	96.65
Safety Wire – Fan Installation . . . . .	63.23	Sealant – Oil Cooler Installation . . . . .	79.1	Sight Gage – Gearboxes . . . . .	63.1
Safety Wire – Gearboxes . . . . .	63.1	Sealant – Oil Cooler Installation . . . . .	79.3	Sight Gage – Gearboxes . . . . .	65.7
Safety Wire – Gearboxes . . . . .	65.8	Sealant – Oil Cooler Installation . . . . .	79.7	Sight Gage – Hyd. Reservoir . . . . .	29.7
Safety Wire – Oil Filter Install . . . . .	79.9	Sealant – Static Fitting . . . . .	95.28	Sight Gage – Hyd. Reservoir . . . . .	29.11
Safety Wire – Oil Filter Install . . . . .	79.11	Sealant – Windshield . . . . .	52.11	Siren Speaker . . . . .	90.11
Safety Wire – Panel Screws . . . . .	71.32	Searchlight Assembly . . . . .	90.5	Siren Speaker . . . . .	90.13
Safety Wire – Panel Screws . . . . .	71.41	Seat Belts . . . . .	25.7	Skid – Tail . . . . .	53.38
Safety Wire – Searchlight Install . . . . .	90.5	Seat Belts . . . . .	25.9	Skid Extension – Landing Gear . . . . .	32.2
Safety Wire – Speaker . . . . .	90.11	Seat Belts . . . . .	25.11	Skid Extension – Landing Gear . . . . .	32.19
Safety Wire – Starter . . . . .	71.55	Seat Belts . . . . .	25.13	Skid Extension – Landing Gear . . . . .	32.29
Scissor – Servo Installation . . . . .	29.1	Seat Belts . . . . .	25.15	Skid Shoes . . . . .	32.2
Scoop Assembly – Carb Heat . . . . .	71.13	Seat Belts . . . . .	25.17	Skid Shoes . . . . .	32.19
Screen – Air Inlet . . . . .	71.13	Seat Cushion . . . . .	25.1	Skid Shoes . . . . .	32.29
Screen – Air Inlet . . . . .	71.14	Seat Harness . . . . .	25.7	Skid Tube . . . . .	32.2
Screen – Air Inlet . . . . .	71.17	Seat Harness . . . . .	25.9	Skid Tube . . . . .	32.19
Screen – Fuel Filter (Fuel Control) . . . . .	28.25	Seat Harness . . . . .	25.11	Skid Tube . . . . .	32.29
Screen – Gascolator . . . . .	28.15	Seat Harness . . . . .	25.13	Slass Sensor (Searchlight) . . . . .	90.6
Screen – Oil . . . . .	71.6	Seat Harness . . . . .	25.15	Slat – Aft Cowling . . . . .	53.9
		Seat Harness . . . . .	25.17	Sleeve – Push-Pull Tube . . . . .	67.35

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Sleeving – Speaker Wiring . . . . .	90.11	Spotlight Assembly . . . . .	33.15	Strobe Light . . . . .	33.3
Sleeving – Speaker Wiring . . . . .	90.15	Spotlight Assembly . . . . .	33.17	Strut – Cabin Doors . . . . .	52.3
Sleeving – VCR Wiring . . . . .	90.19	Spring – Airbox Door . . . . .	71.14	Strut – Cabin Doors . . . . .	52.8
Slider Tube Assy – Swashplate . . . . .	63.1	Spring – Airbox Door . . . . .	71.17	Strut – Extended Gear . . . . .	32.1
Slider Valve – Air Box . . . . .	76.9	Spring – Carb Heat Catch . . . . .	76.13	Strut – Frame . . . . .	53.20
Slider Valve – Cabin Heat . . . . .	21.38	Spring – Collective . . . . .	67.25	Strut – Frame . . . . .	53.23
Snubber Assembly – A/C . . . . .	21.6	Spring – Cyclic Grip Assembly . . . . .	67.12	Strut – Landing Gear . . . . .	32.1
Socket (Housing) . . . . .	25.33	Spring – Gas . . . . .	52.3	Strut – Upper Bearing Centering . . . . .	63.16
Socket (Housing) . . . . .	29.8	Spring – Gas . . . . .	52.8	Strut Assy – Blade Support . . . . .	10.9
Socket (Housing) . . . . .	29.12	Spring – Panel Retainer . . . . .	71.31	Strut Weldment – Jackshaft . . . . .	67.59
Socket (Housing) . . . . .	53.25	Spring – Panel Retainer . . . . .	71.37	Stud – Charging Post . . . . .	96.77
Socket (Housing) . . . . .	63.20	Spring – Panel Retainer . . . . .	71.42	Stud – Cowl Door . . . . .	53.1
Socket – Connector (Searchlight) . . . . .	90.6	Spring – Panel Retainer . . . . .	71.46	Stud – Cowl Door . . . . .	53.5
Socket – Electrical (Aux Power) . . . . .	6.7	Spring – Rotor Brake . . . . .	63.2	Stud – Cowl Door . . . . .	53.15
Spacer – Airbox Door . . . . .	71.14	Spring – Rotor Brake . . . . .	63.8	Stud – Pump Installation . . . . .	29.17
Spacer – Battery Shield . . . . .	96.1	Spring Assembly – Collective . . . . .	67.25	Stud – Scuff Plate . . . . .	25.19
Spacer – Battery Shield . . . . .	96.6	Spring Assembly – Cyclic Trim . . . . .	67.3	Stud – Tail Rotor Gearbox . . . . .	65.7
Spacer – Blind Encoder Install . . . . .	97.19	Spring Assembly – Mixture . . . . .	76.10	Sump – Main Rotor Gearbox . . . . .	63.2
Spacer – Cyclic Pivot . . . . .	67.4	Spring Assembly – Overtravel . . . . .	76.1	Support – Aft Seat . . . . .	25.5
Spacer – Cyclic Pivot . . . . .	67.9	Spring Assembly – Overtravel . . . . .	76.5	Support – Aft Servo . . . . .	29.3
Spacer – Cyclic Friction . . . . .	67.17	Spring Pin – Fan Installation . . . . .	62.23	Support – Bellcrank . . . . .	67.41
Spacer – Empennage . . . . .	53.37	Spring Washer (Door Vent) . . . . .	52.4	Support – Bellcrank . . . . .	67.45
Spacer – Landing Gear . . . . .	32.1	Spring Washer (Door Vent) . . . . .	52.9	Support – Cylinder Installation . . . . .	32.13
Spacer – MR Blade Assy . . . . .	62.3	Stabilizer – Float . . . . .	53.41	Support – Cylinder Installation . . . . .	32.15
Spacer – Main Rotor Gearbox . . . . .	63.2	Stabilizers . . . . .	53.37	Support – Engine . . . . .	71.3
Spacer – Main Rotor Gearbox . . . . .	63.3	Starter . . . . .	71.52	Support – Forward Servos . . . . .	29.1
Spacer – Micro Camera Install . . . . .	22.13	Starter . . . . .	71.55	Support – Fuel Pump . . . . .	28.18
Spacer – Pitot Fitting . . . . .	95.28	Starter Cable . . . . .	71.51	Support – Fuel Pump . . . . .	28.22
Spacer – Primer Pump Line . . . . .	28.37	Starter Cable . . . . .	71.55	Support – Gascolator . . . . .	28.17
Spacer – Push-Pull Tube Guide . . . . .	67.51	Start Booster – Magneto . . . . .	96.63	Support – Gascolator . . . . .	28.21
Spacer – Rotor Brake . . . . .	63.2	Static Lines – Aspen . . . . .	95.67	Support – Gimbal Installation . . . . .	92.1
Spacer – Rotor Brake . . . . .	63.7	Static Lines – Aspen . . . . .	95.71	Support – Hub Bearing Tool . . . . .	99.19
Spacer – Seat Harness . . . . .	25.7	Stem – Carb Heat Assist . . . . .	76.13	Support – Jackshaft Install . . . . .	67.53
Spacer – Seat Harness . . . . .	25.9	Stiffener – Console . . . . .	97.1	Support – Jackshaft Install . . . . .	67.57
Spacer – Seat Harness . . . . .	25.13	Stiffener – Panel . . . . .	53.2	Support – Jackshaft Install . . . . .	67.57
Spacer – Spindle Boot Adjust . . . . .	99.17	Stiffener – Panel . . . . .	53.5	Support – Oil Cooler . . . . .	79.1
Spacer – Tail Rotor Assembly . . . . .	64.1	Stiffener – Windshield . . . . .	52.11	Support – Jackshaft Install . . . . .	67.57
Spacer – Tail Rotor Assembly . . . . .	64.5	Stop – Clutch Assembly . . . . .	63.15	Support Assy – Aft Bellcrank . . . . .	67.41
Spacer – Trim Motor . . . . .	67.3	Strainer – Fuel . . . . .	28.7	Support Assy – Aft Bellcrank . . . . .	67.45
Spacer – Windshield Install . . . . .	52.12	Strainer – Fuel . . . . .	28.10	Support Weldment – Pilot Side . . . . .	97.3
Spare Parts Kit . . . . .	99.1	Strap – Aft Seat Support . . . . .	25.5	Support Weldment – Pilot Side . . . . .	97.7
Spark Plug . . . . .	71.5	Strap – Aft Seat Support . . . . .	53.20	Support Weldment – Pilot Side . . . . .	97.41
Spark Plug . . . . .	71.9	Strap – Battery . . . . .	96.24	Support Weldment – Pilot Side . . . . .	97.45
Speaker – Siren . . . . .	90.11	Strap – Battery . . . . .	96.29	Support Weldment – Pilot Side . . . . .	97.50
Speaker – Siren . . . . .	90.12	Strap – Battery . . . . .	96.29	Switch – A/C Cutoff . . . . .	21.11
Spindle Assembly . . . . .	62.3	Strap – Battery . . . . .	96.31	Switch – Aft Monitor Install . . . . .	92.17
Spirap – Battery Cable . . . . .	96.41	Strap – Battery . . . . .	96.31	Switch – Collective . . . . .	67.22
Spirap – Battery Cable . . . . .	96.19	Strap – ELT Unit . . . . .	25.29	Switch – Cyclic . . . . .	67.1
Spirap – Cable (Vent/Heat) . . . . .	21.2	Strap – Oil Cooler Installation . . . . .	79.1	Switch – Cyclic . . . . .	67.11
Spirap – Cable (Vent/Heat) . . . . .	21.2	Strap – Oil Cooler Installation . . . . .	79.7	Switch – Cyclic . . . . .	67.11
Spirap – Searchlight Wiring . . . . .	90.6	Strap – Pilot Handbook . . . . .	25.19	Switch – ELT . . . . .	25.29
Spirap – Test Switch Wiring . . . . .	96.49	Strap – Radio Installation . . . . .	97.1	Switch – Fire Detection . . . . .	96.49
Spirap – Test Switch Wiring . . . . .	96.53	Strip – Float Installation . . . . .	32.19	Switch – Floor . . . . .	97.17
Splice – Wire . . . . .	33.11	Strip – Float Installation . . . . .	32.29	Switch – Full Throttle Light . . . . .	21.11
Spotlight Assembly . . . . .	21.34	Strip – Balance . . . . .	62.3	Switch – High Pressure (A/C) . . . . .	21.25
		Strobe Light . . . . .	33.1	Switch – Hourmeter . . . . .	96.57

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Switch – Hydraulic . . . . .	29.8	Tape – Aluminum . . . . .	71.14	Tools – Maintenance . . . . .	99.15
Switch – Hydraulic . . . . .	29.12	Tape – Aluminum . . . . .	71.22	Tools – Maintenance . . . . .	99.21
Switch – Ignition . . . . .	95.5	Tape – Aluminum . . . . .	71.27	Torque Tube – Cyclic Friction . .	67.17
Switch – Ignition . . . . .	95.15	Tape – Exhaust System . . . . .	71.31	Transceiver . . . . .	97.1
Switch – Landing Light . . . . .	67.14	Tape – Frame . . . . .	53.20	Transceiver . . . . .	97.31
Switch – Low Fuel . . . . .	28.7	Tape – Frame . . . . .	21.38	Transceiver . . . . .	97.38
Switch – Low Pressure (A/C) . .	21.25	Tape – Heater Installation . . . . .	96.13	Transceiver . . . . .	97.41
Switch – Pitot Heat . . . . .	95.31	Tape – Tailcone . . . . .	53.13	Transceiver . . . . .	97.49
Switch – Radar Altimeter . . . . .	95.33	Tape – Windshield Installation . .	52.11	Transponder . . . . .	97.1
Switch – Radar Altimeter . . . . .	95.35	Tee – Hydraulic Lines . . . . .	29.4	Transponder . . . . .	97.19
Switch – Remote (Pointer ELT) . .	25.33	Tee – Hydraulic Lines . . . . .	29.15	Transponder . . . . .	97.35
Switch – Rotor Brake . . . . .	63.2	Tee – Hydraulic Lines . . . . .	29.17	Tray – Aft Interior . . . . .	6.11
Switch – Rotor Brake . . . . .	63.7	Tee – Oil Pressure Sender . . . . .	79.3	Tray Assembly – VCR . . . . .	90.17
Switch – Spotlight . . . . .	21.34	Tee – Pitot/Static Installation . .	95.27	Trim Controller . . . . .	67.3
Switch – Spotlight . . . . .	33.15	Tee – Pop-Out Float Installation . .	32.23	Tube – Four Point Harness . . . .	25.15
Switch – Spotlight . . . . .	33.17	Tee – Pop-Out Float Installation . .	32.25	Tube – Inner (Ground Wheel) . . .	9.1
Switch – Test . . . . .	96.49	Tee – Pop-Out Float Installation . .	32.27	Tube – Inner (Ground Wheel) . . .	9.6
Switch – Test . . . . .	96.53	Tee – Primer Line . . . . .	28.33	Tube – MAP Gage . . . . .	95.27
Switch – Trim . . . . .	22.1	Tee – Primer Line . . . . .	28.37	Tube – Pitot/Static . . . . .	95.27
Switch – Trim . . . . .	67.1	Tee Fitting – Blind Encoder . . . . .	97.19	Tube – Pitot/Static . . . . .	95.28
Switch – Trim . . . . .	67.11	Telatemp Indicator . . . . .	63.15	Tube – Push-Pull (MR Controls) . .	67.27
Switch – Vacuum (Fuel) . . . . .	28.17	Telatemp Ind. – MRGB . . . . .	63.1	Tube – Push-Pull (MR Controls) . .	67.31
Switch – Vacuum (Fuel) . . . . .	28.21	Telatemp Ind. – Upper Bearing . .	63.15	Tube – Push-Pull (MR Controls) . .	67.35
Switch Assembly – Actuator . . .	63.20	Telatemp Ind. – TRGB . . . . .	65.8	Tube – Push-Pull (MR Controls) . .	67.49
Switches – Duct Assembly . . . .	21.33	Telatemp Ind. – Hyd. Pump . . . .	29.17	Tube – Push-Pull (MR Controls) . .	67.51
Switches – Intercom . . . . .	67.11	Temp. Probe – Carburetor Air . . .	71.7	Tube – Push-Pull (MR Controls) . .	67.53
Switches – Panel . . . . .	95.5	Temp. Probe – Outside Air . . . .	96.49	Tube – Push-Pull (MR Controls) . .	67.59
Switches – Panel . . . . .	95.14	Temp. Probe – Cylinder Head . . .	96.50	Tube – Push-Pull (TR Controls) . .	65.7
Switches – Panel . . . . .	95.15	Temp. Probe – Cylinder Head . . .	96.53	Tube – Push-Pull (TR Controls) . .	67.81
Switches – Panel . . . . .	97.31	Temperature Sender – Oil . . . . .	71.6	Tube – Push-Pull (TR Controls) . .	67.85
		Temperature Sender – Oil . . . . .	79.9	Tube – Push-Pull (TR Controls) . .	67.89
Tachometer . . . . .	95.1	Temperature Sender – Oil . . . . .	79.11	Tube – Push-Pull (Throttle) . . . .	76.1
Tachometer . . . . .	95.19	Temperature Sender – Oil . . . . .	96.49	Tube – Push-Pull (Throttle) . . . .	76.6
Tachometer . . . . .	95.39	Terminal Block . . . . .	95.61	Tube Assembly – Heated Pitot . . .	95.31
Tachometer . . . . .	95.43	Terminal Block . . . . .	96.5	Tube Assembly – Skid . . . . .	32.1
Tail Light . . . . .	33.7	Terminal Block . . . . .	96.16	Tube Assembly – Skid . . . . .	32.19
Tail Rotor Assembly . . . . .	64.1	Test – Switches . . . . .	96.49	Tube Assembly – Skid . . . . .	32.29
Tail Rotor Assembly . . . . .	64.5	Test – Switches . . . . .	96.53	Tube Weldment – Jackshaft . . . .	67.53
Tail Rotor Drive Shaft . . . . .	65.1	Test Plug – Actuator . . . . .	96.55	Tube Weldment – Jackshaft . . . .	67.59
Tail Skid . . . . .	53.38	Throttle – Engine . . . . .	76.1		
Tailcone Assembly . . . . .	53.25	Throttle – Engine . . . . .	76.5	Ty-Rap – Carburetor . . . . .	71.7
Tailcone Assembly . . . . .	53.28	Thrust Washer – Act. Bearing . . .	63.19	Ty-Rap – ELT Installation . . . . .	25.29
Tailcone Cowling . . . . .	53.13	Thrust Washer – MR Install . . . .	62.7	Ty-Rap – ELT Installation . . . . .	25.33
Tape – Aft Cowling . . . . .	53.5	Tie-Down – Main Rotor Blade . . .	10.1	Ty-Rap – Hydraulic Lines . . . . .	29.8
Tape – Airbox . . . . .	71.14	Tie-Down – Provision . . . . .	10.5	Ty-Rap – Hydraulic Lines . . . . .	29.12
Tape – Cowl Panels (Anti-Chafe) .	53.1	Time Delay – Actuator . . . . .	96.55	Ty-Rap – Ignition Harness . . . . .	71.6
Tape – Cowl Panels (Anti-Chafe) .	53.5	Time Delay – Low Fuel . . . . .	95.1	Ty-Rap – Ignition Harness . . . . .	71.10
Tape – Cowl Panels (Anti-Chafe) .	53.13	Time Delay – Low Fuel . . . . .	95.20	Ty-Rap – MRGB Cooling Hose . . .	29.12
Tape – Cowl Panels (Anti-Chafe) .	53.15	Time Delay – Low Fuel . . . . .	95.39	Ty-Rap – MRGB Cooling Hose . . .	71.49
Tape – Aluminum . . . . .	21.15	Tip Cover – Main Rotor Blade . . .	62.1	Ty-Rap – Nipple . . . . .	33.13
Tape – Aluminum . . . . .	21.38	Tip Cover (Rotor Blade) . . . . .	62.4	Ty-Rap – Nipple . . . . .	71.51
Tape – Aluminum . . . . .	28.2	Tip Cover (Rotor Blade) . . . . .	64.5	Ty-Rap – Nipple . . . . .	71.55
Tape – Aluminum . . . . .	33.7	Tire – Ground Wheels . . . . .	9.1	Ty-Rap – Nipple . . . . .	71.59
Tape – Aluminum . . . . .	53.5	Tire – Ground Wheels . . . . .	9.6	Ty-Rap – Nipple . . . . .	79.3

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Ty-Rap – Searchlight Install . . . .	90.5	Wheel – Ground Handling . . . . .	9.5		
Ty-Rap – Spotlight (Wires) . . . .	33.15	Wheel – Ground Handling . . . . .	9.9		
Ty-Rap – Spotlight (Wires) . . . .	33.17	Wind Deflector . . . . .	53.43		
Ty-Rap – Swashplate Boot . . . .	67.61	Windshield Cover . . . . .	10.3		
Ty-Rap – Swashplate Boot . . . .	67.65	Windshield Sealant . . . . .	52.11		
Ty-Rap – Swashplate Boot . . . .	67.70	Windshield Tape . . . . .	52.11		
Ty-Rap – VCR Cables . . . . .	90.17	Windshields . . . . .	52.11		
Ty-Rap – VCR Cables . . . . .	90.19	Wingnut – Battery Box . . . . .	96.1		
		Wingnut – Battery Box . . . . .	96.5		
UHF Antenna . . . . .	97.38	Wingnut – Battery Box . . . . .	96.9		
Union – Manifold Pressure Line . .	95.27	Wingnut – Battery Box . . . . .	96.13		
Union – Pitot/Static Installation . .	95.27	Wingnut – Battery Box . . . . .	96.15		
Upper Bearing – Clutch . . . . .	63.15	Wire Harness – Blind Encoder . .	97.19		
Upper Frame (Steel Tube) . . . . .	53.19	Wire Harness – Cyclic . . . . .	67.3		
Upper Sheave . . . . .	63.15	Wire Harness – Fuel Qty Sender	28.7		
		Wire Harness – MR Gearbox . . .	63.1		
Valve – Float Tube Press. Relief	32.23	Wire Harness – Power Booster . .	96.69		
Valve – Float Tube Press. Relief	32.25	Wire Harness – Power Conv. . . .	96.71		
Valve – Float Tube Press. Relief	32.30	Wire Harness – Power Conv. . . .	96.73		
Valve – Fuel . . . . .	28.13	Wire Harness – Rotor Brake . . . .	63.7		
Valve – Carb Heat . . . . .	76.9	Wire Harness – TR Gearbox . . . .	65.7		
Valve – Thermostatic Bypass . .	71.6	Wire Harness – Trim Controller . .	67.3		
Valve – Thermostatic Bypass . .	79.9	Wrench – Float Valve . . . . .	32.25		
Valve Assembly – Cabin Heater	21.38				
Vane Assembly – Scroll . . . . .	71.27	Yoke – Drive System . . . . .	63.3		
V-Belts . . . . .	63.23	Yoke – Drive System . . . . .	63.13		
VCR Installation . . . . .	90.17	Yoke – Drive System . . . . .	63.15		
Vent Doors – Cabin . . . . .	52.2	Yoke – Flight Controls . . . . .	67.27		
Vent Doors – Cabin . . . . .	52.8	Yoke – Flight Controls . . . . .	67.31		
Vent Installation – Cabin . . . . .	21.1	Yoke – Flight Controls . . . . .	67.39		
Vent Plug – Tail Rotor Gearbox . .	65.7	Yoke – Main Rotor Gearbox . . . .	63.3		
Vent Tube – Fuel . . . . .	28.1	Yoke – Tail Rotor Gearbox . . . .	65.11		
Voltage Regulator (28V to 14V)	95.61	Yoke Assembly – Swashplate . .	67.61		
VSI (Rate-of-climb Indicator) . .	95.43	Yoke Assembly – Swashplate . .	67.65		
VU Meter . . . . .	92.17	Yoke Assembly – Swashplate . .	67.69		
Warning Lights . . . . .	95.1				
Warning Lights . . . . .	95.5				
Warning Lights . . . . .	95.14				
Warning Lights . . . . .	95.20				
Warning Unit – Low RPM . . . . .	95.6				
Warning Unit – Low RPM . . . . .	95.15				
Warning Unit – Low RPM . . . . .	95.56				
Warning Unit – Low RPM . . . . .	95.59				
Warning Unit – Low RPM . . . . .	95.61				
Washer – MR Installation . . . . .	62.7				
Washer – Thrust (Actuator) . . . .	63.19				
Weather Strip – Cabin Doors . . . .	52.1				
Weather Strip – Cabin Doors . . . .	52.7				
Web Assembly – Console . . . . .	95.14				
Weight – Balance . . . . .	62.1				
Weight – Balance . . . . .	64.6				
Weldment – Jackshaft Assy . . . .	67.53				
Wheel – Ground Handling . . . . .	9.1				