


ROBINSON HELICOPTER COMPANY

R44 MAINTENANCE MANUAL

AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS

RTR 460 VOLUME I

Type Certificate Number H11NM

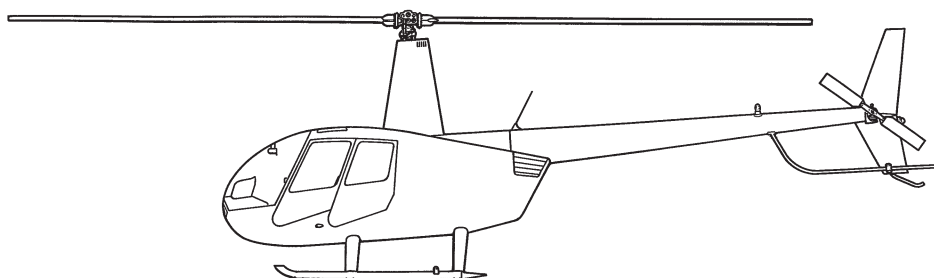

Robinson Helicopter Company
2901 Airport Drive
Torrance, California 90505-6115
UNITED STATES

Phone: (310) 539-0508
Fax: (310) 539-5198
Web: www.robinsonheli.com

OFFICE HOURS

Monday through Friday, 7:30 a.m. to 4:30 p.m., Pacific Time.
Lunch hour is 11:30 a.m. to 12:30 p.m.

HOLIDAYS

Please visit www.robinsonheli.com and click on the Customer Support tab for a complete list of holidays and company shutdowns.

CUSTOMER SUPPORT AND ORDERS

Please visit www.robinsonheli.com and click on the Customer Support tab for a complete service directory.

Procure parts from any R44 Dealer or Service Center, or order directly from assigned [RHC Customer Service Representative](#) via email, fax, or phone.

PUBLICATIONS

Please visit www.robinsonheli.com and click on the Publications tab to view our publications electronically.

SUBSCRIPTION ORDER AND RENEWAL FORM

Name: _____ Phone: _____
 Address: _____ Fax: _____
 _____ Email: _____

I Own R22 Serial Number(s): _____
 I Own R44/R44 II Serial Number(s): _____
 I Own R66 Serial Number(s): _____

Covers updates during the subscription period only. Requests for revisions produced before the subscription period are subject to an additional charge at the full subscription rate for each past year requested.

MODEL/CLASS	DESCRIPTION	PRICE/YR.	QTY.	TOTAL
R22				
A	Future updates to R22 Pilot's Operating Handbook & Safety Notices	\$15.00	___	___
B	Future updates to R22 Pilot's Operating Handbook & Safety Notices, R22 Service Bulletins & Service Letters	\$25.00	___	___
C	Future updates to R22 Pilot's Operating Handbook & Safety Notices, R22 Service Bulletins, Service Letters, & R22 Maintenance Manual/Illustrated Parts Catalog revisions	\$45.00	___	___
R44				
Q	Future updates to R44 Pilot's Operating Handbook & Safety Notices	\$15.00	___	___
R	Future updates to R44 Pilot's Operating Handbook & Safety Notices, R44 Service Bulletins & Service Letters	\$25.00	___	___
S	Future updates to R44 Pilot's Operating Handbook & Safety Notices, R44 Service Bulletins, Service Letters, & R44 Maintenance Manual/Illustrated Parts Catalog revisions	\$45.00	___	___
R44 II				
V	Future updates to R44 II Pilot's Operating Handbook & Safety Notices	\$15.00	___	___
W	Future updates to R44 II Pilot's Operating Handbook & Safety Notices, R44 Service Bulletins & Service Letters	\$25.00	___	___
X	Future updates to R44 II Pilot's Operating Handbook & Safety Notices, R44 Service Bulletins, Service Letters, & R44 Maintenance Manual/Illustrated Parts Catalog revisions	\$45.00	___	___
R66				
J	Future updates to R66 Pilot's Operating Handbook & Safety Notices	\$15.00	___	___
K	Future updates to R66 Pilot's Operating Handbook & Safety Notices, R66 Service Bulletins & Service Letters	\$25.00	___	___
L	Future updates to R66 Pilot's Operating Handbook & Safety Notices, R66 Service Bulletins, Service Letters, & R66 Maintenance Manual/Illustrated Parts Catalog revisions	\$45.00	___	___

Method of Payment: No cash or CODs. We cannot be responsible for cash sent by mail. For faster processing, order online.

- U.S. Check, Money Order, payable to Robinson Helicopter Company
- Wire Transfer (subscription will not take effect until wire transfer has been received)
- VISA, MasterCard or American Express

Credit Card Number: _____ Month / Year: _____
 Cardholder Signature: _____ Verification Code: _____
 Billing Zip: _____

Return to: **ROBINSON HELICOPTER COMPANY**, Attn: Subscriptions
 2901 Airport Drive, Torrance, CA 90505 Fax: (310) 539-5198

CHAPTER LIST

	Introduction
Chapter 1	General
Chapter 2	Inspection
Chapter 3	Life-Limited Components
Chapter 4	Airframe
Chapter 5	Landing Gear
Chapter 6	Powerplant
Chapter 7	Drive Train
Chapter 8	Flight Controls
Chapter 9	Rotor Systems
Chapter 10	Rigging, Track and Balance
Chapter 11	Heating, Ventilation and Air Conditioning
Chapter 12	Fuel System
Chapter 13	Instruments
Chapter 14	Electrical and Avionics Systems
Chapter 15	Furnishings
Chapter 16	Special Tools
Chapter 17	Revision Log

TECHNICAL PUBLICATIONS
RECOMMENDED CHANGE REPORT

Please direct recommended changes to RHC Technical Publications via the email address listed below, by phone, or by submitting a duplicate of this completed form by fax or mail. Please include or have available the information detailed by this form.

Recommended changes may include but are not limited to: general comments, corrections, omitted information, or clarification of instructions.

Please send recommendations to:

Email: techpubs@robinsonheli.com
Phone: (310) 539-0508
Fax: (310) 539-5198

Robinson Helicopter Company
Attention: Technical Publications
2901 Airport Drive
Torrance, CA 90505-6115
UNITED STATES

Date:	_____	Publication:	_____
Name:	_____	Chapter:	_____
Company:	_____	Section:	_____
Helicopter Model:	_____	Page:	_____
Serial Number:	_____	Revision:	_____
Phone:	_____		
Email:	_____		

COMMENTS:

LIMITED AIRCRAFT WARRANTY

Effective R22 S/N 3318 & on; R44 S/N 1202 & on

Robinson Helicopter Company, Inc. (hereafter referred to as RHC) warrants each new helicopter to be free from defects in material and workmanship appearing within two years from the date of delivery from the RHC factory or during the first one thousand (1000) hours of operation, whichever event occurs first; provided, the aircraft has been subjected to normal use and service. This Warranty is limited to repair or replacement on an exchange basis, as selected by RHC, of any part, which upon examination by RHC is deemed to have been defective when the aircraft left the factory. A new warranty period is not established for parts replaced under the terms of this Warranty. Such replacement parts are warranted only for the remainder of the original warranty period. This Warranty shall not apply to any helicopter or part which has been repaired or altered outside the factory, and which, in RHC's judgment, has affected the performance or reliability of the helicopter or part. This Warranty shall not apply to any helicopter or part which has been subject to corrosion, misuse, negligence or accident, nor to any parts normally replaced during routine maintenance, such as, air cleaners, skid shoes, rod end or spherical bearings, light bulbs, etc. This Warranty shall not apply to any helicopter, which has been crated for shipping unless such crating is performed by RHC. RHC is not responsible for the cost of shipping parts under the terms of this Warranty. However, RHC will credit the RHC Dealership, which sold and delivered the new helicopter to its original owner, with an allowance for labor performed by that Dealership for removing and reinstalling the defective part. No credit will be issued for trouble-shooting.

RHC makes no Warranty with respect to batteries, instruments, avionics or other trade accessories since they are usually warranted separately by their respective manufacturers. New aircraft are equipped with new engines which have a separate Lycoming limited warranty.

ADDITIONAL WARRANTY FOR MAIN & TAIL GEARBOXES

In addition to the warranty specified above, an extended pro-rated warranty shall apply to the main and tail gearboxes for the first 2200 hours of service or three years from the date of manufacture, whichever event occurs first. During this period, if a gearbox must be overhauled due to failure of a part which was defective when it left the factory, RHC will pro-rate the cost of the overhaul by dividing the hours in service by 2200 or the months in service by thirty-six (36), whichever fraction is greater.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESS, IMPLIED, OR STATUTORY, WHETHER WRITTEN OR ORAL, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR TRADE USAGE, THE REMEDIES OF THE BUYER SHALL BE LIMITED TO THOSE PROVIDED HEREIN. IN NO EVENT WILL THE MANUFACTURER BE LIABLE FOR LOSSES RESULTING FROM LOSS OF USE OF THE HELICOPTER, COLLATERAL, CONSEQUENTIAL OR SPECIAL DAMAGES, OR ANY OTHER COSTS.

Warranty adjustments with respect to any helicopter or parts manufactured by RHC will be made only upon compliance with the following procedure:

- (1) The defective part or assembly, together with a written Warranty Claim, must be returned to RHC not later than thirty (30) days after discovery of the defect nor more than thirty (30) days after expiration of the Warranty period.*
- (2) RHC will, after inspection, determine whether the material or part was defective when it left the factory and will respond accordingly. Final determination of a Warranty adjustment rests with RHC.*

**ROBINSON HELICOPTER COMPANY, INC.
2901 Airport Drive
Torrance, California 90505 U.S.A.**

Effective 1 February 2003

LIMITED PARTS WARRANTY

Robinson Helicopter Company, Inc. (hereafter referred to as RHC) warrants each new helicopter part to be free from defects in material and workmanship appearing within one year from the date of delivery from the RHC factory or during the first one thousand (1000) hours of operation, whichever event occurs first; provided, the part has been subjected to normal use and service. This Warranty is limited to repair or replacement on an exchange basis, as selected by RHC, of any part, which upon examination by RHC is deemed to have been defective when the part left the factory. A new warranty period is not established for parts replaced under the terms of this Warranty. Such replacement parts are warranted only for the remainder of the original warranty period. RHC is not responsible for the cost of removing, shipping, or reinstallation of parts under the terms of this Warranty. This Warranty shall not apply to any part which has been repaired or altered outside the factory, and which, in RHC's judgment, has affected the performance or reliability of the part. This Warranty shall not apply to any part which has been subject to corrosion, misuse, negligence or accident, nor to any parts normally replaced during routine maintenance, such as, air cleaners, skid shoes, rod end or spherical bearings, light bulbs, etc.

RHC makes no Warranty with respect to batteries, instruments, avionics or other trade accessories since they are usually warranted separately by their respective manufacturers.

ADDITIONAL WARRANTY FOR MAIN & TAIL GEARBOXES

In addition to the warranty specified above, an extended pro-rated warranty shall apply to the main and tail gearboxes for the first 2200 hours of service or three years from the date of manufacture, whichever event occurs first. During this period, if a gearbox must be overhauled due to failure of a part which was defective when it left the factory, RHC will pro-rate the cost of the overhaul by dividing the hours in service by 2200 or the months in service by thirty-six (36), whichever fraction is greater.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESS, IMPLIED, OR STATUTORY, WHETHER WRITTEN OR ORAL, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR TRADE USAGE, THE REMEDIES OF THE BUYER SHALL BE LIMITED TO THOSE PROVIDED HEREIN. IN NO EVENT WILL THE MANUFACTURER BE LIABLE FOR LOSSES RESULTING FROM LOSS OF USE OF THE HELICOPTER, COLLATERAL, CONSEQUENTIAL OR SPECIAL DAMAGES, OR ANY OTHER COSTS.

Warranty adjustments with respect to any helicopter or parts manufactured by RHC will be made only upon compliance with the following procedure:

- (1) The defective part or assembly, together with a written Warranty Claim, must be returned to RHC not later than thirty (30) days after discovery of the defect nor more than thirty (30) days after expiration of the Warranty period.*
- (2) RHC will, after inspection, determine whether the material or part was defective when it left the factory and will respond accordingly. Final determination of a Warranty adjustment rests with RHC.*

ROBINSON HELICOPTER COMPANY, INC.
2901 Airport Drive
Torrance, California 90505 U.S.A.

01 June 06

CONTENTS

INTRODUCTION

<u>Section</u>	<u>Title</u>	<u>Page</u>
—	Cover Page	i
—	Subscription Order and Renewal Form	ii
—	Chapter List	iii
—	Recommended Change Report	iv
—	Limited Aircraft Warranty	v
—	Limited Parts Warranty	vi
—	Contents	vii

CHAPTER 1 — GENERAL

<u>Section</u>	<u>Title</u>	<u>Page</u>
1.000	Introduction	1.1
	1.001 R44 Maintenance Manual Revisions	1.1
	1.002 R44 Maintenance Authorization	1.1
	1.003 R44 Component Overhaul Authorization	1.1
	1.004 Maintenance Record	1.2
	1.005 Notations	1.2
	1.006 Definitions and Abbreviations	1.2A
	1.007 Service Directory	1.2B
	1.008 External Dimensions	1.3
	1.009 Version Description	1.3B
1.100	Helicopter Servicing	1.3D
	1.101 Scheduled Maintenance and Inspections	1.3D
	1.105 Calibration of Tools	1.3D
	1.110 Lubrication - General	1.3D
	1.115 Chip Detector Cleaning	1.4
	1.120 Main Rotor Gearbox Drain and Flush	1.4
	1.130 Tail Rotor Gearbox Drain and Flush	1.7
	1.140 Clutch Actuator Lower Bearing Lubrication	1.8
	1.150 Defueling	1.8
	1.160 Storage	1.8A
	1.170 Hydraulic Reservoir Filter Replacement	1.8A
	1.180 Draining and Flushing Hydraulic System	1.8B
	1.190 Bleeding Hydraulic System	1.8C
1.200	Handling, Jacking, Hoisting, Leveling and Weighing	1.9
	1.210 Ground Handling	1.9
	1.211 Ground Handling Wheels Installation	1.9
	1.212 Ground Handling Wheels Installation - Float Ship Landing Gear	1.10A
	1.213 Moving the Helicopter on Ground Handling Wheels	1.11
	1.214 Main Rotor Blade Tie-Downs	1.11
	1.215 Parking	1.11
	1.216 Trailering	1.11
	1.220 Jacking, Hoisting and Leveling	1.13
	1.230 Weighing and CG Calculation	1.16
	1.231 Helicopter Weighing Procedure	1.16
	1.240 Ballast Installation	1.19
1.300	Fastener Torque Requirements	1.20

CONTENTS

CHAPTER 1 — GENERAL (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
	1.310 General	1.20
	1.320 Standard Torques	1.22
	1.330 Special Torques	1.23
1.400	Approved Materials	1.28
	1.410 Paint Strippers	1.28
	1.420 Solvents and Cleaners	1.28
	1.430 Fillers and Putty	1.29
	1.440 Torque Seal	1.29
	1.450 Primers	1.29
	1.455 Powder Coat	1.29
	1.460 Paints	1.31
	1.470 Lubricants	1.32
	1.480 Adhesives and Sealants	1.34
	1.490 Storage Limits	1.36
1.500	(Reserved)	1.36
1.600	Part Interchangeability	1.37
1.700	Special Instructions for Reassembling and Flight Testing R44 Series Helicopters After Crating for Export	1.38
1.800	Replacement Component Identification (Data) Plates	1.42

CHAPTER 2 — INSPECTION

<u>Section</u>	<u>Title</u>	<u>Page</u>
2.000	Introduction	2.1
2.100	General Procedures	2.1
	2.110 Ball and Roller Bearings	2.1
	2.120 Push-Pull Tubes, Rod Ends, and Spherical Bearings	2.2
	2.121 Push-Pull Tubes	2.2
	2.122 Rod Ends and Spherical Bearings	2.2
	2.125 Elastomeric Bearings	2.4
	2.130 Telatemp Indicators	2.6
2.200	Ground and Flight Check for 100-Hour / Annual Inspection	2.7
	2.205 Ground Check	2.7
	2.210 Run Up	2.9
	2.220 Flight Check	2.11
	2.230 Shutdown	2.11
2.300	Airframe Preparation for 100-Hour / Annual Inspection	2.13
2.400	100-Hour / Annual Airframe Inspection	2.13
	2.410 Inspection Procedures and Checklist	2.13
2.500	Special Inspections	2.39
	2.501 Upper and Lower Clutch Actuator Bearings Inspection	2.39
	2.502 C181 Lower Bearing Inspection	2.39
	2.503 C184 Upper Bearing Inspection	2.40
	2.507 V-Belt Inspection	2.41
	2.508 Lower Sheave V-Belt Wear Pattern Inspection	2.43
	2.510 Tail Skid Strike	2.45
	2.520 Tail Rotor Strike	2.48

CONTENTS

CHAPTER 2 — INSPECTION (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
	2.530 Main Rotor Strike	2.49
	2.540 Rotor/Engine Overspeed	2.50
	2.550 Hard Landing	2.51
	2.560 Penetrant Inspection of C020 Upper Steel Tube Frame	2.53
	2.561 Corrosion on C020 Upper Steel Tube Frame	2.54
	2.570 Volcanic Ash Recommendations	2.55
	2.580 Windshield Inspection	2.56
	2.590 Lightning Strike	2.56A
2.600	12-Year Inspection and Limited Overhaul Requirements	2.57
	2.610 Inspection Procedures	2.57
	2.620 (Reserved)	2.58
	2.630 Component Inspection Procedures	2.59
2.700	2200-Hour Overhaul Requirements	2.60
	2.710 Inspection Procedure	2.60

CHAPTER 3 — LIFE-LIMITED COMPONENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
3.000	Life-Limited Components	3.1
	3.001 Introduction	3.1
	3.002 Time-In-Service Records	3.1
	3.003 Fatigue Life-Limited Parts	3.1
3.100	Overhaul Requirements	3.2
	3.110 Powerplant Overhaul Requirements	3.2
	3.120 Aircraft Overhaul Requirements	3.2
3.200	Type Certificate Data Sheet (TCDS)	3.2
3.300	Airworthiness Limitations	3.9

CHAPTER 4 — AIRFRAME

<u>Section</u>	<u>Title</u>	<u>Page</u>
4.000	Airframe	4.1
	4.001 Introduction	4.1
	4.002 Description	4.1
4.100	Fuselage	4.1
	4.110 Cabin Assembly	4.1
	4.111 Cabin Assembly Repairs	4.1
	4.120 Windshield Assembly	4.3
	4.121 Windshield Removal	4.3
	4.122 Windshield Replacement	4.3
	4.123 Windshield Installation	4.4
	4.130 Door Removal and Installation	4.5
	4.131 Door Removal	4.5
	4.132 Door Installation	4.5
	4.140 Fairing, Cowling and Inspection Panels	4.5
	4.141 Engine Cowling	4.5
	4.142 Mast Fairing	4.6

CONTENTS

CHAPTER 4 — AIRFRAME (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
	4.143 Upper Cowling	4.6
	4.144 Cabin Inspection Panels	4.7
4.200	Steel Tube Frame Assemblies	4.8
	4.210 Lower Frame Assembly, LH	4.8
	4.211 Frame Removal	4.8
	4.212 Frame Installation	4.12
	4.220 Lower Frame Assembly, RH	4.13
	4.221 Frame Removal	4.13
	4.222 Frame Installation	4.13
	4.230 Upper Frame Assembly	4.14
	4.231 Frame Removal	4.14
	4.232 Frame Installation	4.15
	4.240 Strut Assembly Removal and Installation	4.15
4.300	Tailcone Assembly	4.17
	4.310 Inspection and Repair	4.19
4.400	Empennage Assembly	4.21
	4.410 Vertical Stabilizers	4.21
	4.411 C042-1 Upper Vertical Stabilizer	4.21
	4.412 C043-1 Lower Vertical Stabilizer	4.22
	4.420 Horizontal Stabilizer(s)	4.23
	4.421 C044-1 Horizontal Stabilizer	4.23
	4.422 (R44 Clipper) C050-2 Aux Stabilizer	4.23
	4.430 Tail Rotor Guard	4.25
	4.440 Tail Skid	4.26

CHAPTER 5 — LANDING GEAR

<u>Section</u>	<u>Title</u>	<u>Page</u>
5.000	Landing Gear	5.1
	5.001 Introduction	5.1
	5.002 Description	5.1
5.100	Landing Gear Assembly	5.1
	5.110 Landing Gear Removal	5.1
	5.120 Landing Gear Installation	5.5
5.200	Cross Tubes	5.5
	5.210 Cross Tube Removal	5.5
	5.220 Cross Tube Installation	5.6
5.300	Skid Tubes	5.6
	5.310 Skid Tube Removal	5.6
	5.320 Skid Tube Installation	5.6
	5.330 Skid Shoe Replacement	5.6
	5.340 Ground Handling Wheel Support Replacement	5.7
	5.350 Skid Extension Replacement	5.7
5.400	Strut Fairings	5.7
	5.410 Strut Fairing Removal	5.7
	5.420 Strut Fairing Installation	5.8
5.500	Utility Float Landing Gear	5.9

CONTENTS

CHAPTER 5 – LANDING GEAR (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
	5.510 Utility Float Landing Gear Removal	5.9
	5.520 Utility Float Landing Gear Installation	5.11
	5.530 Utility Float Tube Removal	5.11
	5.540 Utility Float Tube Installation	5.11
5.600	Emergency Pop-Out Float Landing Gear	5.12
	5.610 Pop-Out Float Removal	5.12
	5.620 Pop-Out Float Installation	5.13
	5.630 Leak Check	5.15
	5.640 Emergency Inflation Test	5.16
	5.650 Pop-Out Float Packing Procedure	5.18
	5.660 Pressure Cylinder Removal	5.21
	5.665 Filling Pressure Cylinder	5.22
	5.670 Pressure Cylinder Installation	5.24
	5.680 Inflation Lever Rigging	5.27
	5.690 Inflation Lever Shear-Rivet Replacement	5.27
5.700	Maintenance	5.29

CHAPTER 6 – POWERPLANT

<u>Section</u>	<u>Title</u>	<u>Page</u>
6.000	Powerplant and Related Systems	6.1
	6.001 Introduction	6.1
	6.002 Description	6.1
6.100	Powerplant	6.2
	6.110 Engine Removal	6.2
	6.120 Engine Installation	6.4
6.200	Cooling System	6.7
	6.210 Fanwheel and Scroll Removal	6.7
	6.220 Fanwheel and Scroll Installation	6.8
	6.230 (Reserved)	
	6.240 Fan Dynamic Balance	6.11
6.300	Lubrication System	6.12
	6.310 Oil Cooler Removal	6.12
	6.320 Oil Cooler Installation	6.12
6.400	Induction System	6.13
	6.410 Carburetor Removal	6.13
	6.420 Carburetor Air Box Removal	6.13
	6.430 Carburetor Air Box Installation	6.13
	6.440 Carburetor Installation	6.15
	6.450 Carburetor Heat Scoop Removal	6.15
	6.460 Carburetor Heat Scoop Installation	6.15
	6.470 Fuel Injection Air Box Removal	6.15
	6.480 Fuel Injection Air Box Installation	6.17
	6.490 Fuel Control Removal	6.17
	6.495 Fuel Control Installation	6.17
6.500	Exhaust System	6.20
	6.510 Exhaust System Removal	6.20

CONTENTS

CHAPTER 6 — POWERPLANT (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
	6.520 Exhaust System Installation	6.20
6.600	Troubleshooting	6.21
	6.610 Low-Power Checklist	6.21

CHAPTER 7 — DRIVE TRAIN

<u>Section</u>	<u>Title</u>	<u>Page</u>
7.000	Drive Train	7.1
	7.001 Introduction	7.1
	7.002 Description	7.1
7.100	Main Rotor Gearbox	7.1
	7.110 Main Rotor Gearbox Removal	7.1
	7.120 Main Rotor Gearbox Installation	7.4
	7.130 Leveling Main Rotor Gearbox	7.5
	7.140 C908-1 Yoke Replacement	7.6
	7.141 Setting Hall Effect Sender Gap	7.6
	7.150 Replacement of Main Rotor Gearbox Pinion Seal	7.6
	7.155 Main Rotor Gearbox Sump O-Ring Replacement Procedure	7.8
	7.160 Main Rotor Gearbox Overtemp Inspection	7.8A
	7.170 Main Rotor Gearbox Chip Light Indicator	7.8A
7.200	Clutch Assembly	7.9
	7.210 Clutch Assembly Lubricant Inspection and Servicing	7.9B
	7.211 C184 Bearing Assembly Removal	7.14A
	7.212 C184 Bearing Assembly Installation	7.15
	7.213 Clutch Assembly Seals Replacement	7.16
	7.220 (Reserved)	7.17
	7.230 Clutch Sheave Alignment	7.23
	7.240 Clutch Shaft Angle	7.23
	7.250 Lateral Clutch Centering	7.23
	7.260 C907 Yoke Removal and Installation	7.24
	7.270 C195 Yoke Removal and Installation	7.26
	7.280 V-Belts	7.27
	7.281 V-Belt Removal	7.27
	7.282 V-Belt Installation	7.27
	7.283 Belt Tension	7.30
	7.290 C007 Fanshaft and Bearing Assembly, Starter Ring Gear Support, Lower Sheave, and Alternator Belt Replacement	7.30
	7.291 Removal	7.30
	7.292 Installation	7.30
7.300	Tail Rotor Drive Shaft	7.31
	7.310 Tail Rotor Drive Shaft Removal	7.31
	7.320 Tail Rotor Drive Shaft Installation	7.31
	7.321 Adjustment of Damper Friction	7.33
	7.330 Intermediate Flex Plate Installation and Shimming	7.36
	7.340 Checking Tail Rotor Drive Shaft Runout	7.37
	7.350 Two-Piece Tail Rotor Drive Shaft	7.38
7.400	Tail Rotor Gearbox	7.41

CONTENTS

CHAPTER 7 – DRIVE TRAIN (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
	7.410 Tail Rotor Gearbox Removal	7.41
	7.420 Tail Rotor Gearbox Installation	7.41
	7.430 Tail Rotor Gearbox Chip Indicator	7.41
	7.440 Tail Rotor Gearbox Output Shaft Seal Replacement	7.41
	7.450 Tail Rotor Gearbox Input Shaft Seal Replacement	7.44
7.500	Actuator Assembly	7.46
	7.510 Actuator Removal	7.46
	7.520 Actuator Installation	7.46
	7.530 Actuator Gearmotor Replacement	7.47
	7.540 Adjustment of Actuator	7.49
	7.550 Switch and Fuse Replacement	7.49
	7.551 Switch Replacement	7.49
	7.552 Fuse Replacement	7.51
7.600	Rotor Brake	7.51
	7.610 Rotor Brake Removal	7.51
	7.620 Rotor Brake Installation	7.51
	7.630 Rotor Brake Pad Replacement	7.51

CHAPTER 8 – FLIGHT CONTROLS

<u>Section</u>	<u>Title</u>	<u>Page</u>
8.000	Flight Controls	8.1
	8.001 Introduction	8.1
	8.002 Description	8.1
	8.003 Hydraulic Flight Controls	8.1
	8.004 Hydraulic Pump Description	8.2
	8.005 Hydraulic Reservoir Description	8.2
	8.006 Hydraulic Servo Description	8.2
8.100	Cyclic Controls	8.3B
	8.110 Cyclic Assembly	8.3B
	8.111 Cyclic Assembly Removal	8.3B
	8.112 Cyclic Assembly Installation	8.5
	8.120 Cyclic Grip Assembly	8.6
	8.121 Cyclic Grip Assembly Removal	8.7
	8.122 Cyclic Grip Assembly Installation	8.10
	8.130 Longitudinal Cyclic Trim Elastic Cords (electric trim systems only)	8.11
	8.131 Elastic Cord Removal	8.13
	8.132 Elastic Cord Installation	8.14
	8.140 Lateral & Longitudinal Cyclic Trim Assemblies (electric trim systems only)	8.15
	8.141 Lateral Cyclic Trim Assembly Removal	8.15
	8.142 Lateral Cyclic Trim Assembly Installation	8.16
	8.143 Longitudinal Cyclic Trim Assembly Removal	8.16
	8.144 Longitudinal Cyclic Trim Assembly Installation	8.17
	8.150 Cyclic Friction Assembly	8.19
	8.161 Cyclic Friction Adjustment	8.19
	8.160 C121-7 Push-Pull Tube (electric trim systems only)	8.19
	8.161 C121-7 Push-Pull Tube Removal	8.19

CONTENTS

CHAPTER 8 – FLIGHT CONTROLS (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
	8.162 C121-7 Push-Pull Tube Inspection / Repair	8.20
	8.163 C121-7 Push-Pull Tube Sleeve Installation	8.20
	8.164 C121-7 Push-Pull Tube Sleeve Inspection	8.21
	8.165 C121-7 Push-Pull Tube Installation	8.21
8.200	Collective Control	8.24
	8.210 Collective Stick Assembly	8.24
	8.211 Collective Stick Removal	8.24
	8.212 Collective Stick Installation	8.24
	8.213 Pilot-Adjustable Collective Friction Adjustment	8.28
	8.214 Fixed Collective Friction Adjustment	8.28
	8.220 Collective Spring Assembly (manual controls only)	8.28
	8.221 Collective Spring Removal & Servicing	8.28
	8.222 Collective Spring Installation	8.30
	8.223 Collective Spring Adjustment	8.31
	8.230 RPM Governor System	8.32
	8.231 Governor Controller Removal	8.32
	8.232 Governor Controller Installation	8.32
	8.233 Governor Assembly Removal	8.33
	8.234 Governor Assembly Installation	8.33
	8.239 Governor Troubleshooting	8.33A
8.300	Jackshaft and Support Struts	8.34
	8.310 Jackshaft	8.34
	8.311 Jackshaft Removal	8.34
	8.312 Jackshaft Installation	8.34
	8.320 Strut Assembly (Jackshaft Support)	8.34
	8.321 Jackshaft Strut Removal	8.34
	8.322 Jackshaft Strut Installation	8.35
8.400	Swashplate and Main Rotor Pitch Links	8.38
	8.410 Swashplate	8.38
	8.411 Swashplate Removal	8.38
	8.412 Swashplate Installation	8.38
	8.413 Swashplate Tilting Friction Adjustment	8.44
8.500	Tail Rotor Controls	8.44
	8.510 Tail Rotor Pedals	8.44
	8.511 Tail Rotor Pedal Removal	8.44
	8.512 Tail Rotor Pedal Installation	8.45
	8.520 C317 Bellcranks	8.46
	8.521 C317-2 Lower Forward Bellcrank Removal	8.46
	8.522 C317-2 Lower Forward Bellcrank Installation	8.46
	8.523 C317-1 Lower Aft Bellcrank Removal	8.48
	8.524 C317-1 Lower Aft Bellcrank Installation	8.49
	8.530 C316-1 Bellcranks	8.49
	8.531 Bellcrank Removal	8.49
	8.532 Bellcrank Installation	8.50
	8.540 A331-4 Intermediate Bellcrank	8.50
	8.541 Bellcrank Removal	8.50
	8.542 Bellcrank Installation	8.50

CONTENTS

CHAPTER 8 – FLIGHT CONTROLS (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
8.550	A120-3 Aft Bellcrank	8.51
	8.551 Bellcrank Removal	8.51
	8.552 Bellcrank Installation	8.51
8.560	C031-1 Pitch Control	8.51
	8.561 Pitch Control Removal	8.51
	8.562 Pitch Control Installation	8.51
8.570	Tail Rotor Pitch Links	8.52
	8.571 Tail Rotor Pitch Link Removal	8.52
	8.572 Tail Rotor Pitch Link Installation	8.52
8.600	C203 Yoke and A205 Fork Assemblies	8.54
	8.610 Bearing Removal	8.54
	8.615 C648-2 Bearing Installation	8.54
	8.620 B115-1 Bearing Installation	8.54
8.700	Hydraulic Flight Controls	8.61
	8.710 Hydraulic Reservoir Removal	8.61
	8.720 Hydraulic Reservoir Installation	8.61
	8.730 Hydraulic Pump Removal	8.62
	8.740 Hydraulic Pump Installation	8.63
	8.750 Hydraulic Servo Removal	8.64
	8.760 Hydraulic Servo Installation	8.65

CHAPTER 9 – ROTOR SYSTEMS

<u>Section</u>	<u>Title</u>	<u>Page</u>
9.000	Rotor Systems	9.1
9.100	Main Rotor	9.1
	9.110 Main Rotor Blades	9.1
	9.111 Main Rotor Blade Removal	9.1
	9.112 Main Rotor Blade Installation	9.3
	9.113 Boot Removal	9.5
	9.114 Boot Installation	9.5
	9.115 Filling Pitch Bearing Housing	9.7
	9.116 Drilling Main Rotor Hub Bolts	9.7
	9.120 Main Rotor Hub	9.8
	9.121 Main Rotor Hub Removal	9.8
	9.122 Main Rotor Hub Installation	9.8
	9.123 Main Rotor Hub Journal and Shim Calculations	9.11
	9.124 Adjustment of Hinge Friction	9.13
	9.125 Shifting the Main Rotor Hub	9.14
	9.126 Main Rotor Hub Bearing Replacement	9.15
	9.130 Inspection of Main Rotor Blades	9.17
	9.131 Scratches and Corrosion on Blade Skins and Doublers	9.17
	9.132 Dents and Local Deformations	9.19
	9.133 Root Fitting Damage	9.20
	9.134 Voids	9.21
	9.140 Repair of Main Rotor Blades	9.25
	9.141 Trimming	9.27

CONTENTS

CHAPTER 9 — ROTOR SYSTEMS (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
	9.142 Painting	9.27
9.200	Tail Rotor Assembly	9.29
	9.210 Tail Rotor Assembly Removal	9.29
	9.220 Tail Rotor Assembly Installation	9.31
	9.230 Static Balance	9.35
9.300	Tail Rotor Blades	9.38
	9.310 Tail Rotor Blade Removal	9.38
	9.320 Tail Rotor Blade Installation	9.38
9.400	Tail Rotor Blade Inspection and Repair	9.41
	9.410 Scratches and Corrosion	9.41
	9.420 Dents	9.41
	9.430 Erosion	9.42
	9.440 Root Fitting Damage	9.42
	9.450 Nicks and Notches	9.42
	9.460 Painting	9.45
9.500	Tail Rotor Hub	9.47
	9.510 Tail Rotor Hub Elastomeric Bearing Replacement	9.47
	9.520 Tail Rotor Hub Spherical Bearing Replacement	9.49
	9.530 Tail Rotor Hub Inspection	9.50

CHAPTER 10 — RIGGING, TRACK AND BALANCE

<u>Section</u>	<u>Title</u>	<u>Page</u>
10.000	Rigging, Track and Balance	10.1
	10.001 Introduction	10.1
	10.002 Rod End Adjustment Procedure	10.1
10.100	Rigging	10.2
	10.110 Main Rotor Flight Controls	10.2
	10.111 Cyclic Controls	10.2
	10.112 Swashplate	10.4
	10.113 Collective Control	10.4
	10.120 Main Rotor	10.4
	10.121 Cyclic Travel Rigging	10.7
	10.122 Collective Travel Rigging	10.10
	10.130 Tail Rotor Flight Controls	10.11
	10.131 Pedals	10.11
	10.132 C316 Bell Crank	10.12
	10.133 A120-3 Bell Crank	10.12
	10.134 Tail Rotor Pitch Links	10.12
	10.140 Tail Rotor Rigging	10.12
	10.150 Throttle Correlation Rigging	10.19
	10.160 Actuator Rigging	10.19
10.200	Track and Balance	10.19
	10.210 Equipment Requirements	10.20
	10.220 Equipment Installation	10.20
	10.221 Main Rotor Equipment Installation	10.20
	10.222 Tail Rotor Equipment Installation	10.24

CONTENTS

CHAPTER 10 — RIGGING, TRACK AND BALANCE (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
10.230	Main Rotor Track and Balance Procedure	10.27
10.231	Main Rotor Balance Adjustments	10.28
10.232	Main Rotor Pitch Link Adjustment	10.28
10.233	Main Rotor Blade Trim Tab Adjustment	10.32
10.234	Main Rotor Track and Balance Trouble-Shooting	10.33
10.240	Tail Rotor Balance Procedures	10.34
10.250	Autorotational RPM Adjustment	10.36

CHAPTER 11 — HEATING, VENTILATION AND AIR CONDITIONING

<u>Section</u>	<u>Title</u>	<u>Page</u>
11.000	Heating and Ventilation	11.1
11.001	Introduction	11.1
11.002	Description	11.1
11.100	Cabin Heater	11.1
11.110	Control Cable and Valve Replacement	11.1
11.120	Muffler Shroud Replacement	11.5
11.200	Ventilation	11.5
11.210	Cabin Air Vent Cable Removal	11.5
11.220	Cabin Air Vent Cable Installation	11.5
11.230	Door Vent	11.5
11.300	Air Conditioning	11.7
11.301	Introduction	11.7
11.302	Description	11.7
11.310	System Troubleshooting	11.9
11.320	Refrigerant	11.11
11.321	Refrigerant Recovery	11.11
11.322	Refrigerant Charge	11.11
11.323	Leak Detection	11.12
11.330	Compressor	11.13
11.331	Compressor Belt Replacement	11.13
11.332	Compressor Removal	11.13
11.333	Compressor Installation	11.14
11.340	Evaporator Assembly	11.16
11.341	Evaporator Assembly Removal	11.16
11.342	Evaporator Assembly Installation	11.17
11.343	Evaporator Drain System	11.18
11.350	Full Throttle Cut-Out Switch Rigging	11.20
11.400	Drive Cartridge	11.21
11.410	Drive Cartridge Seal Removal	11.21
11.420	Drive Cartridge Seal Installation	11.21

CHAPTER 12 — FUEL SYSTEM

<u>Section</u>	<u>Title</u>	<u>Page</u>
12.000	Description	12.1
12.100	Fuel Tanks	12.3

CONTENTS

CHAPTER 12 – FUEL SYSTEM (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
12.110	Main Tank	12.3
12.111	Main Tank Removal	12.3
12.112	Main Tank Installation	12.5
12.113	Main Tank - Bladder Replacement	12.6
12.114	Main Tank Replacement	12.9
12.120	Aux Tank	12.10
12.121	Aux Tank Removal	12.10
12.122	Aux Tank Installation	12.11
12.123	Aux Tank - Bladder Replacement	12.12
12.124	Aux Tank Replacement	12.15
12.200	Fuel Vents	12.17
12.210	Roll-Over Vent Valves	12.17
12.300	Drain Valves	12.18
12.400	Fuel Quantity	12.19
12.410	Fuel Quantity Senders	12.19
12.411	Fuel Quantity Sender Check	12.19
12.412	Fuel Quantity Indication Check	12.20
12.420	Low-Fuel Switch Assembly	12.20
12.500	Gascolator Assembly and Aux Fuel Pump Installation.	12.21
12.600	Minimum Fuel Flow Check	12.25
12.700	R44 II Troubleshooting	12.26
12.710	Flow Divider Internal Leakage Check	12.26
12.720	Injection Nozzle Comparative Flow Check	12.27
12.730	Pressure Relief Valve Leakage Check	12.27

CHAPTER 13 – INSTRUMENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
13.000	Instruments	13.1
13.001	Introduction	13.1
13.002	Description	13.1
13.100	Pitot-Static System	13.1
13.200	Flight Instruments	13.1
13.210	Airspeed Indicator	13.1
13.211	Pitot Line Leak Test	13.3
13.220	Altimeter	13.3
13.221	Static Line Leak Test	13.4
13.230	Vertical Speed Indicator	13.5
13.240	Outside Air Temperature (OAT)	13.5
13.300	Drive Train and Powerplant Instruments	13.5
13.310	Engine - Rotor Tachometer	13.5
13.320	Manifold Pressure Gauge	13.6
13.330	Carburetor Air Temperature	13.6
13.340	Engine Instrument Cluster	13.6
13.341	Oil Pressure Gauge	13.6
13.342	Oil Temperature Gauge	13.6
13.343	Cylinder Head Temperature Gauge	13.6

CONTENTS

CHAPTER 13 – INSTRUMENTS (Continued)

<u>Section</u>	<u>Title</u>	<u>Page</u>
	13.344 Fuel Quantity Gauge	13.6
	13.345 Ammeter	13.7
13.400	Trouble-Shooting Guide	13.7
13.500	Optional Equipment	13.9
	13.510 Aspen PFD and MFD Installations	13.9

CHAPTER 14 – ELECTRICAL AND AVIONICS SYSTEMS

<u>Section</u>	<u>Title</u>	<u>Page</u>
14.000	Electrical and Avionics Systems	14.1
	14.001 Introduction	14.1
	14.002 Description	14.1
14.100	Dual Tachometer Adjustment	14.3
14.200	Low RPM Warning Unit Adjustment	14.3
14.300	Police and Electronic News Gathering (E.N.G.) Version Equipment	14.3
	14.310 (Nucomm) HD Microwave System	14.3A
	14.311 (Nucomm) HD Microwave System - Controller	14.3A
	14.312 (Nucomm) HD Microwave System - Transmitter	14.3A
	14.313 (Nucomm) HD Microwave System - Pod Antenna	14.3B
	14.314 (Nucomm) HD Microwave System - Power Amp	14.3B
	14.320 (Vislink) HD Microwave System	14.3C
	14.321 (Vislink) HD Microwave System - Control Panel	14.3C
	14.322 (Vislink) HD Microwave System - L1600 Encoder Transmitter	14.3C
	14.323 (Vislink) HD Microwave System - Pod Antenna	14.3D
	14.324 (Vislink) HD Microwave System - Power Amp	14.3D
	14.330 Geneva Audio System	14.3E
	14.331 Geneva Audio System - Pilot Audio Panel	14.3E
	14.332 Geneva Audio System - Co-pilot Audio Panel	14.3E
	14.333 Geneva Audio System - Aft Audio Panels	14.3F
	14.334 Geneva Audio System - Router	14.3G
	14.335 Geneva Audio System - Transmit Switch	14.3I
14.400	Troubleshooting	14.3J
	14.405 A569 Low Rotor RPM Warning Unit	14.3J
	14.410 Electrical Trouble-Shooting	14.4
	14.420 Instrument Trouble-Shooting	14.9
	14.430 Clutch Actuator Electrical Trouble-Shooting	14.7
	14.440 Electrically Powered Instruments Accuracy Check	14.12
14.500	Electrical Load Analysis	14.15
14.600	Electrical System Schematics	14.17
14.700	Electric Trim System	14.21
	14.710 Trim Controller Adjustment	14.21
	14.720 Trim System Electrical Trouble-Shooting	14.22C
14.800	Antenna Locations	14.25
14.900	Avionics Schematics	14.27
14.1000	Avionics for R44 Helicopter S/N 2363 & Subsequent and R44 II Helicopter S/N 13697, 13698, 13702, 13705 & Subsequent	14.41
	14.1010 C024 Electrical System Installation	14.41

CONTENTS**CHAPTER 14 — ELECTRICAL AND AVIONICS SYSTEMS (Continued)**

<u>Section</u>	<u>Title</u>	<u>Page</u>
14.1020	C036 Electrical Components Installation	14.41
14.1030	C058 Cyclic Grip Assembly	14.49
14.1040	C800 Aspen PFD and MFD Installations	14.49
14.1050	C802-2 COM Radio (Garmin GTR 225B) Installation	14.51
14.1060	C803-1 ADS-B (Garmin GDL 88) Installation	14.53
14.1070	C804-15 Transponder (Garmin GTX 330 ES) Installation	14.55
14.1080	C822-2 Audio Control (Garmin GMA 350H) Installation	14.57
14.1090	C831 GPS (Garmin GTN 600/700 series) Installation	14.59

CHAPTER 15 — FURNISHINGS

<u>Section</u>	<u>Title</u>	<u>Page</u>
15.000	Description	15.1
15.100	Seat Harnesses	15.3
15.110	Four-Point Harness Assembly	15.4
15.200	Seat and (Aft) Seat Back Assemblies	15.5
15.210	Back Rest Assembly Replacement	15.5
15.300	Carpet	15.7
15.310	Forward Cabin Floor Carpet	15.7
15.320	Adhered Carpet	15.7
15.400	Insulation and Headliner Replacement	15.7
15.500	Miscellaneous Furnishings	15.8
15.510	Pilot's Operating Handbook (POH) Strap Replacement	15.8
15.520	License Holder Replacement	15.8
15.530	Map Pocket Replacement	15.8
15.600	Emergency Equipment	15.8
15.610	Emergency Locator Transmitter (ELT)	15.8
15.620	Fire Extinguisher	15.10

CHAPTER 16 — SPECIAL TOOLS

<u>Section</u>	<u>Title</u>	<u>Page</u>
16.000	Special Tools	16.1

CHAPTER 17 — REVISION LOG

<u>Section</u>	<u>Title</u>	<u>Page</u>
—	Revision Log	17.1