

APPENDIX A  
ALPHABETICAL INDEX

<i>Figure</i>	<i>Title</i>	<i>Page</i>
—	Alphabetical Index . . . . .	A3

Intentionally Blank

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Accessory Bars Installation . . . . .	96.33	Antenna – DME . . . . .	6.5	Bearing – Teeter Hinge . . . . .	62.7
Accessory Mount . . . . .	96.33	Antenna – DME . . . . .	6.7	Bellcrank Assembly . . . . .	67.41
Adapter – Oil Filter . . . . .	79.7	Antenna – ELT (Kannad) . . . . .	6.13	Bellcrank Assembly . . . . .	76.2
ADF Indicator . . . . .	95.39	Antenna – ELT (Kannad) . . . . .	6.15	Bellcrank Assembly . . . . .	76.17
ADF/Marker Beacon Antennas . . . . .	6.11	Antenna – GPS . . . . .	6.17	Belly Antennas . . . . .	6.3
Aft Battery Installation . . . . .	96.1	Antenna – GPS . . . . .	6.21	Belly, Lower Exterior . . . . .	6.1
Aft Battery Relay Upgrade Kit . . . . .	96.2	Antenna – GPS . . . . .	6.23	Belt – Alternator . . . . .	71.1
Air Box Assembly . . . . .	71.5	Antenna – Loran . . . . .	6.19	Belt – Alternator . . . . .	71.23
Air Box Assembly . . . . .	71.9	Antenna – Marker Beacon . . . . .	6.11	Belt – Alternator . . . . .	99.2
Air Box Assembly . . . . .	71.13	Antenna – NAV . . . . .	6.9	Belt Tension Actuator . . . . .	63.19
Air Filter . . . . .	71.6	Antenna – Transponder . . . . .	6.5	Belt Tension Actuator Fuse Holder . . . . .	63.20
Air Filter . . . . .	71.10	Antenna – Transponder . . . . .	97.14	Beta 2200-Hour Overhaul Kit . . . . .	99.11
Air Filter . . . . .	71.14	Antenna – UHF . . . . .	6.3	Beta II 2200-Hour Overhaul Kit . . . . .	99.7
Air Filter . . . . .	99.3	Antenna – VHF . . . . .	6.3	Bladder Tank – Auxiliary . . . . .	28.9
Air Induction System . . . . .	71.5	Antenna – VHF . . . . .	6.5	Bladder Tank – Main . . . . .	28.5
Air Induction System . . . . .	71.9	Antenna – VHF . . . . .	6.21	Bladder Tank Fuel System . . . . .	28.1
Air Induction System . . . . .	71.13	Antenna – VHF . . . . .	6.23	Blind Encoder . . . . .	97.13
Air Temperature Gage . . . . .	97.1	Antenna – VHF COM . . . . .	6.25	Blind Encoder – Solid State . . . . .	97.17
Airspeed Indicator . . . . .	95.1	Antenna – VHF/GPS . . . . .	6.17	Block Assembly – Float . . . . .	9.3
Airspeed Indicator . . . . .	95.25	Antenna – VHF/GPS . . . . .	6.21	Blocks – Main Rotor Rigging . . . . .	99.37
Airspeed Indicator . . . . .	95.39	Antenna – VHF/GPS . . . . .	6.23	Blower Assembly . . . . .	21.3
Airspeed Indicator . . . . .	95.43	Arm Assembly – Carb Heat . . . . .	76.17	Blower Assembly . . . . .	21.10
Airspeed Indicator . . . . .	99.19	Attitude Indicator . . . . .	95.26	Bolt – Main Rotor Hub . . . . .	62.5
Alternator . . . . .	71.23	Attitude Indicator . . . . .	95.39	Bolt – Main Rotor Hub . . . . .	62.7
Alternator . . . . .	71.24	Attitude Indicator Inst'l Kit . . . . .	99.23	Bolt – Main Rotor Hub . . . . .	99.3
Alternator . . . . .	99.19	Attitude Indicator Inst'l Kit . . . . .	99.33	Bolt – MT556-1 Tool . . . . .	99.39
Alternator Belt . . . . .	71.1	Audio Control . . . . .	97.1	Brace Assembly . . . . .	52.7
Alternator Belt . . . . .	71.23	Auxiliary Fuel Cowling . . . . .	53.5	Bracket – Magnetic Pickup . . . . .	67.29
Alternator Belt . . . . .	99.2	Auxiliary Fuel System . . . . .	28.19	Buckle Half . . . . .	25.1
Alternator Belt . . . . .	99.17	Auxiliary Fuel Tank . . . . .	28.9	Bus Bar . . . . .	96.11
Alternator Control Unit . . . . .	96.15	Auxiliary Fuel Tank . . . . .	28.19	Button – Red Clutch Breaker . . . . .	96.11
Alternator Control Unit . . . . .	96.16	Baggage Compartment Covers . . . . .	25.13	Cabin Heat System . . . . .	21.3
Altimeter . . . . .	95.1	Balance Strip . . . . .	62.1	Cabin Heat System . . . . .	21.7
Altimeter . . . . .	95.25	Balance Strip . . . . .	62.3	Cabin Heat System . . . . .	21.9
Altimeter . . . . .	95.39	Ball – Ground Handling . . . . .	9.5	Cabin Heat Valve Assembly . . . . .	21.4
Altimeter . . . . .	95.43	Ballast . . . . .	8.1	Cabin Heat Valve Assembly . . . . .	21.9
Altimeter . . . . .	95.61	Ballast – HID Landing Lights . . . . .	33.9	Cabin Ventilation . . . . .	21.1
Altimeter . . . . .	99.19	Battery . . . . .	96.2	Cable Assembly – Battery . . . . .	96.2
Ammeter . . . . .	95.5	Battery . . . . .	96.5	Cable Assembly – Battery . . . . .	96.5
Ammeter . . . . .	95.47	Bearing Assembly . . . . .	63.11	Cable Assembly – Strobe . . . . .	53.17
Amplifier – Siren . . . . .	90.12	Bearing – Coning Hinge . . . . .	62.5	Call Letters Plate . . . . .	11.1
Anchor – Seat Belt Harness . . . . .	25.9	Bearing – Coning Hinge . . . . .	62.7	Call Letters Plate . . . . .	95.1
Angle – Rotor Brake . . . . .	63.7	Bearing – Teeter Hinge . . . . .	62.5	Call Letters Plate . . . . .	95.26
Antenna – ADF . . . . .	6.11				

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Call Letters Plate . . . . .	95.44	Console Assembly – Upper . . . . .	95.25	Door Assembly – Tinted . . . . .	52.1
Cap – Auxiliary Fuel Tank . . . . .	28.9	Console Assembly – Upper . . . . .	95.33	Door Jamb – Doubler Instl . . . . .	52.8
Cap – Auxiliary Fuel Tank . . . . .	28.19	Console Assembly – Upper . . . . .	95.35	Drain – Firewall . . . . .	28.1
Cap – Fuel Tank . . . . .	28.5	Controller – Governor . . . . .	96.21	Drain – Firewall . . . . .	28.16
Cap – Fuel Tank . . . . .	28.15	Cooling System . . . . .	71.19	Drain – Firewall . . . . .	28.20
Cap – MT556-6 Tool . . . . .	99.39	Cotter Pin – Cooling Fan Hub . . . . .	71.21	Drain Plug and Chip Detector . . . . .	63.2
Carb Air Temp Probe . . . . .	95.57	Cotter Pin – Main Rotor Hub . . . . .	62.5	Drain Plug and Chip Detector . . . . .	65.7
Carb Heat Assist . . . . .	76.9	Cotter Pin – Main Rotor Hub . . . . .	62.7	Drain Plug and Chip Detector . . . . .	65.11
Carb Heat Assist . . . . .	76.13	Cover – Cross Tube . . . . .	6.1	Drive System . . . . .	63.11
Carb Heat Assist Bellcrank . . . . .	76.17	Cover – Pedals . . . . .	67.42	Droop Stop . . . . .	62.5
Carb Heat Control . . . . .	76.1	Cover – Tuna Boat . . . . .	10.3	Droop Stop . . . . .	62.7
Carb Heat Control . . . . .	76.6	Cover – Windshield . . . . .	10.3	Droop Stop . . . . .	99.1
Carb Heat Control . . . . .	76.10	Cowling . . . . .	53.5	Dual Tach Installation Kit . . . . .	99.31
Carb Heat Control . . . . .	76.13	Cowling . . . . .	53.7	Dual Tachometer . . . . .	99.20
Carbon Monoxide Detector . . . . .	96.27	Cradle Assembly – Blade . . . . .	10.9	Elastic Cord – Cyclic . . . . .	67.4
Carpet Assembly . . . . .	25.2	Cyclic Control System . . . . .	67.1	Elbow – Pitot/Static Line . . . . .	95.61
Carpet Assembly . . . . .	25.3	Cyclic Control System . . . . .	67.11	Electrical Circuit Breaker Panel . . . . .	96.11
Chadwick-Helmuth Balancing System . . . . .	18.5	Cyclic Friction Assembly . . . . .	67.15	Electrical Components . . . . .	96.15
Chin . . . . .	6.1	Cyclic Spring Assembly . . . . .	67.17	Electrical Wire Harness . . . . .	96.19
Chip Detector – MRGB . . . . .	63.2	Cylinder Head Temp Meter . . . . .	95.47	ELT Installation – Kannad . . . . .	25.19
Chip Detector – TRGB . . . . .	65.7	Cylinder Head Temp Probe . . . . .	95.57	ELT Installation – Kannad . . . . .	25.23
Chip Detector – TRGB . . . . .	65.11	Cylinder Head Temp Probe . . . . .	99.1	ELT Installation – Pointer . . . . .	25.25
Circuit Breaker . . . . .	96.11	Damper Assembly . . . . .	65.1	Empennage Assembly . . . . .	53.25
Clamp Assembly . . . . .	10.9	Damper Assembly . . . . .	65.5	Engine Controls . . . . .	76.5
Clock Assembly – Analog . . . . .	95.31	Damper Conversion Kit . . . . .	53.22	Engine Hoist . . . . .	99.35
Clock Assembly – Analog . . . . .	95.48	Damper Conversion Kit . . . . .	65.2	Engine Installation . . . . .	71.1
Clock Assembly – Digital . . . . .	95.48	Damper Installation . . . . .	67.1	Engine Instrument Senders . . . . .	95.57
Clock Assembly – Digital . . . . .	95.55	Damper Installation . . . . .	67.12	Engine Operator’s Manual . . . . .	99.35
Clutch Assembly . . . . .	63.11	Decal – Torquing Instructions . . . . .	99.35	Engine/Rotor Tachometer . . . . .	95.1
Clutch Assembly . . . . .	63.15	Decals . . . . .	11.1	Engine/Rotor Tachometer . . . . .	95.25
Clutch Assembly . . . . .	63.17	Deviation Card . . . . .	95.44	Engine/Rotor Tachometer . . . . .	95.39
Cobalt Drill Bit . . . . .	99.37	Dial Indicator . . . . .	99.35	Engine/Rotor Tachometer . . . . .	95.43
Collective Activated Switches . . . . .	96.25	Dial Indicator . . . . .	99.37	Engine/Rotor Tachometer . . . . .	95.51
Collective Control Assembly . . . . .	67.21	Diplexer – Dual . . . . .	6.9	Extension Bar . . . . .	99.35
Collective Spring Retainer . . . . .	99.37	Diplexer – Single . . . . .	6.9	Fairing . . . . .	53.5
Collective Stick Assembly . . . . .	67.21	Directional Gyro . . . . .	95.26	Fairing . . . . .	53.7
Collective Stick Assembly . . . . .	76.7	Directional Gyro . . . . .	95.53	Fan Puller . . . . .	99.35
Collective Stick Assembly . . . . .	76.14	Directional Gyro Inst’l Kit . . . . .	99.23	Fanshaft and Bearing Assembly . . . . .	63.12
COM Antenna Installation Kit . . . . .	6.25	Directional Gyro Inst’l Kit . . . . .	99.33	Fanshaft and Bearing Assembly . . . . .	71.21
Compass Assembly . . . . .	95.44	DME Indicator . . . . .	6.7	Fire Extinguisher Inst’l . . . . .	25.15
Compass Assembly – Vertical Card . . . . .	95.44	DME Indicator . . . . .	95.39	Fire Extinguisher Inst’l . . . . .	25.17
Console Assembly – Lower . . . . .	25.9	DME Installation . . . . .	6.7	Firewall, Horizontal . . . . .	53.13
Console Assembly – Upper . . . . .	95.1	Door Assembly – Clear . . . . .	52.1		
Console Assembly – Upper . . . . .	95.13				

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Fitting Assembly		Ground Wire Assembly . . . . .	32.6	Lamp – Panel . . . . .	95.39
– Main Rotor Blade Air Bleed . . . . .	99.35	Guide – Push-Pull Tubes . . . . .	67.27	Lamp – Panel . . . . .	95.47
Float Gauge and Fill Gun Kit . . . . .	32.10	Hall Effect Sender Assembly . . . . .	63.2	Lamp – Panel . . . . .	96.11
Float Repair Kit . . . . .	32.10	Hardpoint/Tie-Down . . . . .	10.7	Lamp – Position . . . . .	33.5
Float Stabilizer Assembly . . . . .	53.27	Harness – Chip Detector . . . . .	63.2	Lamp – Searchlight . . . . .	90.7
Float Tube Assembly . . . . .	32.9	Helicopter Lifting Fixture . . . . .	99.37	Lamp – Spotlight . . . . .	33.15
Floor, Panel . . . . .	25.9	HID Landing Lights . . . . .	33.9	Landing Gear Assembly . . . . .	32.1
Floor Transmit Switch . . . . .	96.31	Holder – Engine Ring Gear . . . . .	99.35	Landing Gear Assembly . . . . .	32.5
Flux Gate Installations . . . . .	97.19	Horizontal Firewall . . . . .	53.13	License Holder . . . . .	25.2
FM/DME/Transponder Antenna . . . . .	6.5	Horizontal Stabilizer Rigging Tool . . . . .	99.35	Loran Antennas . . . . .	6.19
Foam Insulation . . . . .	25.1	Horn – Low RPM Warning . . . . .	95.1	Low RPM Warning Unit Kit . . . . .	95.51
Forward Tailcone Antennas . . . . .	6.21	Horn – Low RPM Warning . . . . .	95.9	Lower Instrument Panel . . . . .	95.47
Frame Assembly – Lower . . . . .	53.9	Hose – Fuel . . . . .	28.16	Lower Panel	
Frame Assembly – Skid Mount . . . . .	9.5	Hose – Oil Pressure . . . . .	79.1	– Seven Instrument Console . . . . .	95.29
Frame Assembly – Upper . . . . .	53.9	Hourmeter . . . . .	96.25	Lubricants . . . . .	12.1
Fuel Drain Valve Assembly . . . . .	28.17	ICOM 2 Meter FM Transceiver . . . . .	10.9	Magnetic Azimuth Transmitter . . . . .	97.19
Fuel Drain Valve Assembly . . . . .	28.20	ICOM Marine VHF Transceiver . . . . .	10.9	Magneto . . . . .	96.16
Fuel Mixture Control . . . . .	76.10	Ignition Switch . . . . .	95.1	Main Rotor and Spindle Assembly . . . . .	62.1
Fuel Primer and Lines Inst'l . . . . .	28.23	Ignition Switch . . . . .	95.29	Main Rotor and Spindle Assembly . . . . .	62.3
Fuel Quantity Meter . . . . .	95.47	Ignition Wire Harness . . . . .	96.16	Main Rotor Blade Assembly . . . . .	62.1
Fuel System . . . . .	28.1	Instrument Cluster Assembly . . . . .	95.47	Main Rotor Blade Assembly . . . . .	62.3
Fuel Tank Assembly . . . . .	28.5	Intercom System Control Unit . . . . .	97.10	Main Rotor Blade Support . . . . .	10.9
Fuel Tank Vent Upgrade Kit . . . . .	28.17	Intercom System Unit . . . . .	97.1	Main Rotor Blade Tie-Downs . . . . .	10.1
Fuse – Belt Tension Actuator . . . . .	63.20	Interior Furnishings . . . . .	25.1	Main Rotor Blade Trim Tab Bender . . . . .	99.35
Fuse – Belt Tension Actuator . . . . .	95.57	Interrupter . . . . .	67.34	Main Rotor Bolt Stretch Tool . . . . .	99.35
Fuse – Nose Battery . . . . .	96.5	Interrupter – Magnetic Pickup . . . . .	67.33	Main Rotor Gearbox and Mast Assembly . . . . .	63.1
Gage – OAT . . . . .	97.1	Jackshaft Assembly . . . . .	67.21	Main Rotor Gearbox Drain Valve Tool . . . . .	99.35
Gasket – Gascolator . . . . .	28.17	Journal – Bearing . . . . .	62.5	Main Rotor Gearbox Installation . . . . .	63.5
Gasket – Muffler . . . . .	71.17	Journal – Bearing . . . . .	62.7	Main Rotor Hub and Bearings . . . . .	62.5
Governor Assembly . . . . .	96.21	Journal – Bearing . . . . .	99.1	Main Rotor Hub and Bearings . . . . .	62.7
GPS Antennas . . . . .	6.17	Kannad – ELT . . . . .	25.19	Main Rotor Tracking Tape (tip targets) . . . . .	18.5
GPS/NAV/COM . . . . .	97.5	Kannad – ELT . . . . .	25.23	Main Rotor Trim Tab Measuring Tool . . . . .	99.37
Grip – Collective . . . . .	67.22	Key – Door . . . . .	52.3	Maintenance Tools . . . . .	99.35
Grip – Cyclic . . . . .	67.1	Key – Ignition . . . . .	95.48	Maintenance Tools . . . . .	99.37
Grip – Cyclic . . . . .	67.7	Key – Swashplate . . . . .	67.33	Maintenance Tools . . . . .	99.39
Grip – Cyclic . . . . .	67.11	Lamp – HID Landing Light . . . . .	33.9	Mandrel Assembly . . . . .	99.37
Grip – Ground Handling Wheel . . . . .	9.1	Lamp – Landing Light . . . . .	33.11	Mandrel Assembly . . . . .	99.39
Grip – Searchlight . . . . .	90.1	Lamp – Panel . . . . .	95.1	Manifold Pressure Gauge . . . . .	95.1
Grip – Searchlight . . . . .	90.7	Lamp – Panel . . . . .	95.25	Manifold Pressure Gauge . . . . .	95.25
Grip Assembly – Cyclic . . . . .	67.1	Lamp – Panel . . . . .	95.29	Manifold Pressure Gauge . . . . .	95.39
Grip Assembly – Cyclic . . . . .	67.7	Lamp – Panel . . . . .		Manifold Pressure Gauge . . . . .	95.43
Grip Assembly – Cyclic . . . . .	67.11			Manifold Pressure Gauge . . . . .	95.57
Ground Handling Wheel . . . . .	9.1				
Ground Handling Wheel – Float . . . . .	9.3				

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Mariner Accessories . . . . .	10.9	Pedal Assembly . . . . .	67.41	Scuff Plate Assembly . . . . .	25.2
Marker Beacon . . . . .	95.39	Pictorial Nav Indicator . . . . .	95.39	Scuff Plate Assembly . . . . .	25.3
Markings and Decals . . . . .	11.1	Pictorial Nav Indicator . . . . .	95.53	Scuff Plate Assembly . . . . .	25.6
Mast Fairing . . . . .	53.3	Pictorial Navigation System . . . . .	95.53	Seal – Cabin Door . . . . .	52.1
Master Radio Relay . . . . .	96.15	Pin – Fanwheel . . . . .	71.21	Searchlight Installation . . . . .	90.7
Minimum Spare Parts Kit . . . . .	99.1	Pin – Fanwheel . . . . .	99.3	Searchlight Inst'l – Peak Beam . . . . .	90.1
Mixture Control . . . . .	76.7	Pitch Link Assembly . . . . .	67.33	Seat Back Assembly . . . . .	25.1
Mixture Control . . . . .	76.10	Pitot/Static Lines Installation . . . . .	95.61	Seat Back Assembly . . . . .	25.5
Mixture Control . . . . .	76.14	Placards and Marking . . . . .	11.1	Seat Bottom Assembly . . . . .	25.1
Mount – MAP Limits Decal . . . . .	11.3	Plate – Ballast . . . . .	8.1	Seat Bottom Assembly . . . . .	25.5
Muffler Assembly . . . . .	71.17	Plate – Fuel Valve . . . . .	11.2	Seat Harness Assembly . . . . .	25.1
Mu-metal . . . . .	97.19	Plug – Tool . . . . .	99.39	Seat Harness Assembly . . . . .	25.5
Name Plate . . . . .	95.48	Pointer ELT Installation . . . . .	25.25	Seat Hinge . . . . .	25.1
NAV Antenna Installation . . . . .	6.9	Position Light Assembly . . . . .	33.5	Seat Hinge . . . . .	25.5
Nose Battery Installation . . . . .	96.5	Post Light . . . . .	95.25	Seat Support Assembly . . . . .	25.9
Nose Battery Relay Installation . . . . .	96.9	Post Light . . . . .	95.30	Sender – Fuel Quantity . . . . .	28.7
Oil – Gear . . . . .	63.3	Post Light . . . . .	95.39	Sender – Fuel Quantity . . . . .	28.10
Oil – Main Rotor Blade . . . . .	62.1	Post Light . . . . .	95.43	Sender – Fuel Quantity . . . . .	28.15
Oil – Main Rotor Blade . . . . .	62.3	Post Light . . . . .	95.48	Sender – Fuel Quantity . . . . .	28.20
Oil Cooler . . . . .	79.1	Pressing Tool . . . . .	99.35	Sheave Alignment Bar . . . . .	99.37
Oil Cooler . . . . .	79.5	Pressure Fixture . . . . .	99.35	Shell Assembly (six-hole) . . . . .	95.1
Oil Filter . . . . .	79.7	Punch . . . . .	99.37	Shell Assembly (ten-hole) . . . . .	95.35
Oil Filter Adapter . . . . .	79.7	Push-Pull Tube Assembly . . . . .	67.21	Shim – Engine Alignment . . . . .	71.1
Oil Filter Installation . . . . .	79.7	Push-Pull Tube Assembly . . . . .	67.41	Shim – Main Rotor Gearbox . . . . .	63.5
Oil Pressure Meter . . . . .	95.5	Rate-of-Climb Indicator . . . . .	95.1	Shim – Main Rotor Hub . . . . .	62.5
Oil Pressure Meter . . . . .	95.47	Rate-of-Climb Indicator . . . . .	95.25	Shim – Main Rotor Hub . . . . .	62.7
Oil Pressure Sender . . . . .	95.57	Rate-of-Climb Indicator . . . . .	95.39	Shim – Main Rotor Hub . . . . .	99.1
Oil Pressure Switch . . . . .	95.57	Rate-of-Climb Indicator . . . . .	95.43	Shipping Crates . . . . .	99.41
Oil System . . . . .	79.1	Reamer . . . . .	99.37	Shipping Crates . . . . .	99.43
Oil System . . . . .	79.5	Relay – Aft Battery . . . . .	96.1	Shroud Assembly – Muffler . . . . .	21.3
Oil Temperature Meter . . . . .	95.5	Relay – Starter . . . . .	95.15	Shroud Assembly – Muffler . . . . .	21.9
Oil Temperature Meter . . . . .	95.47	Removable Pedal Locking Pin Inst'l Kit . . . . .	67.42	Shunt – Ammeter . . . . .	96.15
Oil Temperature Sender . . . . .	95.58	Restraint Assembly . . . . .	53.3	Siren Speaker . . . . .	90.11
O-Ring – Chip Detector . . . . .	63.1	Rotor Brake . . . . .	63.7	Skid Shoe . . . . .	32.1
Over-Temp Switch . . . . .	63.2	RPM Governor Installation . . . . .	96.22	Skid Shoe . . . . .	32.5
Overtravel Spring . . . . .	76.1	RPM Governor Upgrade Inst'l Kit . . . . .	96.23	Skid Shoe . . . . .	32.9
Overtravel Spring . . . . .	76.5	Screen – Gascolator . . . . .	28.17	Skid Shoe . . . . .	99.2
P.A./Siren Control . . . . .	90.12	Screw – Main Rotor Blade . . . . .	62.1	Skid Tube Assembly . . . . .	32.1
P.A./Siren Installation . . . . .	90.11	Screw – Main Rotor Blade . . . . .	62.3	Skid Tube Assembly . . . . .	32.5
Panel – Center Belly . . . . .	6.1	Screw – Tool . . . . .	99.37	Skirt Assembly . . . . .	53.1
Panel – Floor . . . . .	25.9	Scroll Set . . . . .	71.19	Slaving Accessory . . . . .	95.53
				Sleeve – Push-Pull Tube . . . . .	67.21
				Socket . . . . .	99.35
				Solid-State Blind Encoder . . . . .	97.17

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Spacer – Fan Puller . . . . .	99.35	Tail Light Assembly . . . . .	33.7	Upper Console . . . . .	95.1
Spacer – Swashplate . . . . .	67.37	Tail Light Assembly . . . . .	53.25	Upper Console . . . . .	95.25
Spacer Blocks		Tail Rotor Assembly . . . . .	64.1	Upper Console . . . . .	95.33
– Swashplate Rigging . . . . .	99.35	Tail Rotor Assembly . . . . .	64.3	Upper Console . . . . .	95.43
Spark Plug . . . . .	96.17	Tail Rotor Blade . . . . .	64.3	Upper Panel	
Spindle Assembly . . . . .	62.1	Tail Rotor Blade – Round Tip . . . . .	64.1	– Ten Instrument/IFR Trainer . . . . .	95.39
Spindle Assembly . . . . .	62.3	Tail Rotor Blade Installation . . . . .	64.1	USB Port . . . . .	96.33
Spot Facing Tool . . . . .	99.37	Tail Rotor Control System . . . . .	67.41		
Spotlight – Incandescent . . . . .	33.15	Tail Rotor Drive Shaft . . . . .	65.1	Vega Radar Transponder . . . . .	10.9
Spotlight – LED . . . . .	33.13	Tail Rotor Drive Shaft Runout Tool . . . . .	99.37	Vertical Firewall Doubler Kit . . . . .	99.29
Spring – Collective . . . . .	67.23	Tail Rotor Elastomeric Bearing		VHF COM Receiver . . . . .	97.9
Spring – Cyclic . . . . .	67.17	Removal and Installation Tool . . . . .	99.39	VHF NAV/COM Transceiver . . . . .	95.53
Spring – Mixture Control . . . . .	76.7	Tail Rotor Gearbox . . . . .	65.7	VOR Indicator . . . . .	95.39
Spring Scale . . . . .	99.37	Tail Rotor Gearbox . . . . .	65.11	VOR Indicator . . . . .	97.9
Stabilizer – Horizontal . . . . .	53.25	Tail Rotor Gearbox Output Shaft		Warning Light – Alternator, Brake,	
Stabilizer – Lower Vertical . . . . .	53.25	Removal/Inst'l Tool . . . . .	99.37	and "GOV OFF" . . . . .	95.29
Stabilizer – Upper Vertical . . . . .	53.25	Tail Rotor Guard Kit . . . . .	53.22	Warning Light – Amber . . . . .	95.1
Starter – B & C . . . . .	71.24	Tail Rotor Hub Assembly . . . . .	64.1	Warning Light – Oil Pressure . . . . .	95.29
Starter – Kelly Aerospace . . . . .	71.27	Tail Rotor Hub Assembly . . . . .	64.3	Warning Light – Red . . . . .	95.1
Starter – Sky-Tec . . . . .	71.29	Tailcone Antennas . . . . .	6.21	Warning Unit – Low RPM . . . . .	95.9
Starting Vibrator . . . . .	96.15	Tailcone Antennas . . . . .	6.23	Warning Unit – Low RPM . . . . .	95.31
Stop – Rudder Pedal . . . . .	25.10	Tailcone Antennas . . . . .	6.25	Warning Unit – Low RPM . . . . .	95.51
Strip – Safety Walk . . . . .	53.10	Tailcone Assembly . . . . .	53.17	Windshields . . . . .	52.5
Strobe Light – Head Assembly . . . . .	33.1	TEC Aces Balancing System . . . . .	18.1		
Strobe Power Supply . . . . .	96.29	Teeter Moment Tool . . . . .	99.37	Yarn . . . . .	52.5
Strut – Clutch Lateral Centering . . . . .	63.11	Teeter Stop . . . . .	62.5	Yaw String . . . . .	52.5
Strut – Landing Gear . . . . .	32.1	Teeter Stop . . . . .	62.7	Yoke Conversion Kit . . . . .	63.9
Strut – Landing Gear . . . . .	32.5	Telatemp . . . . .	11.4	Yoke Half Assembly . . . . .	67.29
Strut – Welded Frame . . . . .	53.9	Telatemp . . . . .	63.1	Yoke Half Assembly . . . . .	67.34
Support – Tail Rotor Bellcrank . . . . .	67.42	Telatemp . . . . .	63.11		
Support – Tool . . . . .	99.39	Telatemp . . . . .	65.7		
Swashplate Assembly . . . . .	67.29	Telatemp . . . . .	65.11		
Swashplate Assembly . . . . .	67.33	Telatemp . . . . .	99.1		
Swashplate Ball Installation . . . . .	67.37	Terminal Block Assembly . . . . .	97.1		
Switch – Alternator & Strobe . . . . .	95.29	Test Switches . . . . .	95.57		
Switch – Battery . . . . .	95.29	Tie-Down Installation . . . . .	10.5		
Switch – Clutch . . . . .	95.29	Transceiver . . . . .	97.5		
Switch – Ignition . . . . .	95.29	Transponder . . . . .	97.1		
Switch – Intercom . . . . .	67.1	Transponder . . . . .	97.9		
Switch – Nav Lights . . . . .	95.29	Transponder . . . . .	97.13		
Switch – Test . . . . .	95.57	Transponder and Blind Encoder . . . . .	97.13		
		Trim String . . . . .	52.5		
Tachometer and Low RPM		Tunnel . . . . .	6.1		
Warning Unit . . . . .	95.51	Turn Coordinator . . . . .	95.26		
Tachometer Filter Assembly . . . . .	99.31	Turn Coordinator . . . . .	95.39		

Intentionally Blank